

Operating Instructions For e-pill Multi-Alarm

To activate, remove clear plastic tab and insert paper clip in **RESET** on back of unit. Remove film on switch panel.

Alarm Settings

- Slide switches to the **ON** position to correspond with med times.
- For half hour settings, slide the corresponding half hour switch only.
- Alarm will sound at intervals for 10 minutes.
- Depress **STOP** to silence alarm.

Time Settings

- Press **SET** to enter time setting mode (hour blinking).
- Press **HOUR / MIN** to set hour and AM / PM.
- Press **SET** to finish hour setting (minute digits blinking).
- Press **HOUR / MIN** to set minute.
- Press **SET** to finish time setting.

Battery Replacement

- Use 2 button cells, G-10, 1.5 volt batteries.
- Replace when display is dim or every 12 months.

- Remove single screw on the battery case.
- Place batteries with positive (flat side) facing up.
- Replace cover and tighten screw.
- Press **RESET** button using the end of a paper clip.

DISCLAIMER: E-PILL, LLC DISCLAIMS ALL WARRANTIES FOR THE USE OF THE E-PILL MULTI-ALARM INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. E-PILL, LLC'S LIABILITY SHALL IN NO CIRCUMSTANCES EXCEED THE AMOUNTS PAID BY THE USER FOR THE TIMER. NO CLAIM FOR DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, INDIRECT OR CONSEQUENTIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE E-PILL MULTI-ALARM SHALL BE CHARGEABLE TO E-PILL, LLC WHETHER FOR LOSS OF PROFIT, INJURY, NEGLIGENCE, PRODUCTS LIABILITY, OR OTHERWISE.

e-pill, LLC

Medication Reminders
70 Walnut Street
Wellesley, MA 02481, USA

800.549.0095 • 781.239.8255

www.epill.com