



MATCHING INSTRUCTIONS

MATCHING A TRI-TRONICS EXP COLLAR
OR VICEBREAKER COLLAR TO YOUR SYSTEM

Published by Tri-Tronics®, Inc., Tucson, Arizona
Copyright © 2010 Tri-Tronics®, Inc.
All rights reserved. Printed in the USA

COMPATIBLE MODELS

Field 90 G2, Field 90 G2 EXP and Field 90 G3 EXP
Classic 70 G2, Classic 70 G2 EXP, Classic 70 G3 and
Classic 70 G3 EXP

Pro 100 G2, Pro 100 G2 EXP and Pro 100 G3 EXP

Pro 200 G2, Pro 200 G2 EXP and Pro 200 G3 EXP

Pro 500 G2, Pro 500 G2 EXP and Pro 500 G3 EXP

Flyway G2, Flyway G2 EXP and Flyway G3 EXP

Upland G2, Upland G2 EXP and Upland SP G3 EXP

Trashbreaker G2 and Trashbreaker G2 EXP and

Trashbreaker G3 EXP

Sport Junior G3

Sport 50 G2, Sport 60 G2 and Sport 65 BPR G2

Sport 80C G2 and Sport 80M G2

Sport Basic G3, Sport Combo G3 and Sport Upland G3

Multi Sport-2 G2 and Multi Sport-3 G2

ViceBreaker® H2 EXP

ALL PRODUCT NAMES ARE REGISTERED TRADEMARKS OF TRI-TRONICS, INC.

VISIT OUR WEBSITE

www.TriTronics.com

www.TTHorse.com

FOR CUSTOMER SUPPORT & TO ORDER

Visit our website

or call 1-800-456-4343 for dog collars

& 1-800-808-8423 for ViceBreaker®



Tri-Tronics P.O. Box 17660 Tucson, AZ 85731

MATCHING A COLLAR TO YOUR SYSTEM

Please read all steps before starting.

Install strap of the desired color on the new collar and charge new receiver for minimum of two hours. (for ViceBreaker® install leather strap).

Set Transmitter Dog or Horse Selection Switch to the color of the strap (colored sleeve on ViceBreaker®).

Set Transmitter intensity dial to a number, not a letter.

Turn collar on.

Press and hold on/off button, then press and hold a “continuous” Transmitter button (low or medium stimulation button on ViceBreaker®). Hold both buttons down for about 5 seconds – until you hear two quick beeps (ignore the long beep that sounds right away). Release both buttons.

The collar will now be set to match your Transmitter, and will be turned off.

Check for a successful match by turning the collar back on and pressing a “continuous” Transmitter button. The collar light will turn on. If you are not planning to use the unit now, turn the collar off after testing.

If the Transmitter does not operate the new collar, try the procedure again. If you are still having trouble, please call our Customer Service Department at 1-800-456-4343 for assistance

Note for Classic 70 G2 & G3 EXP
or Trashbreaker G2 & G3 EXP

When adding a Receiver for 1 – 3, use the button that matches the strap color and place the dog selection switch in the UP position.

When adding a receiver for dogs 4 – 6, use the button inside the colored circle that matches the strap color and place the dog selection switch in the DOWN position.

If you are adding receivers 4 – 6 to these models, a package of orange, green and yellow straps is available on our website: www.TriTronics.com or from your dealer.

Note for Sport Junior

Many Tri-Tronics remote trainer components can be used with a different Tri-Tronics Transmitter or Receiver than the one they are sold with. Because of this Tri-Tronics mix and match feature, you can combine your Sport Junior Transmitter or Receiver with a different Tri-Tronics Receiver or Transmitter style.

By creating a combined system, you can add such features as more range, additional stimulation choices, higher stimulation intensities, rechargeable batteries, or a different size Transmitter or Receiver. Depending on your training needs you might find a combination system helpful. Please contact our Customer Service Department for more details.