


Congratulations on purchasing a new Cherub WSM-330 Metronome. Please read this manual carefully to make sure that you are using it correctly.

Obverse operation display

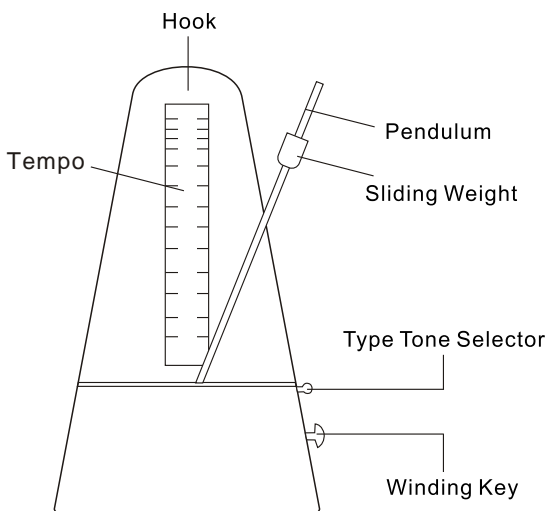

Operation

1) TO START:

Turn the winding key clockwise to wind the spring inside, move the pendulum to left or right side.

2) TO SET TEMPO:

Move the sliding weight up and down and set its upper end on the dial.

3) TO SET PITCH:

Switch the type tone selector and adjust the division to 2,3,4,6, or 0 exactly.

4) AFTER USING:

Slide the weight to the middle or upper part of the pendulum and put on the cover.

Feature

- Top grade metal mechanism ;
- Traditional beat demonstration;
- 40-208 BPM;
- Tolerance < 1%;
- Need not battery.

Notice

- Never fail to put on the cover after using .
- Avoid using or keeping at the dusty or damp Place.
- In case of oiling the metronome use only high grade wristwatch oil.
- To clean the metronome .
- Never wipe it with volatile liquids or chemicals

Accessories

- User's manual.

Registered trade mark of Cherub Technology Co., Ltd.:  |  | **Cherub**