



www.electroniccooler.com

Installation Instructions for the Cool-line™ Ventilator with Aluminum Diffuser

The Active Thermal Management Cool-line ventilation system, when supplied with the aluminum diffuser, is shipped in exhaust mode. As such, it can be mounted above a source of heat, such as a flat-panel display which has been enclosed in a wall cavity or cabinet to move heated air out of the enclosure. Fresh air must be allowed to enter the enclosure to replace the heated air if the ventilation scheme is to be effective. The system can be field-modified to function as an intake device, if desired. In that case, the heated air must have an opening through which to leave the enclosure. Instructions regarding converting the Cool-line to intake mode are detailed at the end of these installation instructions.

Regardless of the mode of operation, either active intake/passive exhaust, or active exhaust/passive intake, air must be able to both enter and leave the enclosure with a minimum of restriction for effective cooling. An air inlet or exhaust opening improperly located or too small will prevent the Cool-line from operating efficiently.

A quick overview of the installation process:

1. The fan assembly is placed at the point where heated air is to be exhausted from the enclosure or fresh air is to be introduced as discussed above.
2. The control box is mounted in a convenient location.
3. The fan wire is connected to the control box.
4. The thermistor(s) are positioned where they will sense air and/or equipment temperatures.
5. The power supply's output lead is plugged into the control box and the power supply is plugged into a convenient source of 120 volt 60Hz power.
6. The completed installation is tested.

Note: Do not plug the power supply into an outlet until directed to do so

Detailed instructions:

1. Locations low and forward in the enclosure are generally preferred for intake-mode systems, while high locations to the rear are best for exhaust-mode systems; the optimum arrangement is one in which air enters and passes by the heat-generating equipment on its way to the exhaust point. Avoid locating the inlet too close to the exhaust as room air may enter and be immediately exhausted without cooling the enclosure and equipment. Cut a rectangular hole 2 1/4" x 29 1/8". Insert the fan assembly from the outside of the enclosure until the assembly is fully seated and retained by the spring clips.

2. Mount the control box at a convenient location; double-sided adhesive tape is provided. While mounting the control box in a location close enough to the power supply, the heat-producing equipment, and the fans is easiest, the fan and thermistor wires can be lengthened if necessary (do not extend the thermistor leads more than an additional 3').

3. The fan wire may be extended using any appropriate 2 conductor wire (20 gauge minimum) if necessary. The red fan wire connects to the "+" screw on any one (F1 - F4) of the 2-pin terminal blocks; the black wire connects to the adjacent "-" terminal screw.

4. Thermistors control the operation of the fans. The spade-lug mounting brackets to which the thermistors are attached allow them to be easily mounted under a screw head near the hottest part of the component whose temperature is being monitored. Alternately, the small magnets supplied can be used to "pinch" the thermistors against the equipment's top or side covers, if they are steel. If necessary, the thermistor wires may be disconnected from their terminal screws for "fishing" between compartments in the enclosure. They are NOT polarity-sensitive; connect either to either of the two terminals marked "TH1" or "TH2." The thermistor in the hotter location will control the fan assembly. Do NOT connect or disconnect the thermistors while power is applied to the control box.

5. The Cool-line is powered by a wall-type power supply. Do not plug it into a switched outlet; use an AC outlet which is always on to allow the fans to run after the other equipment has been turned off. If possible, use an outlet on the same circuit that powers the equipment producing the most heat. If this circuit should fail, the ventilation will cease, but the heat source(s) will also turn off. If the Cool-line is powered from a different circuit, it is possible that that circuit could lose power while the equipment in the enclosure continues to produce heat.

6. Plug the power supply into a live outlet. Plug the power supply output lead into the female connector attached to the control box. As the temperature at the thermistor rises past approximately 80 degrees (F), the fans will begin to turn at a moderate speed, increasing as the temperature increases. When the enclosure temperature falls, the fans will slow down, stopping when the temperature falls below approximately 76 degrees Fahrenheit. A hair dryer can be used to check for proper operation; if one is not available, short the 2 screw connections at either "TH1" or "TH2", which will cause the fans to turn at full speed. Note that it is normal for the fans to begin turning at slightly different

temperatures, due to manufacturing variations in each fan. It is also normal for them to "hunt" a bit as the temperature approaches their turn-on point.

Please note: It is increasingly common for fans to remain on continuously, due to the heat given off by satellite receivers, cable boxes, and DVRs, even when these devices are not in use.

To change the Cool-line ventilator (with aluminum diffuser) from exhaust to intake mode:

1. Remove and retain the 6 screws holding the fan mounting board to the diffuser (arrows, Figure 1) Lift the fan board off the diffuser.

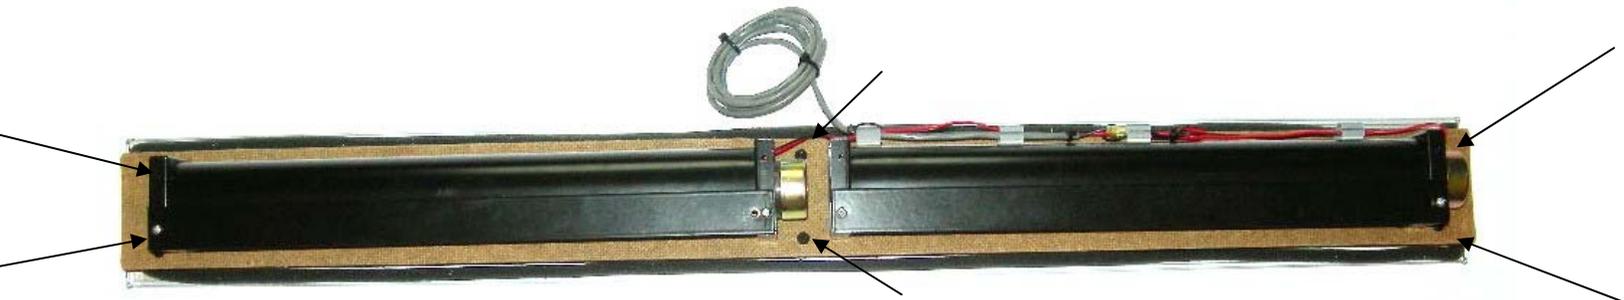


Figure 1

2. Turn the fan mounting board over so that the four screws holding each fan are visible (arrows in Fig. 2; for clarity, only 1 fan is shown).



Figure 2

3. Remove and retain the eight screws holding both fans. Lift the exhaust mounting board off and set it aside without disturbing the fans. The fans will be exposed as in Fig. 3

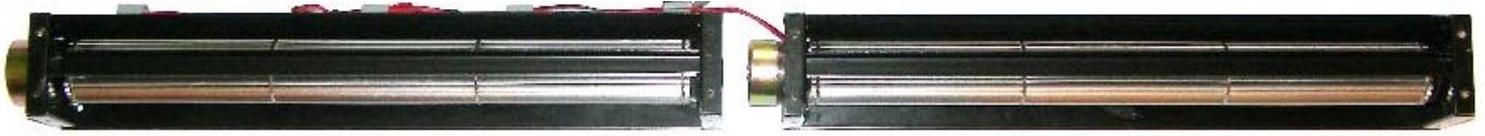


Figure 3



Figure 4

4. Install a blanking cover on each fan as shown in Figure 4. Use one #4x3/8" sheet metal screw at each end. Note that the plate is mounted along the lower edge when the motor is on the left side of the fan.



Figure 5

5. Rotate both fans 90 degrees so that the long U-shaped strut and the blanking plate just installed are facing away from you, and the completely open face is facing up, as in Figure 5. In this position, the entire rotor is visible. Lay the intake fan mounting board over the two fans, black side up, lining the mounting holes in the board up with the holes in the fans as in Figure 6 (Only one fan shown for clarity). Reinstall the eight screws removed in step 3 to fasten the fans to the mounting board.



Figure 6

6. Fasten the exhaust fan mounting board to the diffuser using the 6 screws removed in step 1. Do not over tighten the screws.

To change back to exhaust mode, reverse the above procedure.

Warranty

Active Thermal Management (“ATM”) warrants the Cool-line™ ventilation system against defects in materials and workmanship for a period of one year from date of purchase. We will repair or replace, at our option, any Cool-line ventilation system which has a defect in materials or workmanship. The product being returned must be properly packaged and returned prepaid with an ATM return authorization number clearly written on the outside of the shipping carton and with a copy of the bill of sale or ATM invoice to verify the original purchase date. Our warranty does NOT apply to:

1. Shipping damage, either concealed or visible. Claims must be filed with the carrier.
2. Damage caused by improper installation or improper electrical voltage.
3. Any Cool-line ventilation system which has been modified without authorization.
4. Damage caused by corrosion, abrasion, immersion, or severe temperatures.
5. Products which have been subject to abuse, misuse, abnormal usage, or accident.

These warranties give you specific legal rights, and are subject to any applicable consumer protection legislation. You may also have additional rights which vary from state to state. No other warranties, expressed, implied, or written, shall apply to this product. ATM will not be responsible for any consequential or incidental damages, loss of property, revenues, or profit, cost of removal, installation, or reinstallation, personal damage, or for any breach of warranty, regardless of how caused.