

TEN-TAP™ Programming for Flexible Lighting Options



Streamlight makes our flashlights for a wide variety of applications, but we understand that not everyone wants the same lighting options. Do you like most of the features of a flashlight, but not the pre-set programs? Now, with our TEN-TAP™ Programming, you can reprogram the light from the standard default option. Reprogramming is easy and can be done from anywhere — with just a few quick taps of the switch you can change the lighting to fit your needs and how you'll be using it.

With those lights that feature TEN-TAP™ Programming, you can choose from the following three user-selectable programs:

- 1.High/Strobe/Low (factory default)
- 2.High only
- 3.Low/High

General Operation

Some Streamlight flashlights, such as the ProTac HL, feature a programmable switch with momentary operation (light press or tap) and constant on operation (press until click). The light is shipped from the factory in the default High-Strobe-Low program.

To turn on each lighting mode within this program:

- High: Tap and hold; click to lock on; click again for off.
- Strobe: Fast double-tap (within 0.4 seconds) and hold; click to lock on; click again for off.
- Low: Fast triple-tap (within 0.4 seconds per tap) and hold; click to lock on; click again for off.

Accessing Other Programs

With lights featuring the TEN-TAP™ programmable switch, you are able to select one of three different programs. To change to the next program, starting from the "Off" position, tap the switch rapidly 9 times (within 0.4 seconds per tap) and hold it down the 10th time. Continue holding the switch until the light turns off (approximately 1 second), and then release the switch. Repeat this pattern to change to the next program.

Available programs are High-Strobe-Low (Factory Default), High Only or Low-High.