

## RADIO FUNCTIONS

**Selecting FM/AM Band:** Press **MODE** until the FM or AM band shows on the display.

**Automatic Station Search:** Press  $\wedge$  or  $\vee$  to start automatic station search. The search stops when a station is found.

**Manual Station Search:** Press and hold  $\wedge$  or  $\vee$  until M - SEEK. Press the  $\wedge$  or  $\vee$  briefly to change the frequency until the desired frequency is set. Change to Automatic search (A - SEEK) mode after a station is found.

## BLUETOOTH AUDIO STREAMING

 
1. Open the Bluetooth setup program on the mobile device and activate the Bluetooth feature
2. The device will show up as “SSV”. Select this device and enter passkey: **0000**
3. After successfully pairing, a Bluetooth logo will appear on the phone menu screen and show “CONNECT” “BT MUSIC” on the device LCD display.

**Stop Playback:** Press  $\blacktriangleright\parallel$  briefly to pause music. Press  $\blacktriangleright\parallel$  button again to continue playback.

**Skip Track:** Press  $\wedge$  or  $\vee$  to play previous/next song.

## CONNECTING AN EXTERNAL AUDIO DEVICE (OPTIONAL)

- Press **MODE** until AUX shows on the display.

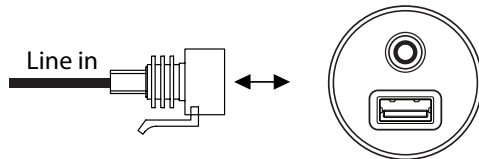

Add 3.5mm AUX-in and USB Charging with SSV Works 3PUSB35A (sold separately)

### WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Contact SSV Works for further warranty information.

 


Corporate: SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030  
Web: www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SSV Works is under license. © 2016 SSV Works, Oxnard, CA 93030 MRB3 Rev. B 3-22-16



## User Guide

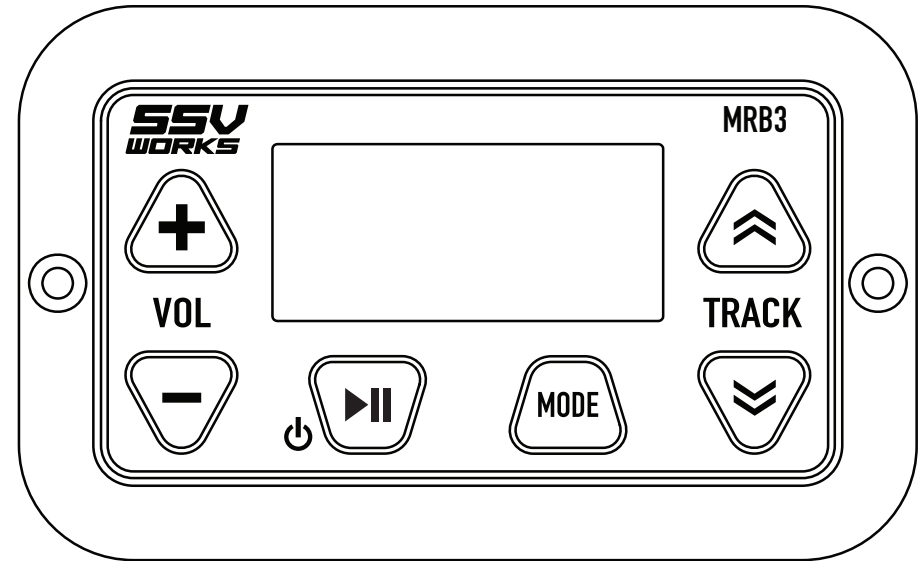

## MRB3 Bluetooth® Media Controller

 
## SAFETY INFORMATION

Do not attempt to disassemble or repair the MRB3 yourself. Please call SSV Works for technical assistance or repair information. Changes or modifications to the MRB3 not authorized by SSV Works will void the warranty.




**SSV Works recommends disconnecting the negative battery terminal before beginning any installation.**

# AMPLIFIER WIRING DIAGRAM

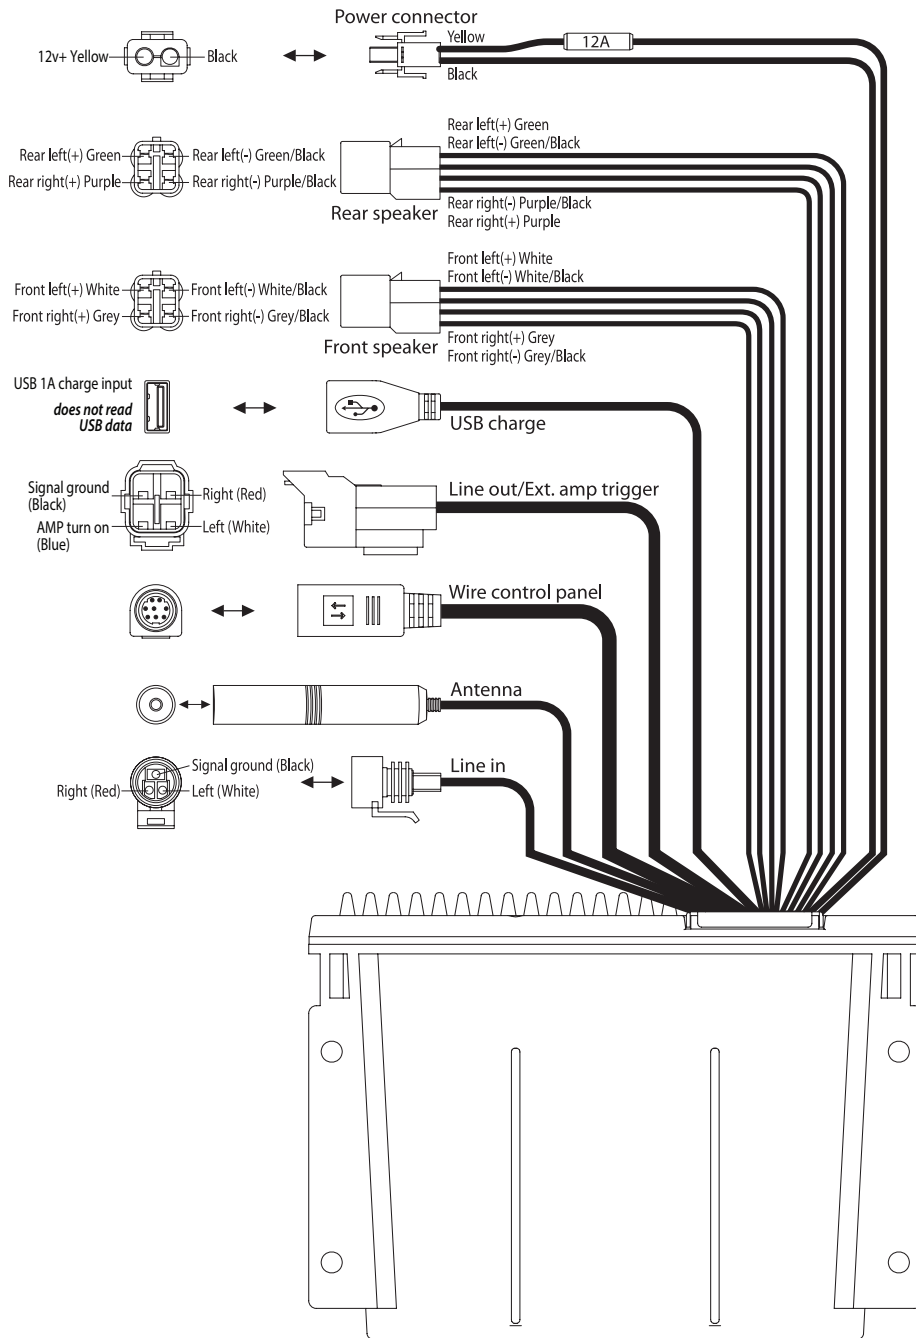

# BUTTON LOCATIONS AND FUNCTIONS

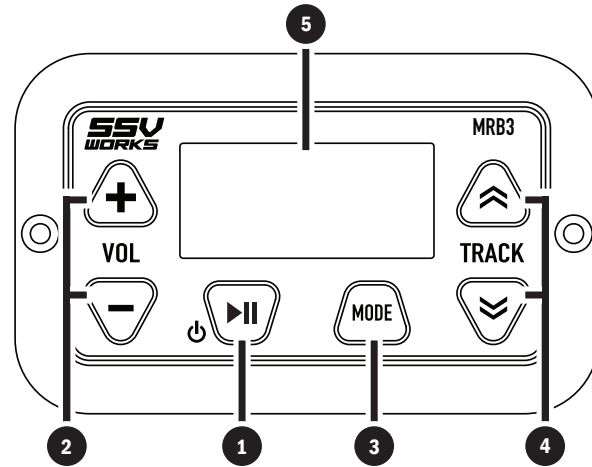 

1. Play/Pause  
Power On/Off  
Mute
2. Volume Up/Down
3. Mode
4. Track Forward/Back  
Station Forward/Back  
Menu Settings Up/Down
5. LCD Display

# GENERAL OPERATIONS

 
**Power On/Off:** Press **▶||** to power on. Press and hold **▶||** to power off.

**Volume:** Press the **VOL(+)** or **(-)** button to increase or decrease the volume.

**Mute On/Off:** Press **▶||** briefly to mute the sound. Press **▶||** again to un-mute the sound.

**Mode Sources:** Press the **MODE** button to switch between AUX, FM, AM, Bluetooth (BT MUSIC).

**Mode Settings (Bass/Treble/Balance/Fader/EQ/Loudness):** Press the **MODE** button for 2 seconds and then press the **⏴** button until the function you want is shown on the display. Press **VOL(+)** **(-)** to change the settings of the menu item displayed.



**Bass (BAS)/Treble (TRE):** Press the **VOL(+)** or **(-)** button to adjust Bass & Treble.

**Balance (BAL):** Press **VOL(+)** or **(-)** to adjust balance (sound distribution between the right and left speakers).

**Fader (FAD):** Press **VOL(+)** or **(-)** to adjust sound distribution between the front and rear speakers.

**Equalizer (EQ):** Press **VOL(+)** or **(-)** to select one of the EQ options: OFF, FLAT, CLASS, POP, ROCK, JAZZ, METAL. The equalizer will be disabled if EQ OFF is set. The equalizer setting is shown at the bottom of the display.

**Loudness (LOUD):** Press **VOL(+)** or **(-)** (LOUD ON) or to disable the function (LOUD OFF). When the loudness function is on, LOUD is shown on the right of the display.