

## Z4826

### 2015-2016 John Deere Gator 825iCab Heater


**Features:** High Output Blower, 313 CFM Fan Draws 4.5 Amps, Motor has 4,000 hour Brush Life and 3 year warranty, 2 Fully Adjustable Louvers, Powder coated Steel Case (Not Plastic)

The heater can be installed over the center dog house with the inlet/outlet facing towards the front of the machine. This is a self-grounded heater, meaning that once it is bolted in, that's what grounds it. There is only one wire needed to hook up to give the fan power. Now take the hoses and attach to the heater core fittings coming out of the back of the heater. After the hoses are connected take and route them along the passenger's side floor. There is 2 plugs at the back of the passenger's side cab (under the seat) and that is where the hoses exit the cab.



Run the hoses up and over the engine to the drivers side. There is a short hose that runs from each cylinder, you are going to eliminate that hose and attach the heater hose from the heater to where that hose was.

There is an unused wiring harness under the drivers side dash and as seen in the picture. You do not have to use this, but you need to wire it into a “keyed” power source, so that there is no power when the key is off.

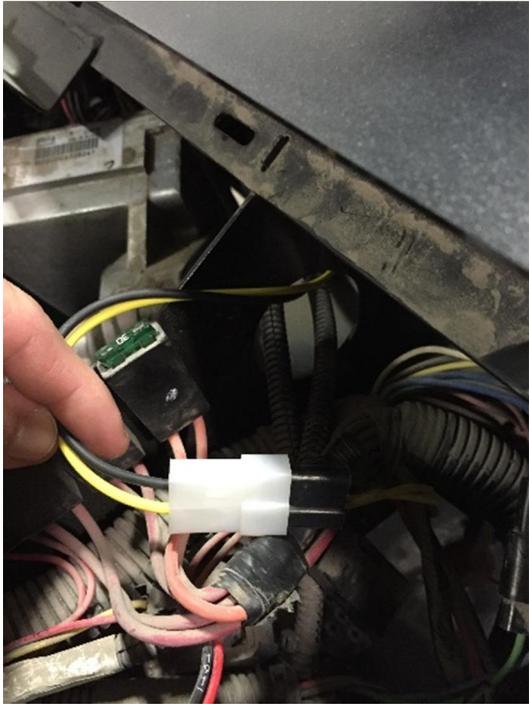

Now you can refill the radiator and check for leaks. Start the machine and recheck coolant level, the kit will require approximately 1 additional quart of coolant. Allow the engine to warm up and circulate the coolant, it may take a few minutes before you get any heat out of the heater, and this is due to the air in the cooling system. Once you start getting good heat recheck coolant level and check again for leaks.