

# Programming Menu for **SOMMER Wireless Keypad** (310 MHz)

## STEP 1: KEYPAD ACTIVATION (FIRST USE ONLY)

1. Press the # button until the red and green LEDs light up (5-6 sec.)

## STEP 2: PROGRAMMING ACCESS CODE

1. Press \* button on the Keypad
2. Press 0000 (code from factory)
3. Press \* button
4. Press desired access code (max. eight digits)
5. Press \* button (red and green LEDs light up)

## STEP 3: PROGRAMMING KEYPAD TO CONTROL HOUSING

1. Press Learn button on control housing once (solid LED)
2. Enter access code immediately on the Keypad
3. Press \* button
4. Enter code again (door will activate)



(item no. 4078V002)

## CHANGING THE ACCESS CODE

1. Press \* button on the Keypad
2. Enter existing access code
3. Press \* button
4. Enter new access code (max. eight digits)
5. Press \* button (red and green LEDs light up)

**Note:** 0000 (factory setting) will activate door. To change the access code see "Changing the access code" (above).

## ERASE ACCESS FROM KEYPAD

*(This is helpful when you don't remember the access code)*

1. Press \* button on the Keypad
2. Press # button
3. Enter 9 digit reset code
4. Press \* button
5. Press # button (red and green LEDs light up)

**WE STRONGLY SUGGEST ATTACHING THE RESET STICKER TO THE CONTROL HOUSING!**



sommer-usa.com  
1-877-766-6607

SOMMER USA, Inc. | 3308-C Oak Lake Blvd. | Charlotte, NC 28208