

FABRIC RULER / CUTTER INSTRUCTIONS FOR USE

This Fabric Cutter has a built-in safety feature. When the Locking Knob is in LOCKED position (see Picture 1), it will not be possible to press down on the pink handle, thus keeping the blade in the “up” position, away from any surface. The blade will ONLY be able to cut when the Locking Knob is in UNLOCKED position (see Picture 2). To lock, turn clockwise. To unlock, turn counter clockwise. This feature will prevent accidental cuts, and will protect the blade from damage.

1



Blade In Locked Position

2



Blade In Unlocked Position

TO USE THE RULER / CUTTER

- .If you are right-handed, you would lay down your fabric to your right. Hold the Ruler/Cutter with the ruler to the left and the cutter on the right.
- .Using the ruler, place it in such a way that your cutter is the desired width away from the edge of the fabric - up to 6 inches. The “0” inch line at the bottom of the ruler should be at the bottom edge of your fabric.
- .Holding down the ruler/cutter with your left hand, firmly push down on the pink handle with the palm of your right hand (see Picture 3) to press the blade into the fabric.
- .Maintaining steady pressure, slide the blade away from you to cut the length desired.
- .If you are left-handed, reverse these instructions, if desired.

3



Pushing Down On The Handle

TO REPLACE A BLADE

- .Turn the Blade Cover counter clockwise (see picture 4) to release it.
- .Slightly tilt the ruler towards the blade side, and allow the blade to drop out. (For safety, it is recommended that you place the old blade in the new blade package.)
- .Now tilt the ruler back completely onto the ruler side, so that the Blade Holder is facing up (see picture 5).
- .Drop the new blade into the Blade Holder.
- .Finally, replace the Blade Cover and turn it clockwise to lock the blade in place (see pictures 4 and 6).

4



**Blade Cover In
Position To Remove**

5



Blade Holder On Ruler Side, Facing Up

6



Blade Cover In Locked Position