

ANDROID KARAOKE

USER MANUAL

ULTRA HD 4K

HARD DISK KARAOKE PLAYER

KARAOKE SYSTEM

CONTENTS

1. SAFETY INSTRUCTION.....	3
2. PRODUCT INTRODUCTION.....	4
2.1 Main Functions.....	4
2.2 Accessories List	5
2.3 Input / output Jack.....	5
2.4 Remote Control Button	6
3. CONNECTION & DISPLAY OPERATION.....	7
3.1 Making the connections.....	7
3.2 Main Interface Function Instruction.....	8
4. Karaoke function instructions	9
4.1 Karaoke system structure.....	9
4.2 Add Songs instructions.....	10
4.3 Song book Printing	12
4.4 Customize the OSD menu by user.....	12
4.5 Song Order Operation.....	15
4.6 Ordering songs by mobile.....	18
5. MACHINE BREAKDOWN TREATMENT.....	19

1 SAFETY

To ensure safe and correct use, do not operate the device without reading this operation manual carefully, if not will cause equipment damaged.

Cleaning

Used for cleaning by soft cloth, not by solvent material, e.g. alcohol.....

Power Supply Voltage

To be sure the power supply certain same voltage with local, if not please consults to dealer.

Power Consumption

To be reminded the power plug pulled out from socket in machine standby status, aimed at stopping continuous power consumption since power connection yet.

To prevent high temperature, humidity, water and dust.

Do not expose the machine to rain, moisture, sand or over temperature environment (e.g. heating equipment or sunlight)

To avoid the potential problem link to the thermal expansion and contraction

In the event of water mist (or droplet) inside or outside machine itself, in a sudden move from cold to warm place, please do not play the machine until its inner moisture evaporate completely under warm environment.

To make the ventilation open

Do not run machine inside cabinet or sealed machine; ensure 10cm (4 inches) approximate ventilated space around the machine.

2 PRODUCT INTRODUCTION

2.1. Main Functions:

This is one HD hard disk Karaoke Song Order machine and android player, with the ability to decode and video output both coming genuinely to ultra HD 4k, namely 3840 X 2160 video resolutions; else to support almost all of the multimedia files formats.

1、Profession in Song Order Operation System

- A: Multiple ways to song order: OSD electronic song list, serving multinational language (UNICODE) and multiple ways to song order, differentiated by reference with alphabet、language、singer star name、song words number、type of songs、song serial number、and so on. Each operation is easy and quick handle, and song list can display including English、simplified Chinese、traditional Chinese、Vietnamese、German、French、Spanish、Japanese、Korean、Thai、Russian、Burma and other kinds of languages.
- B: Specific control: play、pause、stop、replay、vocals/music、volume control、tone control、inquiry selected、insert、delete、random play、rolling subtitles and other specific controls all ready; it can be built in SATA-interface 3.5/2.5 inch hard disk, supporting 16TB space, format of FAT, FAT32 or NTFS. It's able to store millions of MTV songs.

2. Perfection in Full HD Hard Disk Song Order.

- A: Song and Movie file format: support to video encoding format such as RM,RMVB,MPEG1(VCD/DAT/MPG),MPEG2(DVD/VOB/MPG),MPEG4(DIVX,XVID), H.264,H.265,and video package format mainly as MKV, TS, AVI, M2TS, MTS, ISO Blu-ray files;
- B: To create extraordinary enjoyment for music lovers, this machine is able to support music display format such as MP3、WMA、OGG、ACC and particularly FLAC、APE、WAV lossless compression format, and support picture format such as JPEG、BMP、PNG、GIF、TIFF , moreover, it can proceed picture show meanwhile of background music displaying;
- C: Multiple jack: HDMI jack support 4k video output, support CVBS video AV output, HOST USB 2.0 jack, optical and coaxial output jack, and able to external connection to different USB storage devices, and to support the file copy or delete among the different devices.

- D: User-friendly operation : file type filtering, various plug-in subtitles and DVD subtitle, multiple subtitles switching, breakpoint memory play and other humanized operations.
- E: Equipped with luminous type remote control with big buttons, all functions support remote operation, with over 8 meters remote control distance.
- F: Built-in DSP reverb effects processor with 10 band Music EQ and 10 band microphone EQ, making your song more charming,user can adjust microphone volume,music volume,effect volume,key tone by remote or smart phone; Frequency shift feedback suppression for microphone.
- G:Built-in AVC,can balance the volume of different songs,so user do not need to often adjust the volume of power amplifier.
- H: Support songs adding from USB disk, external connection to USB drive;
- I: Support songs encryption to protect your songs from pirating.

2.2.ACCESSORIES LIST

Remote control	1	PCS
AV connecting cable	1	PCS
HDMI connecting cable	1	PCS
Hard disk screw	8	PCS
Manual instruction	1	PCS

2.3. INPUT/OUTPUT JACK

REAR PANEL

HDMI OUTPUT

OPTICAL OUTPUT

AV (CVBS) OUTPUT

RJ45 JACK

USB HOST JACK used in connection with USB device

MICRO USB TO PC JACK used in connection with computer

HEADPHONE JACK

2.4. Remote Control Button description

1.The remote controller



MUTE: Turn off / on sound;

POWER: On/Off Switch machine, it comes to standby mode when power off

VOL+, VOL-: Turn up, Turn down the player sound, the best sound quality of volume is setting to 3/4 position

REPLAY: Restart the song or movie.

PAGE UP;PAGE DOWN: page turn for song order

The up/down/left/right: direction button

NEXT: Stop the KTV song, movie playing .

OK : each function option confirmation

RETURN: Back to the upper interface or exit.

MENU: Make the MENU shown or hidden in karaoke mode

PLAY/PAUSE: the button used for be pause and continuation to play song or movie

VOCAL: The switch to music or vocal sound in song display, and switching language in movie display

PRIORITY: insert the current song to the first position in reserved songs interface

FAVORITE: select your favorite songs to favorite interface, so you can find them easy next time

MOUSE: in android or karaoke mode, open or close software remote mouse;

Number Key 0~9: hot key to enter number select interface, also can input number or words order song.

DELETE: Delete the current song in already-order songs and favorite interface, also delete the Number in CODE interface.

3 CONNECTION & OPERATION INSTRUCTION

3.1. MAKING THE CONNECTIONS

Due to mismatching the video output model, it used to make image display unavailable in initial installation, so please be patient to check under the following connection ways.

1. HDMI Interface

HDMI connection way can work on lossless telecommunication with HD television; by this way can realize the high-quality image output and sound & image output simultaneously. Therefore, this is one recommended way to those users whose TV equipped with HDMI interface.

Normally, television can set at HDMI source input mode while connecting to this machine by HDMI cable , the feasible way to achieve best visual effect is set to "4k2k-smpte" or "4k2k-30hz" if it is displayed in "settings>display>screen resolution" interface of karaoke machine ,and remember not connect the CVBS cable to CVBS output interface when you using HDMI interface.

Note:if your TV do not support 4k resolution,will not appear any 4K2K selection item ,then the best resolution selection of HDMI is "1080p 60hz" .

2. AV audio and video line(yellow/red/white)

1) Insert different color plugs in one end of AV cable to TV AV input interface respectively, insert another end to CVBS video interface,LEFT and RIGHT audio output interface of karaoke machine.

2) After TV set at "AV" Video mode and correctly connects with karaoke machine, power on the machine and it will display image,because the screen resolution is automatically set to "480cvbs" mode,you can see that if you enter "settings>display>screen resolution" interface.

3. Optical output

HDMI and AV both have sound output at the same time,if you want the optical output,please plug one end of optical fiber cable to amplifier OPTICAL input interface, another end to this machine OPTICAL output interface,Then set the settings>Sounds>Digital sounds "Auto-detection" to "OFF", then set to "SPDIF" mode.

Note:This machine is not equipped with optical fiber cable ,please buy separately.

3.2. FUNCTION DESCRIPTION OF MAIN INTERFACE

Confirm the machine and TV is correctly connected and connect the power supply,then turn on,the power light of front panel will be on. After boot-up image is displayed, the machine will enter android desktop.

I. KARAOKE: refer to chapter 4 “KARAOKE function instructions”

II. Android system parameters setting:

Enter the settings interface,Press right,left,up and down button to select the item to be modified:

Network:

select a local WIFI,and set it to connect,if you use wired network,then select “Ethernet”;
How to use the machine as a router:We can set this machine as a HotSpot to enable the connection of other wireless devices.

Firstly, plug the network cable into LAN RJ45 network interface , then click the Setting>More settings>,select “More.....” option,then select “Portable HotSpot”,Click “Portable Wi-Fi HotSpot”,this item will be selected,then click “Set up Wi-Fi HotSpot”, User can set the Network name and password here, After saving, this HotSpot is built. mobile phone can connect to this WiFi network

Display>Screen position:adjust the output screen size to fill TV screen;

System Update:if you need update your firmware,please copy the new firmware file to a USB disk or TF card,then plug it into the interface of machine,go to MY APPS interface of home page,select the APP named UPDATE&BACKUP,then select “wipe data” and wipe media”,and enter “select” to select the firmware file,then do “update”.it will reboot and begin to upgrade,Don’t power down the machine when it is upgrading.

More settings:

Language & input: language option, support nearly all languages in the world.select your language here;

Date & time:suggest to set automatic date & time on,and select time zone;

About Media box:to check the firmware version.

III.My Apps(Android application): all installed android applications can be found in the interface, including network video platform, games, Google play store, various programs, tools and so on, such as Karaoke APK,KODI, YOUTUBE and so on.

IV. Local:including File browser and playing function

When accessing by “file browser” , the system can display all playable files., user can select a file and press “enter” button to confirm to play the file. Also can select files by remote controller or mouse to copy,delete,share and rename.

Note: when copying songs to internal hard-disk of machine, user should use the matched USB cable and confirm the machine is turned on.

V. INTERNET network browser: user can enter the URL to access to a website.

4. Karaoke function instructions

4.1. Karaoke system structure

- 1) Karaoke system working on NTFS or FAT32 format,system file save in the “\uni_sys” folder under the root directory, include songlist.txt file, it is a text file ,all the information are saved in this file, such as song's name/number /artist /language etc.,The machine is based this file to operate.
- 2) Song code are composed of 6-digit numbers, song code are from 000001 to 999999,it means the folder name (000~999) and song file name (000.xxx~999.xxx). system support 000 to 999 totally 1000 song directories, each directory support up 1000 songs, totally 999,999 songs.
For example: there is a song files named 006.AVI in the “003” folder, so the corresponding song number is 003006.
- 3) When you select a song , the machine will search that song's code in the songlist.txt, according to the code, to find the corresponding song file in HDD to playback.

The Description Of File System:

Folder	Definition	Description
\	Song. exe	Song list management program,it is the tool to manage the file songlist.txt,should operate on computer.
photo	The artists photos	To place all artists photos which used in artist search interface
000~998	000.xxx~999.xxx, song file	Placed the song file to each directory, named from 000 to 999
999	Background Video Folder	placed the video files as background video.
LOGO ICON	ICON&LOGO files	Place ICON&LOGO files to customize UI
Uni_sys	Songlist.txt	Song list file,all the song information are saved in it,machine is based this file to operate.
	AZMENU* . txt	Configuration file of OSD menu,user can define OSD by themselves.
	config.txt	Configuration file of ktv machine,can define some functions,such as hotspot.

4.2. Add song instructions

1. Use USB cable connect computer, copy the file to the karaoke machine,

2. Adding songs from USB flash disk: when user chooses to add a song from USB flash disk, user should copy the new songs to the UPDATE directory of USB flash disk. The directory from \update\000 to \update\998 is available. File name is also a 3-digit number. Copy the \UPDATE\songlist.txt file of new songs. The code is also composed by 3-digit numerical directory name and file name. Insert USB disk to the USB interface of machine and select “Adding songs from USB disk”. The system will automatically copy the songs from USB disk to the hard disk of machine. When prompting the success of copy, please restart Karaoke program.

3. There are three kinds of way to edit the songlist.txt (must be UNICODE), as following:

- 1) Use the song list management software tool is in the CD disc provided by factory to edit,,can edit the Songlist.txt file, like create /edit/sort/search/number replace etc., And with powerful function is that check the songlist.txt).
 - A)、click “new”
 - B)、Click “import”, select \uni_sys\ Songlist.txt
 - C)、Add new song by edit function .
- B)、Use the “check”, check if there are any empty record or missed record song list.
- E)、Click “export”, overwrite songlist.txt.
- 2) Use EXCEL software to edit, apply the function formula tips to create the required songlist.txt.
- 3) Direct modify text file of song list:

use the notepad in computer to edit, open the Songlist.txt from the “uni_sys” folder of hard disk root directory of the karaoke machine(\uni_sys \songlist.txt), Each line of Character shows one song information, every line has been set off 12 fields by 11 semicolon, each field is used to define the information of the song, The Rule Of Songlist.txt as follow:

LÒI CUÔI CHO EM;1;Minh Tuyet;4;7;5;LCCE;70002;MT;2;5; ;



(1)Song's name

(2) initial VOCAL/MUSIC state of song file:

0/space- music will be playing when playing the songs, need not to change the track or channel.

1- Vocal will be playing when playing the song, need to change the track or channel automatically.

(3)Artist's name

(4)The words count of song name

(5)Song's language item: (Fill in 1~25 numbers),fill VIETNAMESE with 7, ENGLISH-1, CHINESE-2,CANTONESE-3,JAPANESE-4,INDONESIA-10,KOREAN-5,TAIWAN-6,RUSSIAN-8,THAI-9,FILIPINO-10,COMBODIA-11,MYANMAR-12,SPANISH-16,Malay-13,etc.

must be defined in AZMENU*.TXT, for example:

```
--[OSD_PARENT_LANGUAGE]=LANGUAGE
```

```
[OSD_VIETNAMESE]=VIETNAMESE;7
```

```
[OSD_ENGLISH]=ENGLISH;1 etc.
```

(6)Volume parameters (Fill in 0-9 number),need not to fill now

(7)Spell of song name. The initial letter of song name, it is used to order songs by spelling search operation in menu.

(8)Song's code: consists of 5-digit numbers, they are folder name + song file name in hard disk.

(9)Spell of artist: The initial letter of artist name

(10)Artist classification (Fill in 1~3 numbers):1-Male 2-Female 3-Bands

(11)Song type:(Fill in 1~20 numbers),fill CHORAL with 1, OPERA-2, ARMY-3 ,BIRTHDAY-8,DANCE-4,POPULAR-5,CHILDREN SONG-10,MOVIES-6, NATIONAL-7,CONCERT-11 etc.

must defined in AZMENU*.TXT, For example:

```
--[OSD_PARENT_SONGTYPE]=TYPE  
[OSD_CHORAL]=CHORAL;1  
[OSD_OPERA]=OPERA;2 etc.
```

(12)not used : need not to fill now.

After edited the song file, save as "Unicode" code.

4.3. Song book printing.

Song manage program can generate the Excel file for printing; User can edit and print song book by this file.

4.4. Customize the OSD menu by user:

During operate the machine, If the user want to customize the OSD menu by themselves, such as need to display the different languages or the arrange of OSD menu, etc. Now can change the parameters /UNI_SYS /AZMENU*.txt file in hard drive.

The machine has preset 12 kinds of languages OSD menu, can press the SETUP button on remote control into the setup interface to select the English /Chinese /Traditional Chinese /Vietnamese /Thai/Japanese /Korean/Spanish/ Russian / Myanmar /Khmer/Indonesia for OSD language. Configuration files as following :

ENGLISH	AZMENU1.txt
CHINESE	AZMENU2.txt
CHINESE T	AZMENU3.txt
VIETNAMESE	AZMENU4.txt
THAI	AZMENU5.txt
FRENCH	AZMENU6.txt
KOREAN	AZMENU7.txt
JAPANESE	AZMENU8.txt
RUSSIAN	AZMENU9.txt
COMBODIA	AZMENUA.txt
MYANMAR	AZMENUB.txt
INDONESIA	AZMENUC.txt

According to the needs to change any parameters in AZMENU*.txt file, for example: open the AZMENU1.txt by notepad in computer, there will be:

begin

```
--[OSD_PARENT_LANGUAGE]=LANGUAGE  
[OSD_VIETNAMESE]=VIETNAMESE;7
```

```

[OSD_ENGLISH]=ENGLISH;1
[OSD_CHINESE]=CHINESE;2
[OSD_CANTONESE]=CANTONESE;3
[OSD_TAIWAN]=TAIWANESE;6
[OSD_THAI]=THAI;9
[OSD_FRENCH]=FRENCH;17
[OSD_CAMBODIA]=CAMBODIA;11
[OSD_MYANMAR]=MYANMAR;12
[OSD_RUSSIAN]=RUSSIAN;8
--[OSD_PARENT_SONGTYPE]=TYPE
[OSD_CHORAL]=CHORAL;1
[OSD_OPERA]=OPERA;2
[OSD_ARMY]=ARMY;3
[OSD_BIRTHDAY]=BIRTHDAY;8
--[OSD_ARTIST]=ARTIST
[OSD_ALL_ARTIST]=ALL
[OSD_MALE_ARTIST]=MALE ARTIST,1
[OSD_FEMALE_ARTIST]=FEMALE ARTIST,2
[OSD_GROUP_ARTIST]=BAND,3
[OSD_FOURTH_ARTIST]=FOREIGN ARTIST,4
--[OSD_SPELLING]=SPELLING
--[OSD_CODE]=NUMBER
--[OSD_FAV]=FAVORITE
--[OSD_SEARCH]=PHONE
--[OSD_RANKING]=RANKING
--[OSD_ORDER]=SELECTED
--[OSD_SETTING]=SETTINGS
=====
[OSD_STATUS_0]=MENU
[OSD_STATUS_1]=PLAY
.....
end

```

1) AZMENU.txt file define the OSD option, prompt sentences in operational interface.

2) "--" means the option that display on OSD main Menu.

3) On the left side of "=" is the definition of the option, on the right side is the option's parameters, the right side one can be modified by user. For example:
[OSD_LANGUAGE] Define the language option, [OSD_SONGTYPE] define song type option.

Change the text of menu option:

For example: change the AZMENU1.tx file:

From	<pre> [OSD_VIETNAMESE]=VIETNAMESE;7 [OSD_ENGLISH]=ENGLISH;1 [OSD_CHINESE]=CHINESE;2 [OSD_TAIWAN]=TAIWAN;6 [OSD_THAI]=THAI;9 [OSD_KHMER]=KHMER;11 </pre>	to	<pre> [OSD_VIETNAMESE]=VIETNAMESE;7 [OSD_CHINESE]=CHINESE;2 [OSD_TAIWAN]=TAIWAN;6 [OSD_ENGLISH]=ENGLISH;1 [OSD_THAI]=THAI;9 [OSD_KHMER]=KHMER;11 </pre>
------	---	----	---

So the OSD menu will display:




to



Collect a song in a new language option of OSD:

For example: A song name: "LÒI CUÔI CHO EM", language is Vietnamese. So you can define language option in AZMENU1.txt as:

Open AZMENU1.txt

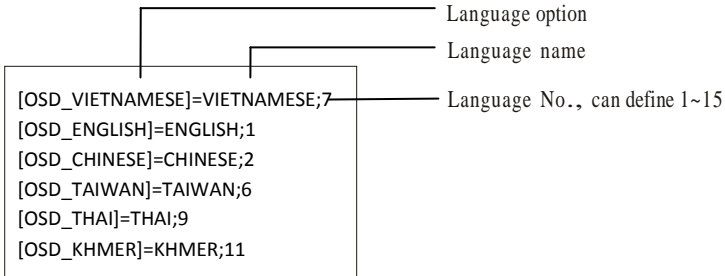

Open Songl ist.txt



Fill number 7 in Language field of songlist.txt
Add song name information in Songlist.txt

The song will be showed below VIETNAMESE option of OSD menu

Collect a song in a new Song Type option of OSD:


For example: A song name: "MY BONNIE" ,Song Type is CHILDREN SONG . So you can define Song Type option in AZMENU1 .txt as:

Open AZMENU1. txt:



```

--[OSD_PARENT_SONGTYPE]=TYPE
[OSD_CHORAL]=CHORAL;1
[OSD_OPERA]=OPERA;8
[OSD_ARMY]=ARMY;2
[OSD_BIRTHDAY]=BIRTHDAY;3
[OSD_DANCE]=DANCE;4
[OSD_NATIONAL]=NATIONAL;7
[OSD_CHILDREN]=CHILDREN;10

```

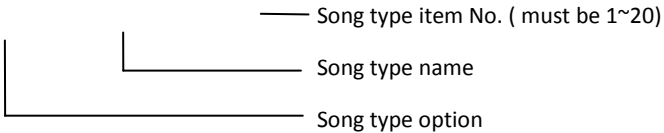

Open Songlist.txt :

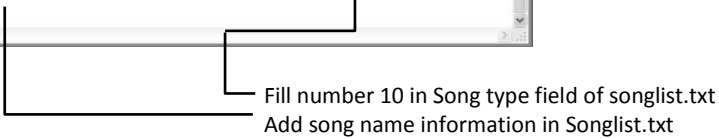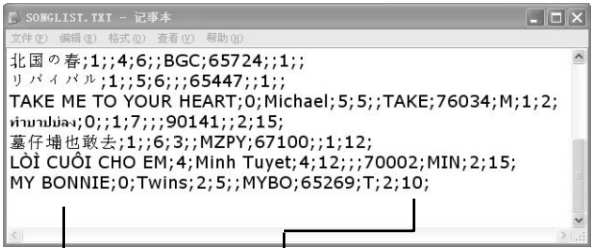

The song“MY BONNIE” will be showed below CHILDREN SONGS option of OSD menu

Configurat Config.txt file :

```

[wifi HotSpot info]
#set the HotSpot as below sample,then can open it easily in karaoke settings.
hotspot_ssid=KTV1
hotspot_pwd=88888888

```

4.5. Song Order Operation

Enter the main KARAOKE interface from the “KARAOKE” icon on Android desktop. screen display control bar and KARAOKE functional main menu,In the main menu, user can move the cursor or directly press numeric keys to enter a sub-menu.

When no operation is inputted within set time, menu will hide, and can be recalled by pressing “MENU” again. Also user can press numeric keys to

recall numeral interface.

The system supports the operation by remote controller or mouse, or the combination of both. When system detects the connection of a wired or wireless mouse, or when remote controller opens soft mouse mode, a mouse cursor will appear and the interface will change to the way suitable for mouse operation. User can directly click on a button to perform desired operation. When the system is not connected to a mouse, the interface will become the compact remote controller mode. All functions can be recalled from remote controller. We will introduce the interface operation with remote controller as the example.

ordering songs by language or category: enter the interface of song list and move the cursor through right and left buttons to select the language or category of songs; by default, the first option is often set for the most common languages or categories by dealers. Press the up and down buttons to move the cursor to desired song and press “enter” button to add this song to the end of selected songs list. User can select a song by priority button to insert this song to the first of selected songs list. Select a song and directly press FAVORITE to collect this song as your favorite. To repeat play a song, user can select it again. Page up and page down button enables user to skip to next page or return to previous page. The song list is sorted by the sequence of initial of song names. By pressing the number keys from remote controller in song list interface, user can filter songs by the number of words, for example, when pressing the number 5, the list only shows the songs whose names only have 5 words. The number 0 will show all available songs and the number 9 provides the songs with 9 and above 9 words name (with a mouse, user can filter and quickly search for desired songs by the first letter of each song name words in the interface).

Ordering songs by artists: move the cursor to the category of artists by number keys. Default setting is all artists. With a mouse or opening the mouse mode of the remote controller, user can filter artists by their names. Search artist with up, down, left and right button, and press ENTER button to enter the song list of required artist.

Ordering songs by song code: user should find the code of a song from song book first and then input the number of the code, For any input mistake,

user can press “DEL” to backspace, then press ENTER button to select the song, or press priority button to insert the required song to the first position. If the number in front of a code is “0”, such as “000018”, user can only input “18”, then press ENTER button to select the song. If user wants to set the song as favorite, user just needs to press FAVORITE button before selection. If a song has not been edited into the songlist.txt file, but the song file exists, you can directly input the code to select it, for example, you input “112118”, if the file \112\118.* exists, it will be selected, even though the code “112118” cannot be found in the songlist.txt file.

Ordering songs by spelling: according to the prompt of the interface, user can move the cursor by left and right buttons to choose letters and enter the first letter of the front 4 words at most, for example, “as long as you love me”, user should enter “ALAY”, and then move the cursor with up and down buttons to choose a song name from the filtered song list by spelling.

Selected songs (playlist): press “selected” key to enter the interface of selected songs. To insert a song, user should move the cursor to the song, and press “priority” button to put the song to the first position of the list. To delete a song, user should move the cursor to the song to be deleted, and then press “DEL” button to delete the song from the selected song list.

KARAOKE settings: in the KARAOKE application, user can press SETUP shortcut key to directly enter into the setting interface.

1. **Language setting:** press ENTER button, then move the cursor to the required language and select it to refresh the language of the menu.
2. **Menu hiding time:** This setting sets the duration from the last operation to hide the main interface.
3. **Control bar:** this option sets if the control bar is hidden together with the main menu. Set to “On” will always display.
4. **Auto play:** when no song is reserved, the system will turn to auto play mode. There are 4 auto play modes: coded sequence, random, favorite and 999 directory. The 000 file in the 999 directory is a special background video file for the KARAOKE system and will be played when beginning KARAOKE or auto play setting is invalid. If this file does not exist on the hard disk, the system will play the default file in the machine.
5. **Scrolling subtitle:** this item enables or disables scrolling subtitle. Scrolling

subtitle display the song being played and next song, as well as the text message (such as “happy birthday”) from mobile phone. When receives the message, the machine will show it on TV adding the fun.

6. Advanced functions: functions available for dealers, set encryption key of songs.

7. Score: open or close score function, if you set to open, will display a score after you sing a song

8 Fade in:

if the setting is on, the volume will gradually increase to the set value within 3 or 5 seconds after playing starts.

4.6. ordering songs by iphone or android smart phone

If you haven't a wireless router, please set the machine as a router(page 8).

If you have a wireless router, please set the KARAOKE machine first, it is a Host device, access to android settings, activate the WIFI function, connect to wireless router.

After setup, enter the setting interface of KARAOKE program, you can see the HOST IP address.

Mobile phone setting: activate the WIFI function of mobile phone, connect to the same wireless router, download APP installation from APP store (search “karaoke air2” in apple store and search “karaoke air” in Google play store), install the program to Iphone (or IPAD) or android mobile phone (or tablet), and enter the client karaoke program, it will connect to Host karaoke machine automatically to start KARAOKE. User can control the karaoke machine on real-time basis, order or delete a song. Usage is the same with the KARAOKE operation in karaoke machine.

Especially:


1, if your phone using android system, can scan QR code in setting interface to download android phone APK directly.

2, if your mobile phone is formulated for speech recognition, you can access search function and input the name of a song or an artist with voice input function of mobile phone to start searching.

3, android mobile can send some order to the machine for heightening the joyous atmosphere:

 applause:machine will play the sound which is applause

 booting:machine will play the sound which is booting

 message:you can input some words and send to the machine as message,such as congratulation,praise,joke ,etc.,the machine will display the message on the screen like subtitle.

5 Machine breakdown treatment

Sometime machine shown error it not mean the machine breakdown, please self-checking before send to repair

Power off

1. When power LED is not light, please check if power connection is in correct way, and please plug into power socket tightly.
2. If LED display is light, but TV no image, sometimes the machine is in standby status, need to press “power” button of remote control to start up.

No image or incorrect image color

1. The HDMI cable or video cable between karaoke machine and TV is not connected tightly or plug in wrong jack .
Please make sure the connection wire plug into karaoke machine and TV is exactly inserted
Please make sure video cable is correct connection with karaoke machine’s jack
2. The video output mode of karaoke machine is not matching with TV signal source
Please make sure there is only one kind of video cables insert the karaoke machine’s jack, such as, CVBS video cable and HDMI cable both insert the machine at the same time is not allowed.

No sound.

1. Sound/Video cable not stuck firmly, please plug again.
2. Please check volume setting of android system, and the sound output mode should be set to HDMI in digital sounds setting if you do not use OPTICAL ;
And check the volume is not in mute, or player not to pause,

Invalid remote control

1. Please check if the polarity of the remote controller battery got reversed

2. Please check if the remote controller battery is adequate in electricity supply
3. Hand the remote controller in direction to the signal receiver of media player in less 10 meters distance.

Image playing stop or unable to display

Please make sure that encryption key is set correctly if song file is encrypted.

Please check if the hard disk file exist problem

Please check if hard disk is ruined

System response slowly

1. In single folder, the files quantity should not over 1000.

2. Have used too many Applications, should restart machine.

Song file can not be found

Songlist.txt does not match exist song file, please check by song manager program.