

## CAM LOCK INSTALLATION

### AND/OR REPLACEMENT INSTRUCTIONS

#### Tools Required:

- $\frac{7}{8}$  inch open/box end wrench or adjustable open end wrench
- Phillips screwdriver

#### Installation/Replacement Procedure:

1. Remove existing lock from back by removing nut threaded to lock body.
2. Install provided lock in the same order as the exploded diagram below (use diagram and refer to previously installed lock [if any] for correct cam – straight vs. formed).
3. Tighten and adjust as needed by slightly bending cam (if necessary).

Note: The “spur washer” is not used in dVault models (see image below).

