

**Command Center Cabinet
(Surface Mount)**




**System Includes Phone
& Distribution Module**

- 10 Zone 2500-10GRCV
- 20 Zone 2500-20GRCV
- 30 Zone 2500-30GRCV
- 50 Zone 2500-50GRCV
- 70 Zone 2500-70GRCV
- 80 Zone 2500-80GRCV
- 100 Zone 2500-100GRCV
- 120 Zone 2500-120GRCV
- 130 Zone 2500-130GRCV

Dimensions: 15.14" H x 12" W x 6.19" D

**Command Center Cabinet
(Flush Mount)**

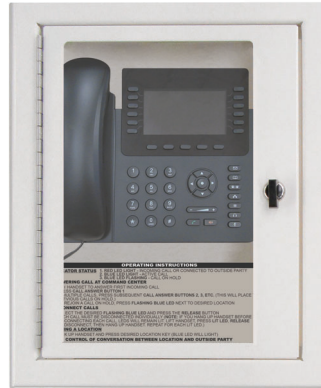

**System Includes Phone
& Distribution Module**

- 10 Zone 2500-10GRCFV
- 20 Zone 2500-20GRCFV
- 30 Zone 2500-30GRCFV
- 50 Zone 2500-50GRCFV
- 70 Zone 2500-70GRCFV
- 80 Zone 2500-80GRCFV
- 100 Zone 2500-100GRCFV
- 120 Zone 2500-120GRCFV
- 130 Zone 2500-130GRCFV

Dimensions:
Front Frame: 16.06" H x 14" W x 3.07" D
Back Box: 15.64" H x 12" W x 3" D

**Command Center
(Desk Mount)**



**System Includes Phone
& Distribution Module**

- 10 Zone 2500-10GNVC
- 20 Zone 2500-20GNVC
- 30 Zone 2500-30GNVC
- 50 Zone 2500-50GNVC
- 70 Zone 2500-70GNVC
- 80 Zone 2500-80GNVC
- 100 Zone 2500-100GNVC
- 120 Zone 2500-120GNVC
- 130 Zone 2500-130GNVC

**Contact Us for
Larger Projects**

IP Command Center:

- Surface cabinet, flush cabinet, or desk mount
- Powder coated steel enclosure with twist lock closure
- Includes handset and speaker phone for communication to elevators
- Command Center and Sub-Master Stations are powered from PoE
- Works with In Car Analog Phones with Remote IP Interface or In Car IP Phones
- Can be configured with the main Command Center, Multiple Sub-Master Stations (available in desk, surface, or flush mount) and Machine Room phones (2300-630RC)
- Command Center and Sub-Master Stations to Distribution Module: IP (PoE)
- In Car Analog Phone and 2300-630RC require an IP Interface. The In Car IP Phones are a direct Ethernet connection.
- Connect IP Interface or an In Car IP Phone to Distribution Module via an Ethernet connection. Maximum 300' run to Network Switch.
- System requires an analog telephone line, an IP phone line when used with an IP Interface, or can be set up as an IP Intercom System
- Audible alert sounds when phones place a call until Command Center joins conversation
- LEDs indicate which phones have initiated a call
- Rescue personnel can communicate with individual phones and outside party
- Calls wait in queue until previous call is disconnected and receive a message stating that an emergency call is in progress. When the prior call clears, the next phone in queue is connected.
- ADA, ASME A17, and B44 code compliant
- 3 year warranty

Distribution Module



- Included with Command Center
- Surface mount
- Install on a wall or table top
- Requires 120vac power with battery backup or RATH® Power Supply with battery backup
- Single dedicated phone line or as an Intercom System
- **Dimensions:** 6.75" H x 10.75" W x 1.25" D