

### On-Board Programming

Note that Telco lines and some PBX systems only provide a limited amount of time to program the phone before the line tells the phone to hang-up. See page 2 for a programming template and tips to assist in programming the phone in these situations.

#### Step 1: Begin Program Mode

- Plug the phone line from the phone into a phone jack
- Press the **ON/OFF** key, then slide **S15** to **ON/PROG** (see photo)
- Press **5, \***, (**1 or 2**)
  - 1 = Standard number dialing
  - 2 = Ring down operation (no dial tone)

#### Step 2: Program Emergency Numbers

- First emergency number press **1, \***, (**key in the phone number**), **VOL** key
- Second emergency number press **2, \***, (**key in the phone number**), **VOL** key
 

**Note:** For a “pause” press the **ON/OFF** key.

#### Step 3: Program Location Message

- Press **7, \***, (**0, 1, 2, or 3**)
  - (0 = No message, 1 = Plays once, 2 = Plays twice, 3 = Plays until you press #)
- Press **4, \***, (wait for the beeps to finish) (speak location message), **VOL** key
 


**Note:** If option 3 is selected, at end of message add the phrase: “For two-way communication, press # four times after the beep”.

**Note:** Called party can replay message by pressing **\*, \***.

#### Step 4: Program Timer

- Press **6, \***, (**3-digit time in minutes = 000 to 999**)
 

**Note:** Timer function is needed when the phone system does not provide a disconnect signal as in the case of some Ring Down lines or PBX systems.

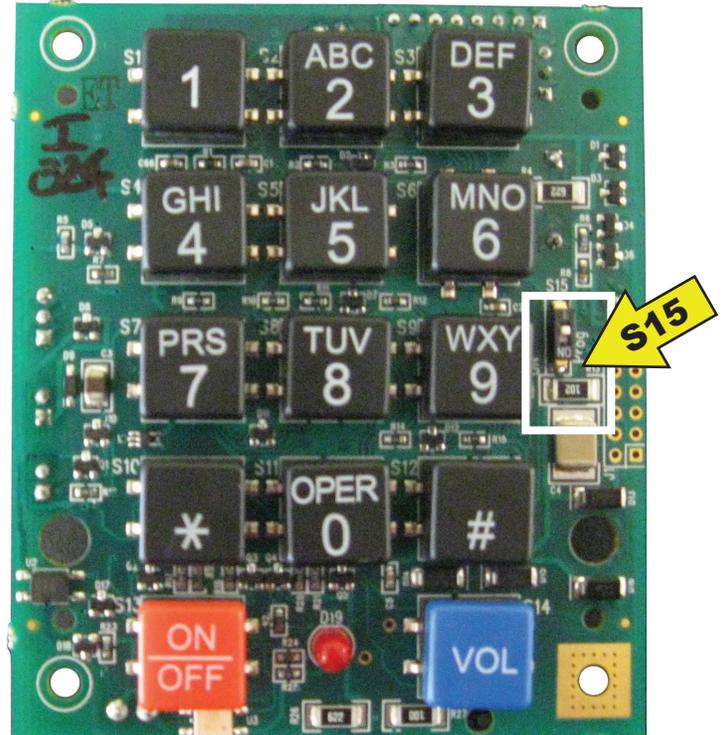

#### Step 5: Program Auto Answer

- Press **8, \***, (**1 or 2**) (**1 is ON and 2 is OFF**)
 

**Note:** Auto answer is set to ON at the factory.

#### Step 6: End Program Mode

- Slide **S15** to **1** and press the **ON/OFF** key

If the phone turns off during programming it is because many Telco lines and PBX systems provide a limited amount of time to program the phone. In these cases, it is imperative to quickly move through the phone programming. A template is offered below to assist in programming the first emergency button.

**To program a phone where multiple numbers or auto answer is to be programmed, follow these steps:**

1. Press the **ON/OFF** key, then dial a number such as your cell phone. Answer the cell phone and do not hang-up the call.
2. Slide S15 to **ON/Prog**.
3. Perform all the programming steps on page 1.
4. When programming is completed, slide S15 to 1.
5. Press the **ON/OFF** key to hang-up the call to your cell phone.

**Programming Template**

1. Fill in the emergency phone number in the spaces provided in step 2.
2. Then follow the directions provided in step 1.

**Step 1:** Press the **ON/OFF** key, then slide S15 to **ON/Prog**

**Step 2:** Press **1**, **\***, \_\_\_\_\_, **VOL** key