

## **5875 – Adding and Deleting Remotes**

### **Adding Remotes**

1. Plug lamp into lamp module, then plug module into wall.
2. Press and hold button on the side of the lamp module. Lamp will turn "on". Continue to hold button until lamp turns "off". RELEASE button. LIGHT will turn back on.
3. Wait 1 second. Press the button on remote that you want to control the lamp. IF THE BUTTON WAS LEARNED IN THE LIGHT WILL GO OUT AND STAY OUT. If the light goes out and comes back on then the button was not learned in. Up to 7 buttons can be enrolled. So you can have 7 buttons from 7 different remotes or all 4 buttons from 1 fob and only 3 buttons from a second fob.

### **Deleting Remotes**

With the lamp off, press and hold button on lamp module. The light comes on, then turns off, then on again, then off a second time. Release button and all of your remotes are deleted.