

How to Upgrade the microSD card in the IPCAM-WIC2

Overview

This document will explain how to upgrade the microSD card in the IPCAM-WIC2 and the purpose the SD Card is installed in the camera.

Table of Contents

Overview	1
Table of Contents	1
Why the microSD card is installed in the camera	2
How to Upgrade the microSD card	3



Why is the microSD card installed in the Camera?

The Encrypted SD Card that is installed in the camera out of the box is 8GB upgradeable to 64Gb. The microSD is intended as back up if the camera is disconnected from the Internet. Clips in microSD card will be transferred to the cloud as soon as internet connection is restored. The microSD card is encrypted and is not viewable via a pc.

How to Upgrade the microSD

1. Remove power from the camera by unplugging the transformer.
2. The camera will need to be removed from the base. This can be done by pushing on the back of the camera in a forward motion to unlock the camera from the base.





3. Once the camera is removed from the base, on the side of the camera you will see the factory installed 8 GB microSD card. Simply press the installed microSD to remove and upgrade.



Technical Document

Revision 1