

Created: 12.21.2000
Modified: 12.21.2000
File: 5800rl_1.Doc
Pages: 1

Product: **5800RL**
Title: Mounting, Wiring and Setup

-
- | | |
|---|--|
| 1 | Remove the 5800RL's cover from the base (using a small flat head screwdriver, insert screwdrivers tip in slot at top of the cover to remove.) |
| 2 | Using the 5800RL base as a template, position in the desired location and mark the two mounting holes. |
| 3 | Attach the 5800RL base using the fasteners supplied. |
| 4 | Connect relay and power wiring to the 5800RL's terminals.
The 5800RL can be powered from either an AC or DC external power source connected to terminals 7 and 8.
Power source ratings are as follows:
AC – 9VAC, 15VA
DC – 12VDC, 100ma |
| 5 | Set Dip switches 2-6 to the appropriate House ID (1-31). Make sure the House ID set by the DIP switches matches entered in the control panel. |
| 6 | If module supervision and/or tamper protection is desired, enroll the 5800RL serial number when programming the control.
Note the following when enrolling:
Input type = 3 (RF)
Loop number = 1
Zone Type = 5 (day trouble/night alarm) |
| 7 | Position the wiring in the exit slot and reinstall the 5800RL cover on the base. |
-
- Notes:
- Mount the 5800RL in a high location for best wireless reception.
 - Do not mount the 5800RL on or near metal objects. This decreases range and/or blocks wireless transmissions.
 - The 5800RL must be located to least 10 feet from any remote keypads to avoid interference from the microprocessors in those units.
 - To avoid voltage loss that occurs on long power lines, the external power supply unit should be mounted in close proximity to the 5800RL.
-
-