


ABOUT THE SECURITY WATCH

The 5804WATCH Security Watch combines a fully functional digital timepiece with a portable wireless transmitter for controlling your security system.

WATCH OPERATION MODES

The Security Watch provides two operating modes. **Watch Mode** includes all Timepiece functions including Time/Date, Alarm Clock, Countdown Timer, and Chronograph features. **Security Mode** includes up to four Security functions, as programmed by your installer.

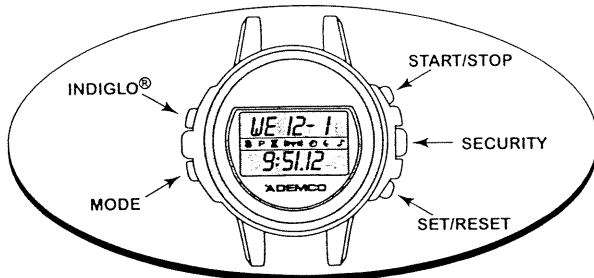

Watch Mode Features

Access the Watch Mode features by pressing MODE (located on the lower left side of the watch.) Features appear in this order, on each press of the MODE button:


- Time/Date
- Alarm Clock
- Countdown Timer
- Chronograph (Stopwatch)

Security Mode Features

Access your Security Mode features at any time by pressing the red SECURITY button (located on the center right of the watch.) Security Mode features are described later in this document.

SECURITY WATCH ICONS

Seven icons, located across the center of the watch, indicate which Watch functions are set and/or active:

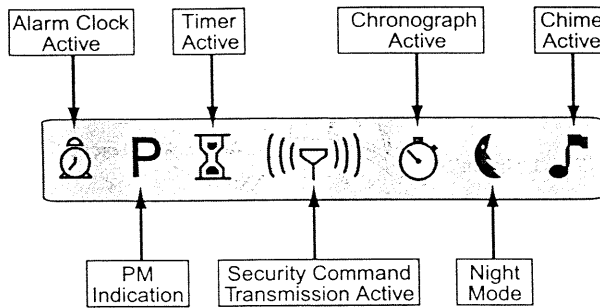

SETTING ALARM CLOCK

Alarm Clock mode can be used as a simple alarm clock, and also as a way of transmitting Security functions at a specified time.

These Security functions may be available for transmission when the Alarm Clock triggers: ARM STAY, LIGHT, ACC (accessory), or NONE if no security function is desired.

IMPORTANT NOTE: Security Functions are only available in this mode if STAY, LIGHT, and/or ACC (accessory) were programmed by your installer.

To set the Alarm Clock, perform the following steps:

Hold SET/RESET...



Press MODE ↓ for Minutes



Press MODE ↓ for AM/PM



Press MODE ↓ for Security*




1. Press MODE to get to the Alarm Clock Mode.
2. Press SET/RESET to begin, then follow the steps in the diagram, using MODE to switch fields and START/STOP to adjust fields.
3. SECURITY FEATURES: To select the Security command you wish to transmit at alarm time (depending on programming). These Security commands may include STAY, LIGHT, ACCSRY, or NONE if you choose to send no command at alarm activation.
4. Press SET/RESET to exit the Set Alarm function.

User's Guide

W-27 807-095004

* Only active if commands are programmed & available

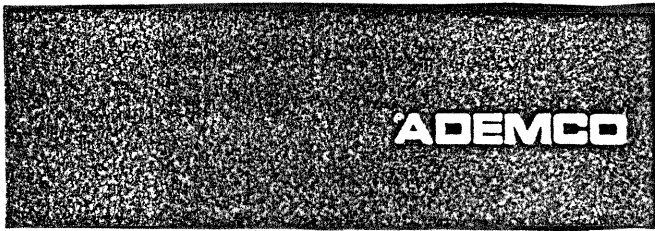


USING ALARM CLOCK AND TIMED SECURITY COMMANDS

After setting the Alarm, the Alarm Clock icon appears on the watch face. The Antenna icon also appears on the display if a security function is to be transmitted.

- Once the Alarm Clock is set, it triggers every day at the desired time, and will transmit a security command (if any) at that time.
- To set/disable Alarm Clock mode, select Alarm Clock using MODE, then use START/STOP to set the desired state (ON or OFF).
- When the Alarm Clock triggers, the watch beeps for 20 seconds. However, if the watch was set to transmit a security command, only standard security tones (described later in this document) will sound when the Alarm Clock triggers.
- Press any button to turn off a triggered Alarm Clock.

SETTING TIME AND DATE

To set the time and date on your Security Watch, start from Time of Day Mode, then follow these steps:

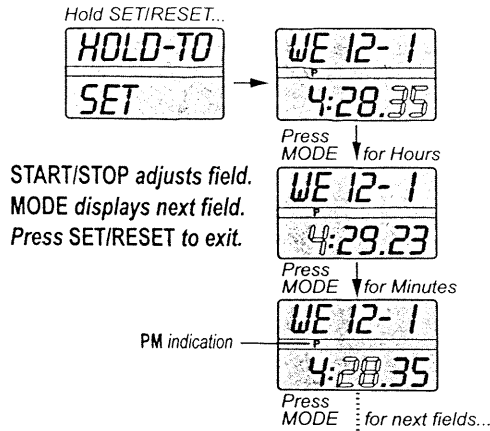

1. Press/hold SET/RESET for three seconds. The watch displays HOLD TO SET, then the Time of Day screen, with Seconds flashing
2. Use START/STOP to adjust each setting, and MODE to cycle through the settings in this order: Seconds, Hour, Minute, Month, Date, Day, Format, Chime, and Beep.


- Format selects 12 or 24 Hour time display.
- Chime causes a beep at the top of each hour.
- Beep, when active, causes a beep whenever any Watch button is pressed.

3. Press SET/RESET to exit.

NOTE: The center display shows AM/PM designation when setting Hour. AM shows no display; PM shows P on center bar.

SETTING COUNTDOWN TIMER

The countdown timer may be used for periods of up to 24 hours, by following these steps.

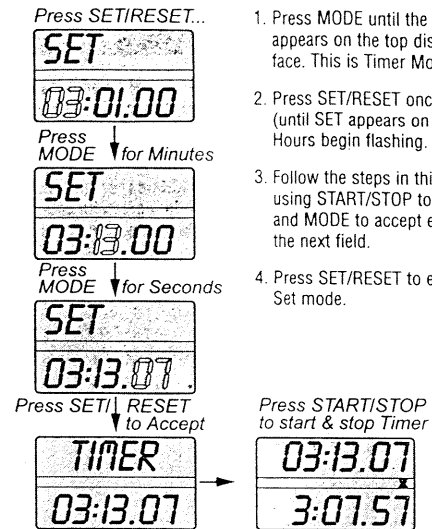

1. Press MODE until the word TIMER appears on the top display of the watch face. This is Timer Mode.
2. Press SET/RESET once or twice (until SET appears on the watch face). Hours begin flashing.
3. Follow the steps in this diagram, using START/STOP to adjust field, and MODE to accept entry and go to the next field.
4. Press SET/RESET to exit Timer Set mode.

OPERATING COUNTDOWN TIMER

- Press MODE until you reach Timer mode.
- Press START/STOP to start or stop the countdown timer. When the Timer is running, the hourglass icon appears. When the Timer reaches zero, the watch beeps for 10 seconds, and the watch displays TIMER DONE. (To stop the beep, press any button.)
- If you stop the timer manually, you may reset it by pressing SET/RESET.

USING CHRONOGRAPH (STOPWATCH)

Your watch may be used as a chronograph (stopwatch), by following these steps:

1. Press MODE until the watch displays CHRONO. This is Chronograph Mode.
2. Press START/STOP to start and to stop timing.
3. Press/hold SET/RESET to reset the Chronograph.

NOTE: You can leave and re-enter Chronograph Mode while the chronograph is running.