

User Guide

This document provides operating instructions for using a proximity tag (referred to as a prox tag) with your AlphaProx Keypad. Refer to your security system User Guide for all other security system functions and operating procedures.

Prox Feature

The 6160PX Keypads are compatible with Prox Tags that can be used to alternately Arm and Disarm the system. Presenting a prox tag is functionally equivalent to entering a 4-digit security code.

Arming or Disarming the System


To arm or disarm the system, present the prox tag at the location of the Proximity Label (bulls eye) on the front of the keypad. The system beeps to confirm that it has been armed or disarmed.

Arming (if system is disarmed):

System arms in the AWAY mode.

Disarming (if system is armed):

System disarms and, if an alarm occurred, alarm sounding is silenced.

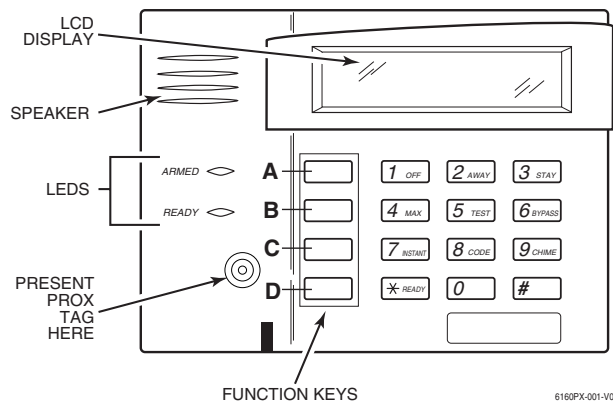

In the Event of an Alarm

If the system is armed and an alarm occurs, present your prox tag to silence the alarm and disarm the system. Present the tag a second time to clear the alarm from memory.

If a fire or carbon monoxide (CO) alarm occurs, you can silence the alarm with the prox tag, but you must use your 4-digit security code to clear the alarm from memory.



Presenting the tag a second time following a fire or carbon monoxide alarm will rearm the burglary portion of the system.

