


Required Items for Installation:

- Video Server and power adapter (included)
- Broadband (Cable, DSL, or Fiber-optic) Internet connection with router
- Windows or Mac computer
- Login/password for the customer account
- Ethernet cable for the video server
- Analog CCTV camera with power supply (not included)
- RG-59 or RG-6 coaxial cable with BNC connectors

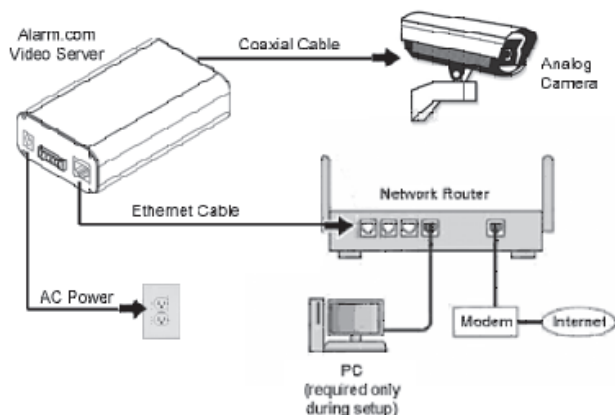

Install the Camera(s):

1. Use the coaxial cable to connect the analog camera to the BNC connector on the video server.
2. Use a standard Ethernet cable to connect the video server to the network router.
3. Connect the video server's AC adapter and plug it into a non-switched outlet.
4. From a computer on the same network as the camera, log into the customer's account at www.alarm.com.
5. Type www.alarm.com/addcamera into the browser's address bar and follow the on-screen instructions to add the camera to the Alarm.com account.

Questions? Contact Alarm.com Dealer Support at
1.866.834.0470 or support@alarm.com.

