



Water View Sight Glass Installation Instructions

1) Remove the nut, the thick washer, and the thin washer from the shank of the spigot. See figure 1

2) Wash the plastic portion of the spigot along with the nut and 2 washers in warm water with a mild dish detergent, rinse very well.

3) Put the thin washer back on the shank of the spigot, push it all of the way on until it reaches the flange. See figure 2

4) Insert the shank of the spigot into the hole in the bottom canister so that the tube portion of the sight glass is parallel to the base of the unit. (pointing to the 9 o'clock position) See figure 3

5) Holding the spigot with your left hand, put the thick washer on the shank of the spigot inside of the canister, push it on as far as you can, making it snug up against the canister.

6) Continue holding the spigot with your left hand while putting on the nut with your right hand and tighten the nut as tight as you can with your right hand. (do not use tools)

7) While holding the nut firmly with your right hand, with your left hand, turn the spigot clockwise 90 degrees to the upright (12 o'clock) position. See figure 4. You are done. When putting your first batch of water in the system, have the spigot hang over your sink should there be a leak, if there is a leak, retighten.

Spigots only leak when they are not tight enough.

