




BTP SERIES | BLUETOOTH PATIO SPEAKER

QUICK START GUIDE


CONTENT:

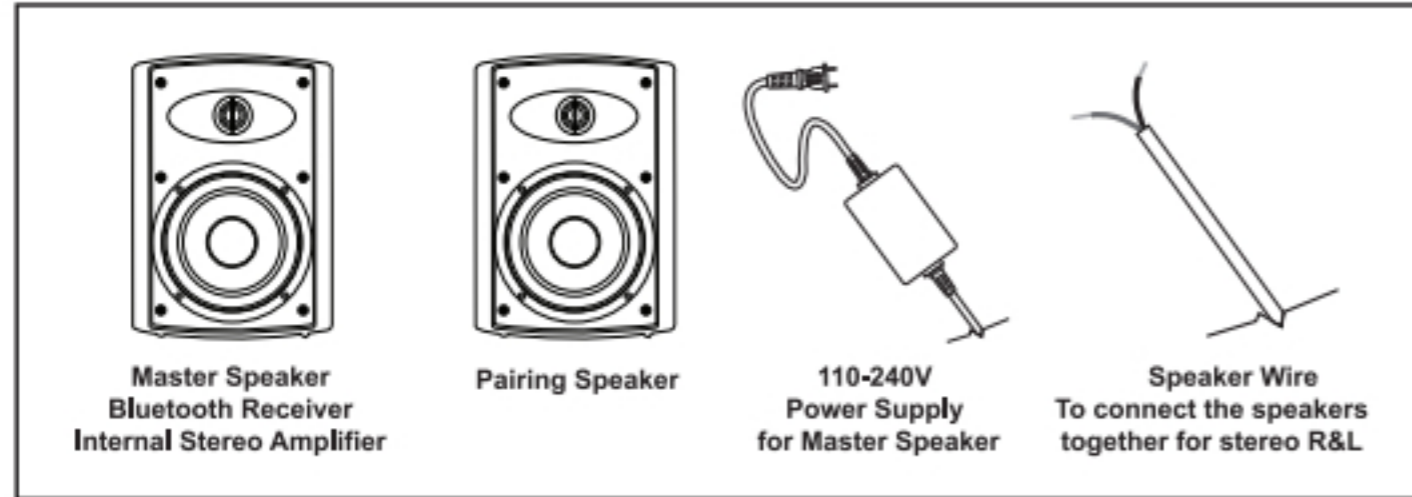

Basic Setup of the BTP

- 1) Determine the ideal location where the Patio Speakers are not exposed directly to the elements. Note: speakers typically should be placed between 8 to 12 feet apart for proper stereo separation.
- 2) The Master Patio Speaker needs to be located near an AC outlet where you can connect the Power Supply to the Master Speaker in order provide the electrical current needed for the Internal Stereo Power Amplifier and Bluetooth Receiver.
- 3) The Pairing speaker must be connected to the Master Speaker with the Speaker Cable that is supplied with the kit. The length of the speaker cable can be cut down for an exact fit but should not be extended beyond 30 feet.

Back View

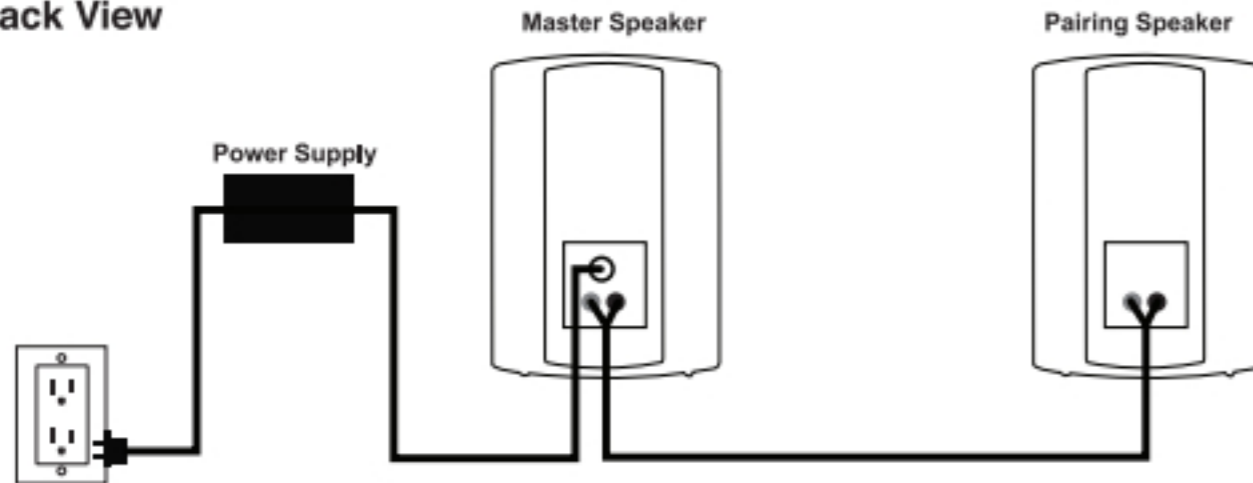

“State of the art” Bluetooth Operation Connects to any Bluetooth enabled device

Sync to bluetooth-enabled devices like smartphones and tablets

Bluetooth Range
30-50 Feet

Range may vary:
Distances, both unobstructed and obstructed, may differ depending on device you are syncing up to the BTP Speakers.

Make sure both your Bluetooth device and the BTP Speakers are turned on.

To pair two Bluetooth enabled devices, both the Bluetooth Device and the Speakers must be turned on and fully powered or fully charged. Bluetooth controls are typically found in the device's Setting or Connections menu. The Speakers will output a Bluetooth Sync code that will be received by the Bluetooth Device. Settings such as Volume, Mute, etc., will be controlled directly from your Bluetooth phone, tablet or other device.

Only one connection at a time:

The Speakers sync with only one device at a time. You must disconnect the current device before Syncing to another device.

