

PFS16 Printer Alarm

End User Agreement: By installing this device, the end user of this device assumes all liability as a result of their application and use of this product. If the end user does not agree, the end user is required to return this device for a full refund within 30 days of purchase.

Installation

1. Clean top of printer and dry thoroughly. Windex works well.
2. Peel off red backing of the tape on bottom of alarm and remote sensor head
3. Mount alarm on the side of printer near the paper tray as shown in the example photo. Try not to press tape into place until alarm is in a good position.
4. Route remote head down into paper tray. Keep the wire hugging the wall so that it does not interfere with paper exiting printer.
5. Position remote sensor in the paper tray in a position where the paper exiting the printer will fall onto the remote sensor.
6. Press down on the alarm and the remote sensor head to seat tape securely.
7. Plug power supply into the alarm and plug into wall outlet.
8. Immediately after the alarm is plugged in, the alarm is ready to go.



Operation

1. The alarm will beep as paper passes in front of the sensor head. The LED will begin flashing at this time. The alarm will continue to beep and flash until the paper is removed

Care Instructions

1. As with any electronic equipment, avoid moisture. Clean with a dry or slightly damp cloth.
2. Avoid obstruction of the sensor head, as anything that passes in front will cause an alarm.
3. If you have any questions, comments or problems with this device, please send an e-mail to: sales@creativemicrotech.com or visit www.creativemicrotech.com

www.CreativeMicroTech.com
For Commercial Use Only