


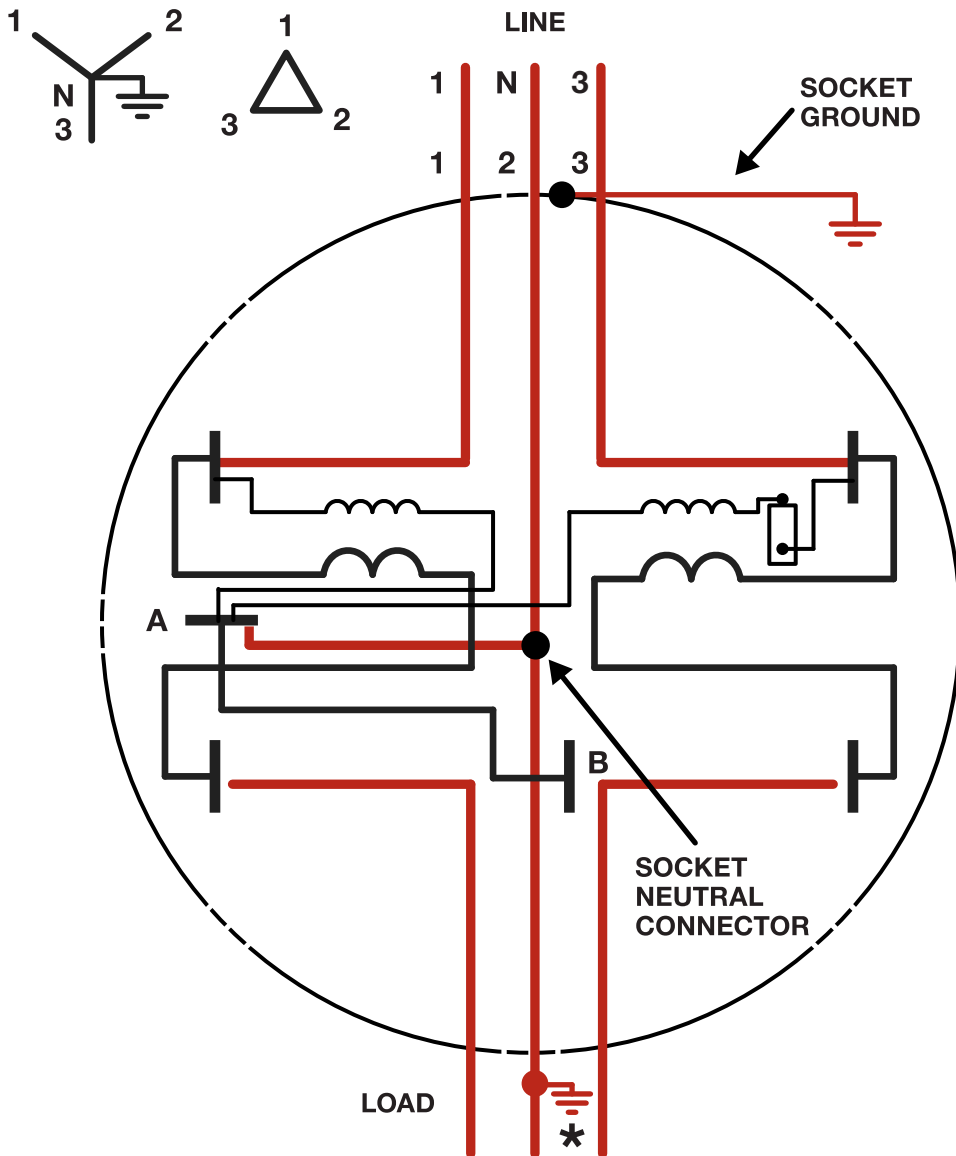

WIRING DIAGRAM FOR 3-WIRE & 3-WIRE, 3-PHASE CIRCUITS FORM 12S

Note: Mount fifth terminal in position "A" for vertical socket. Change to position "B" for horizontal socket. To mount meter in 7- or 8-jaw socket, the fifth terminal must be in position "B", properly aligned with its socket jaw.

FRONT VIEW



* **Note:** If line 2 is grounded, a socket having the line 2 connector attached directly to the socket case may be used. If line 2 is not grounded, a socket with the line 2 connector insulated from the case must be used to avoid inadvertent grounding of line 2.



HIALEAH METER
Meters you can believe in since 1954.

Best prices. Best service. Best meters.
Call Us Today: 1.800.654.0821