

# WIRELESS KEYLESS ENTRY – MODEL SERIES 66 AND 740

## FEATURES OF THE KEYPAD TRANSMITTER

**Personalized Code:** Up to 10,000 possible combinations. Code can easily be changed if desired.

**Operation:** Opener activates when 4-code digits and ENTER button are pressed.


The Keypad Transmitter will open and close the door even if the Door Control Lock Switch feature is ON.

If wrong numbers are accidentally pressed, correction can be made immediately. The ENTER key will transmit only the last four digits.


The keypad will blink for 15 seconds after the code is transmitted. During that time, you can STOP or REVERSE door travel just by pressing the ENTER key.

The keypad transmitter can be used with garage door opener receivers having a yellow, grey, white or green "learn" button.

## Setting the Code

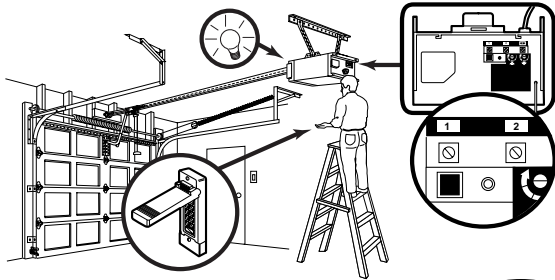

1. Press and release the "learn" button on motor unit. The learn indicator light will glow steadily for 30 seconds.
2. Within 30 seconds, enter a four digit personal identification number (PIN) of your choice on the keypad. Then press and hold the ENTER button.
3. Release the button when the motor unit lights blink. It has learned the code. If light bulbs are not installed, two clicks will be heard.

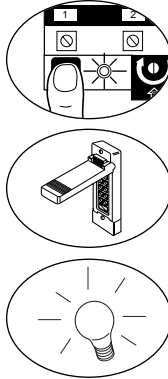

## The Keyless Entry Battery


### ⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH:

- NEVER allow small children near batteries.
- If battery is swallowed, immediately notify doctor.

The 12 volt battery should produce power for at least one year. Replace when the keypad illumination becomes dim.

Dispose of old batteries properly.

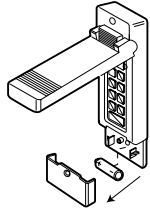

NOTICE: To comply with FCC and or Industry Canada rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### ⚠ WARNING

To prevent possible SERIOUS INJURY or DEATH from a moving gate or garage door:

- ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote control transmitters.
- Activate gate or door ONLY when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

## Installation



Open the keypad cover and remove the battery compartment screw. Take out the battery. *Note the battery polarity as marked on compartment.*

**Follow the installation instructions described below.**

1. Center the keypad at eye level against the selected location on garage exterior as shown.

**NOTE:** For a one-piece door on a brick, stone or aluminum sided garage, use the optional location shown in the illustration to avoid injury as the door swings up and out.

2. Hold keypad firmly with cover half open so both the top and bottom mounting holes are visible. Use a punch to mark each hole. Drill two 1/8" pilot holes. Fasten securely with screws provided.
3. Insert the plug provided into the top hole to cover the fastening screw. Return the battery, being sure to observe polarity. Re-fasten compartment cover.

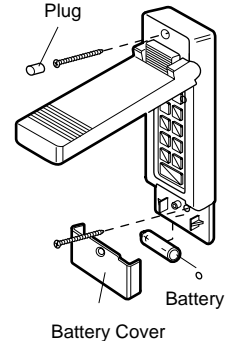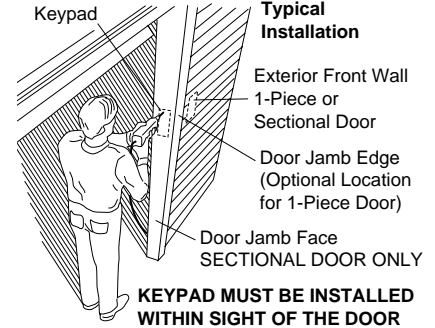

**FOR SERVICE DIAL OUR TOLL-FREE NUMBER:  
1-800-654-4736**

# SYSTEME D'OUVERTURE SANS CLE – SERIE 66 ET 740

## CARACTERISTIQUES DU SYSTEME D'OUVERTURE SANS CLE

**Code personnalisé:** 10 000 combinaisons possibles. Le code peut être changé facilement si désiré.


**Fonctionnement:** l'ouvre-porte se déclenche quand on appuie sur les quatre chiffres du code et la touche de COMMANDE (ENTER).

Si on appuie par erreur sur des chiffres incorrects, on peut refaire le bon code immédiatement, la touche de COMMANDE (ENTER) ne transmettra que les quatre derniers chiffres.



Le clavier s'éclaire pendant quinze secondes après transmission du code. Durant cette période vous pouvez ARRETER ou INVERSER le mouvement de la porte, en appuyant simplement sur le touche de COMMANDE (ENTER).

Le système d'ouverture sans clé peut être utilisé avec ouvre-portes de garage possédant un bouton «learn» jaune, gris, blanc ou vert.

### Programmation du code

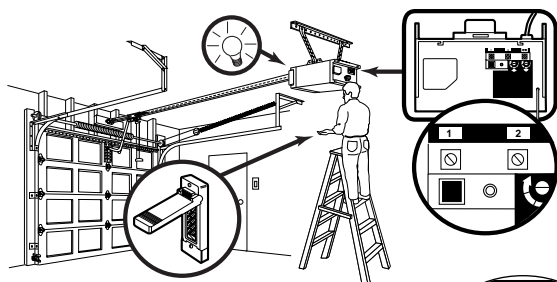

1. Enfoncer et tenir le bouton LEARN sur le moteur. Le témoin lumineux learn s'allumera en continu pendant 30 secondes
2. Dans un délai de 30 secondes, introduire un numéro d'identification personnelle (NIP) à quatre chiffres de son choix sur le pavé numérique. Enfoncer et tenir ensuite le bouton ENTER.
3. Relâcher le bouton lorsque l'éclairage du moteur clignote. Il a appris le code. Si les ampoules ne sont pas posées, deux clics se feront entendre.

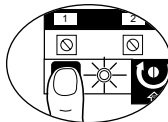

### La pile de système d'ouverture sans cle


## AVERTISSEMENT

Pour prévenir d'éventuelles BLESSURES GRAVES ou la MORT:

- Ne JAMAIS laisser de petits enfants à proximité des piles.
- Aviser immédiatement un médecin en cas d'ingestion de la pile.

La pile de 12 volts doit fournir du courant pendant au moins un an. Remplacez la batterie si l'éclairage du clavier faiblit.

Se débarrasser des vieilles piles convenablement.

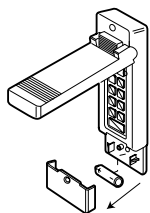

NOTICE: To comply with FCC and or Industry Canada rules, adjustment or modifications of this receiver and/or transmitter are prohibited, except for changing the code setting or replacing the battery. THERE ARE NO OTHER USER SERVICEABLE PARTS.

Tested to Comply with FCC Standards FOR HOME OR OFFICE USE. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## AVERTISSEMENT

Afin d'éliminer les risques de BLESSURES GRAVES ou de MORT découlant de l'actionnement d'une clôture ou d'une porte de garage:

- TOUJOURS garder les télécommandes hors de la portée des enfants. NE JAMAIS laisser un enfant manipuler une télécommande ni jouer avec elle.
- Actionner la clôture ou la porte UNIQUEMENT lorsqu'elle est clairement visible, correctement ajustée et que le mécanisme est libre de toute entrave.
- TOUJOURS garder la clôture ou la porte de garage en vue jusqu'à sa fermeture complète. NE permettez à quiconque de passer lorsqu'une clôture ou une porte est en mouvement.

### INSTALLATION

Ouvrez le couvercle du clavier et otez la vis du compartiment de la batterie. *Remarque la polarité de la pile, qu'indique dans le compartiment.*



Suivez les instructions de montage tel que décrit ci-dessous.

1. Centrez le boîtier de commande sur le chambranle de la porte de garage, à hauteur des yeux.

**REMARQUE:** Pour une porte rigide avec un garage dont les parois sont en briques, en pierres ou en aluminium, utilisez l'emplacement optionnel indiqué sur l'illustration afin d'éviter toute blessure lorsque la porte bascule.

2. Appuyez fermement le boîtier contre le chambranle en maintenant le couvercle à moitié ouvert, de manière à voir les trous de montage du bas et du haut. Utilisez une pointe pour marquer chaque trou. Percez deux trous-pilotes de 3mm (1/8"). Fixez solidement le boîtier avec les vis fournies.

3. Insérez le cache-vis fourni dans le trou du haut pour recouvrir la vis de fixation. En installant la batterie, assurez-vous de bien observer la polarité. Réajustez le couvercle du compartiment.

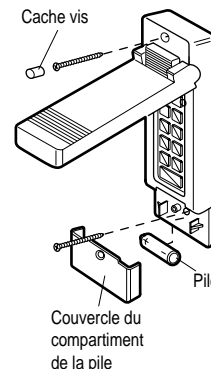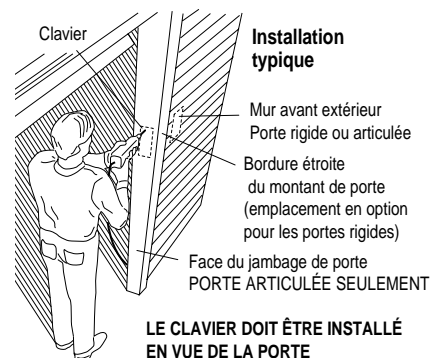

POUR LE SERVICE, PRIÈRE DE COMPOSER NOTRE NUMÉRO SANS FRAIS:  
1-800-654-4736