


Mariner II Shower Heads

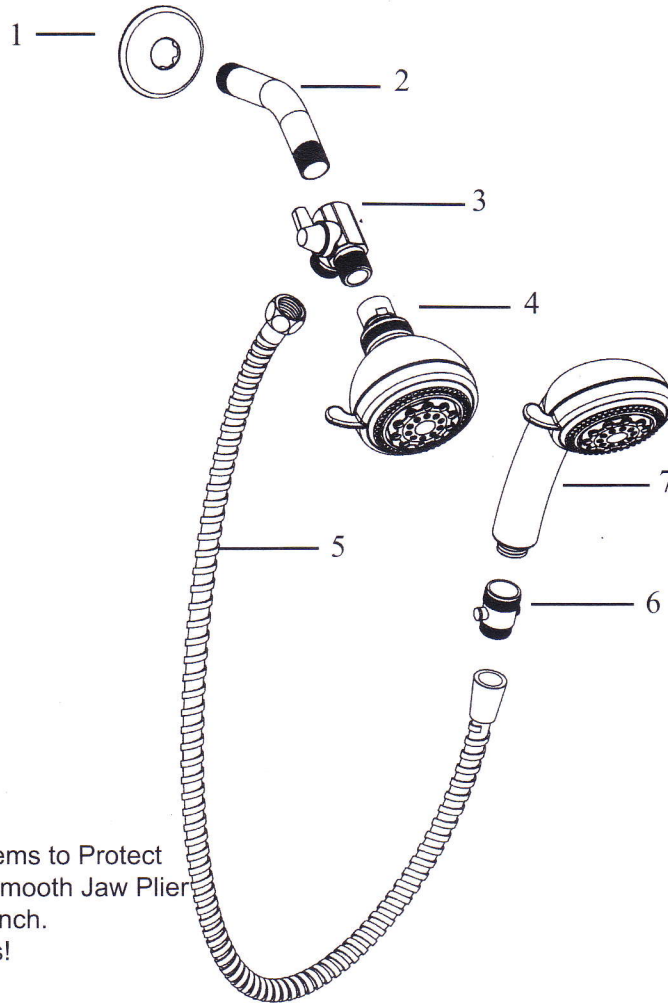

Contents:

- 1) Shower Flange
- 2) Shower Arm
- 3) 3 Way Diverter Valve
- 4) Shower Head
- 5) 69" Shower Hose
- 6) 98% Flow Control Shut Off
- 7) Hand Held Shower Head
- 8) 24" Shower Slide Bar
- 9) Roll of Teflon Tape (not shown)

Use a Cloth Rag Over Finished Items to Protect Fittings When Using Pliers. Use Smooth Jaw Pliers or Open Ended Smooth Jaw Wrench. You Don't Want to Mar the Fittings!

Wrap Teflon Tape Clockwise Four Times Around Threads Items (2) Shower Arm Both Ends. Screw into Wall Fitting and Tighten.

Screw on Diverter Valve (3) to Shower Arm (2)

Attach Hose (5) to Diverter (3) and to (6) 98% Flow Control. Make Sure Rubber Hose Washers and Teflon Tape Are Used.

Screw on Shower Head (4) to 3 Way Diverter Valve. Handheld (7) into 98% Flow Control.

Locate Socket (A) at a Suitable Height. Drill Hole and Insert anchor in wall. Place the Screw through the Socket and Tighten Firmly.

Locate Socket (B) 24" below from Center Holes of Sockets. Drill hole and Insert Anchor in Wall. Place the Screw through the Socket and Tighten firmly. *-1/8" Bit*

Attach bracket (D) to socket (A). Tighten Hex Set Screw (C) to hold in place.

Attach Bracket (B) to Socket (G). Tighten Hex Set Screw (C) to hold in place.

Place Hand Held Shower Head in (E) Adjustable Shower Head Swivel Connector.

