

INSTALLATION INSTRUCTIONS  
Cobra Aluminum High Riser Manifold

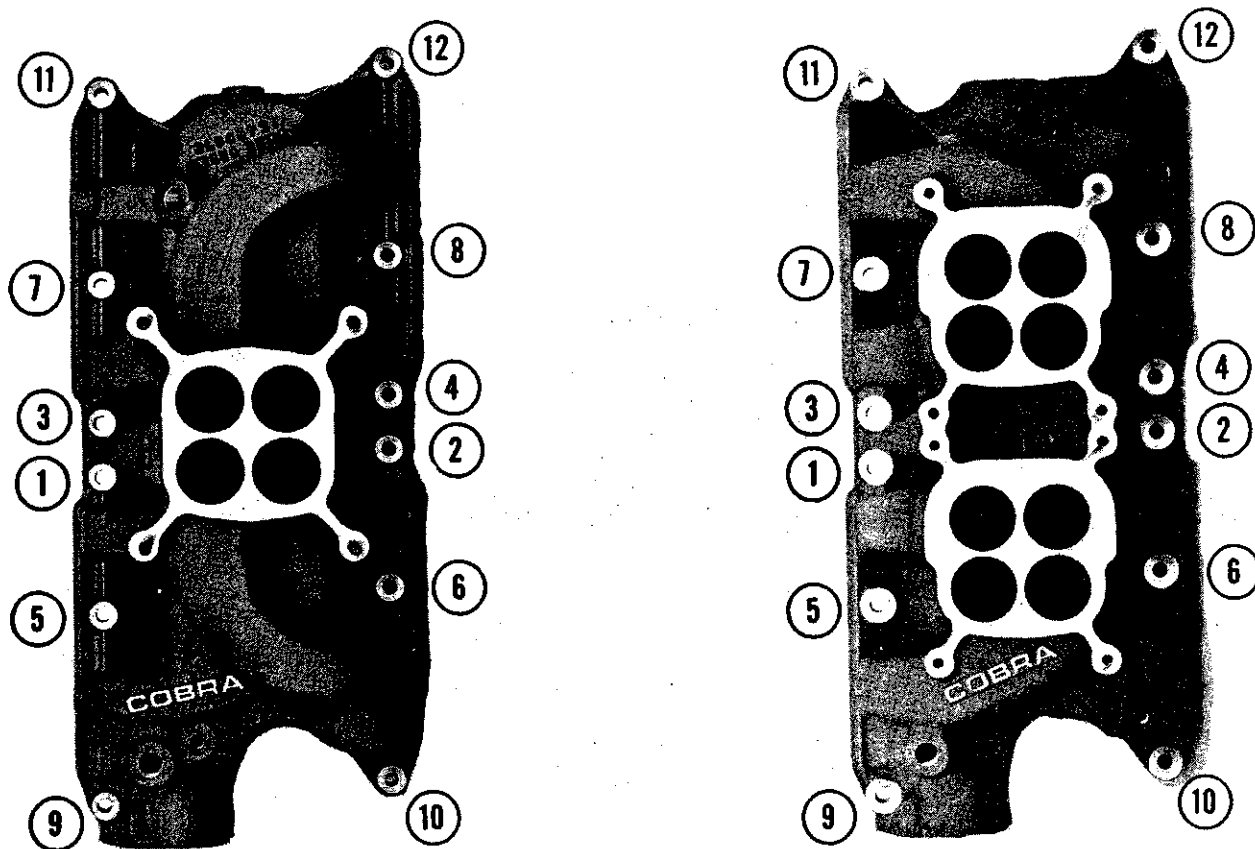


Figure 1. Aluminum High Riser Manifold

A. Torque Sequence Specifications. All nuts should be torqued in sequence as shown in Figure 1.

1. First torque to 5-foot pounds (threads oiled).
2. Then torque to 8-foot pounds.

CAUTION: Number 11 nut should not be torqued beyond 8-foot pounds (nuts 9, 10, 11 and 12 are unsupported and care should be taken on these).

3. All nuts, except number 11, should be torqued to 15-foot pounds.