

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

Instructions for Installation and Care of
Arctic Cat / Textron Prowler Pro
Full Aero-Vent Polycarbonate Windshield
AC-PRO-WD05

1. Be sure to read these instructions thoroughly before opening and installing the windshield.
2. Check over the parts included in the cartons with the parts list shown below:

1 ¼" Stainless Bolts	4 each
1 ¾" Stainless Bolts	2 each
2" Stainless Bolts	2 each
Small Washers	8 each
Metal Brackets	4 each
Plastic Thumb Nuts	4 each
Lock Nuts	4 each
Nylon spacers	2 each
1 ¼" Black Spacer	2 each
Plastic Slide Fasteners	14 each
136" side Bulb Gasket	1 each
Small Polycarbonate piece	1 each
Vent Sliders	2 each


3. Start by pulling it out of the box; find a clean area to lay it down and install the hardware. Next take the 136" Side Bulb rubber gasket and starting at one end firmly place along the bottom edge of the windshield. You will need to peel back the protective film from the edge to install the gasket. If you leave the bulk of the protective film on while installing you can avoid scratching the windshield. Ensure that the gasket is seated **fully home** on the along the edge to insure a good fit of the windshield.
4. Next take the two vent sliders and install them to the inside surface of the windshield. Start by installing the handle first. Take the 2" bolt, black spacer and lock nut and install them into the round holes on the sliders. Make sure that the bolts are installed on opposite sides of the sliders so that you have mirror images of each other when done. The pictures below show how to install the bolts.




5. Then place the sliders on the windshield so that the pointed ends are facing towards the outside edges. Place the plastic slide fasteners into the slots on the sliders and into the holes on the windshield to finish installation. See Photo Below.



6. Before installing the windshield place the small polycarbonate piece on the inside of the windshield along the top center as shown in the photo below. This piece will hold the middle of the windshield against the frame.

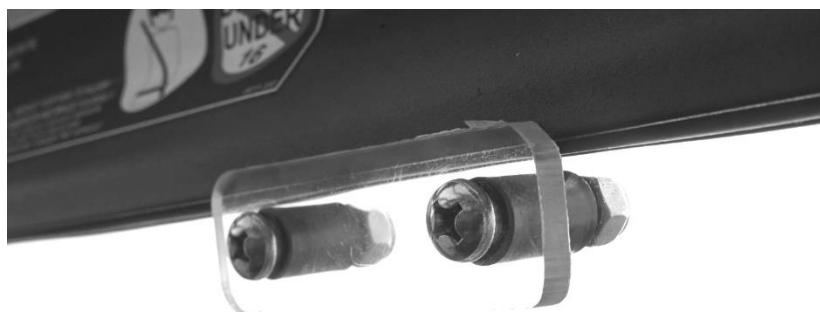

7. Now place the windshield inside the frame of the Prowler Pro. Take the Metal brackets and bolt them to the windshield from the inside using the supplied 1" bolts washer and thumbnut as shown in the picture below.

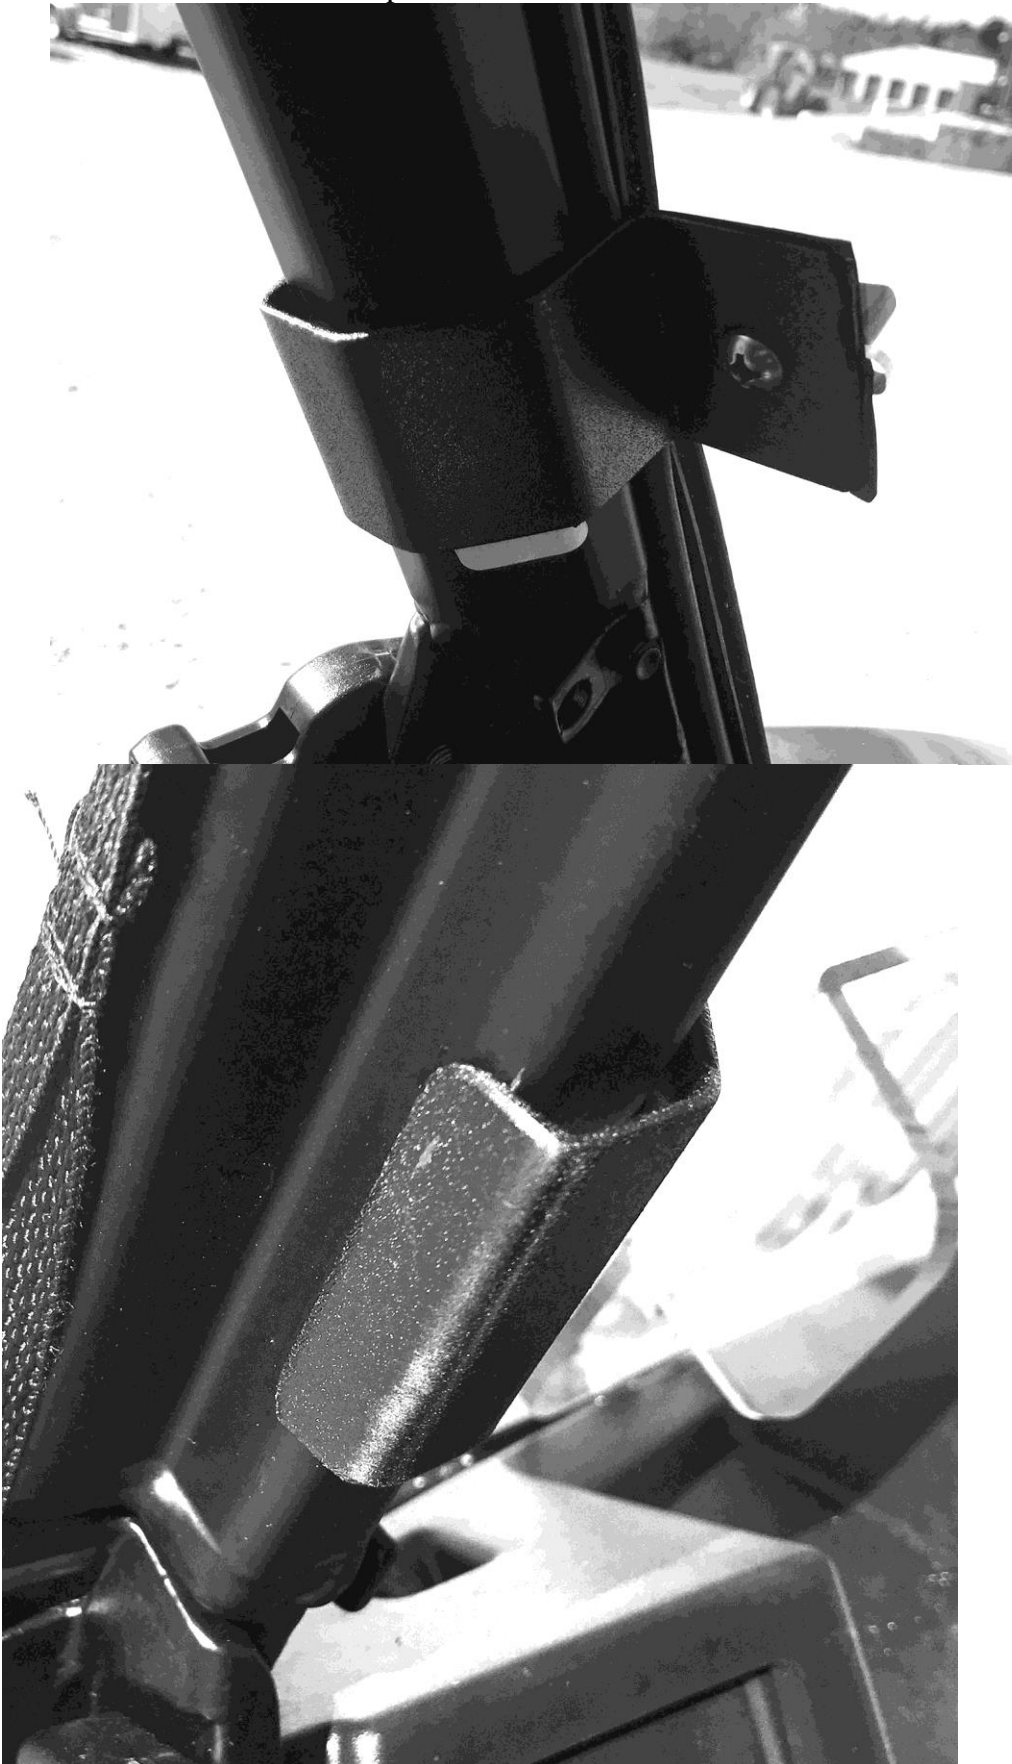

8. Enjoy, and remember- when cleaning the windshield do so gently at first with warm water and mild detergent to dislodge any grit that may scratch the Polycarbonate. After rinsing and drying with a soft cloth, you may then polish the windshield with an appropriate commercially available plastic polish, also available from Over Armour. This will ensure many seasons of clarity and keep scratching and swirling to a minimum. Never use cleaners such as Windex that contain ammonia as doing so may adversely affect the windshield.

Thank You for your purchase!

Over Armour Offroad
2515 Bypass Rd, Flemingsburg, KY 41041
Phone: 606-845-7439 or 606-748-5136

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly as it was originally packaged from the factory to get a full refund for the product! The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroad many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All Lexan windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement on lexan windshields will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad
www.overarmouroffroad.com