

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of
Landmaster LM500
Top Cap Canopy
AL-LM500-TC01

CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE. Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when ambient temperature is 70°F or warmer. If installed in cold weather, warming the adhesive Velcro strips before installation is recommended.

1. Open the carton and remove the rolled up Top Cap on a large flat surface that is clean and free of dirt.
2. Check over the parts included in the carton with the parts list shown below:

Top:


Velcro Hook strips: -----	4 each	6" long
Double-Sided Velcro w/ 30" Straps Attached -----	4 each	
30" Straps with grommets -----	2 each	
Top Panel -----	1 each	

3. Top Panel

- a.** If you have a Lexan windshield already installed on your LM500 you can do one of two things. You may use the straps with Velcro sewn to one end and wrap the roll cage under the windshield with the 6" adhesive Velcro strips. Then wrap the double sided Velcro sewn to the end of the strap around the adhesive Velcro. If you choose you may also drill a 5/16" hole in the windshield and bolt the strap with the grommet directly to the windshield. The bolt should be installed from the inside out with a washer then strap, another washer and a locknut. Tighten all the way down and then loosen the locknut ½ a turn to free the strap to allow it to swing around to any position.
- b.** Now place the top over the entire vehicle, the front of the top is identified by the sides not being as steeply curved, and begin by lacing the front straps through the ladder lock buckles sewn to the front corners of the top.
- c.** Now take two of the straps that are sewn to the double-sided Velcro and wrap them around the rear bar of the roll cage halfway between the bottom and the first bend up the bar. The strap should be on the outside of the bars.
- d.** Now run those straps up and through the ladder lock buckles sewn to the rear of the top.

- e. You now need to tighten and loosen the strap of the top so that it is centered correctly and should cover the holes across the top of the windshield.
- f. If you were installing the Top by itself you would use the two remaining straps with double-sided Velcro to attach the front. You may need to cut the straps once fitted, do not cut off too much as you have nothing to hold on to and pull it tight the next time you go to install it. It is recommended to leave about 6-8" hanging from the buckles.

4.

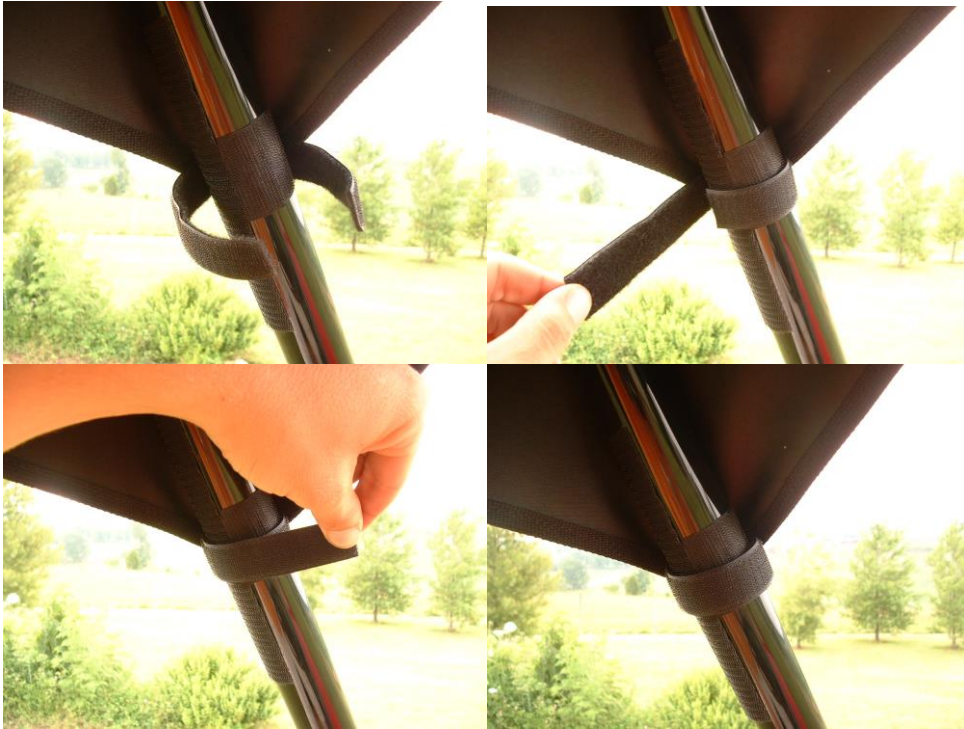

**2515 Bypass Rd
Flemingsburg, KY 41041
(606) 845-7439**

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad
www.overarmouroffroad.com

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

