

## INSTALLATION INSTRUCTIONS: *Universal Grab Handle*

### STEP 1



- Place the Neoprene Wrap in the desired location. This will be used as a spacer in the next step.

### STEP 2



- Place the Rubber Shims inside the 1.75 Plastic Clamp and set in place at each end of the Neoprene Wrap.
- There are different size holes on each side of the clamp, be sure to set with similar holes on each end.

### STEP 3




- Before attaching the Handle to the clamps, place the Soft Caps over the ends as shown.
- Align the holes of the Clamp with the corresponding holes of the Handle and insert the Barrel Nuts into the matching size hole of the clamp.

### STEP 4



- Secure the Handle with the Screws, Lock Washers and the Flat washers.

### STEP 5

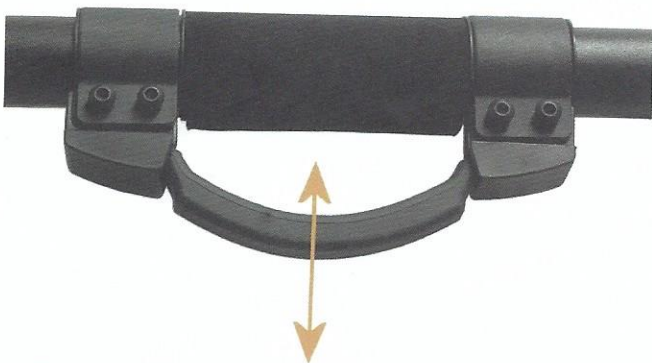

- Push and Pull the Handle to ensure proper operation and tightness of the Clamps.