

# Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041  
606-845-7439

## Instructions for Installation and Care of Can-Am Commander Full Cab Enclosure Fits Lexan Windshield CA-Commander-FC05

**CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.**

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when ambient temperature is 70°F or warmer. If installed in cold weather, warming the adhesive Velcro strips before installation is recommended.

1. Carefully open the carton and remove the rolled-up Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab.
2. This cab enclosure is made up of 5 different panels that all come together to fully enclose the vehicle. You may put on different pieces or leave other pieces off to create the enclosure that best meets your needs.



3. Check over the parts included in the carton with the parts list shown below:

Velcro Hook strips-----4 each-----12” long  
“ “-----16 each-----3” long  
“ “-----2 each-----8” long  
“ “-----6 each-----6” long  
Webbing with Velcro-----4 each  
Webbing with Grommets-----2 each  
Snap studs-----14 each (2 extra)  
Door Panels-----2 each  
Rear Window-----1 each


4. For these instructions we will be installing the entire enclosure. This will cover every piece so if you should want to install just parts of the enclosure these instructions should be sufficient.
5. The order of installation will be as follows:
  - a. Side Door Panels
  - b. Rear Window
  - c. Top Panel

## 6. Door Panels

- a. Before installing the cab enclosure, you will need to remove the seats and set them aside.
- b. Begin installation by hanging the Door Panels from the top by using the 3" adhesive Velcro strips as shown in the photos below:

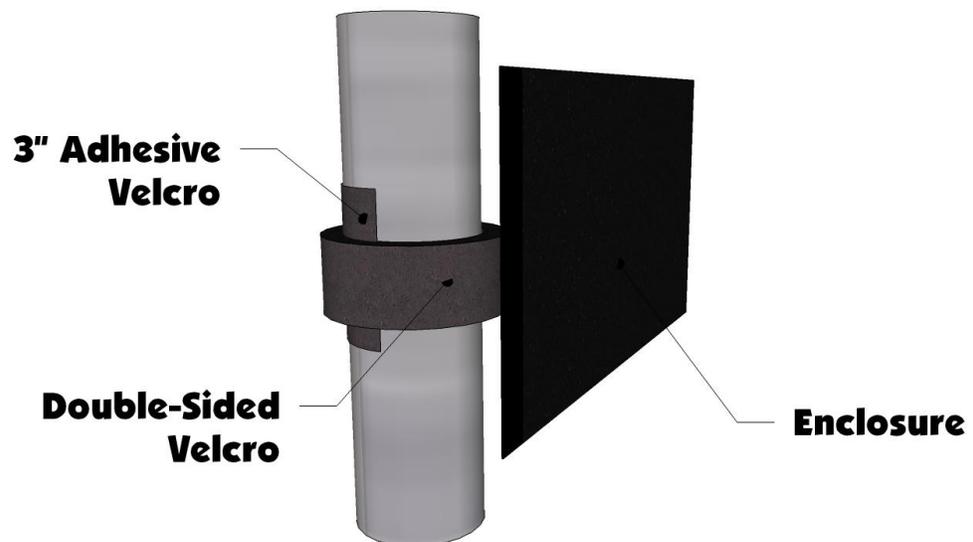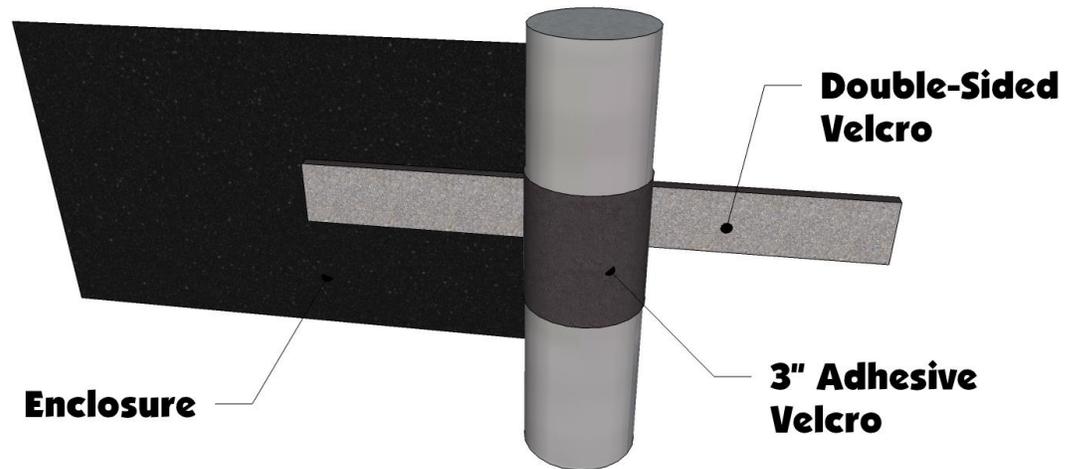

- c. Begin installation of the Door Panels by hanging them from the Double-Sided Strips along the top of the doors. Hold the door up and mark where each strip is and wrap a 3" adhesive strip around the roll cage. Now hang the door up and it will be in place to install the rest of the Velcro for the door. See Photo Below:

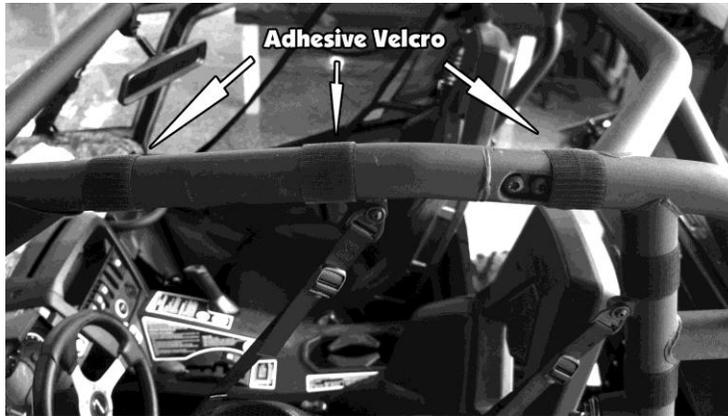


- d. Now move around the door and attach the remaining Velcro strips in the same manner. Down the front of the door place the edge of the door against the side of the windshield and run the Velcro strips under it with the 3" adhesive Velcro on the inside of the roll cage.
- e. Along the bottom of the front Top section of the door is a Velcro strip that you will use one of the 12" adhesive strips to attach it to the side of the vehicle as shown in the photo below.



- f. The rear of the door has two double-sided Velcro tabs that will attach to the first bar towards the rear of the vehicle. Apply the 6" and 12" adhesive Velcro strips between the horizontal bars facing the rear of the vehicle. (NOTE: You may need to cut the adhesive strips down to fit.) Then attach the double-sided tabs to the adhesive strips as shown in the photo below.



- g. Next work your way around the bottom of the door panel and install a snap stud for every snap on the Door Panel. **TIP: You may find it easier to snap the screw stud into the socket on the door first and then pull the Door Panel to the position it should be in and push the screw into the plastic to mark its position. Then remove the screw stud from the socket and drive it into the plastic.** See Photos Below:

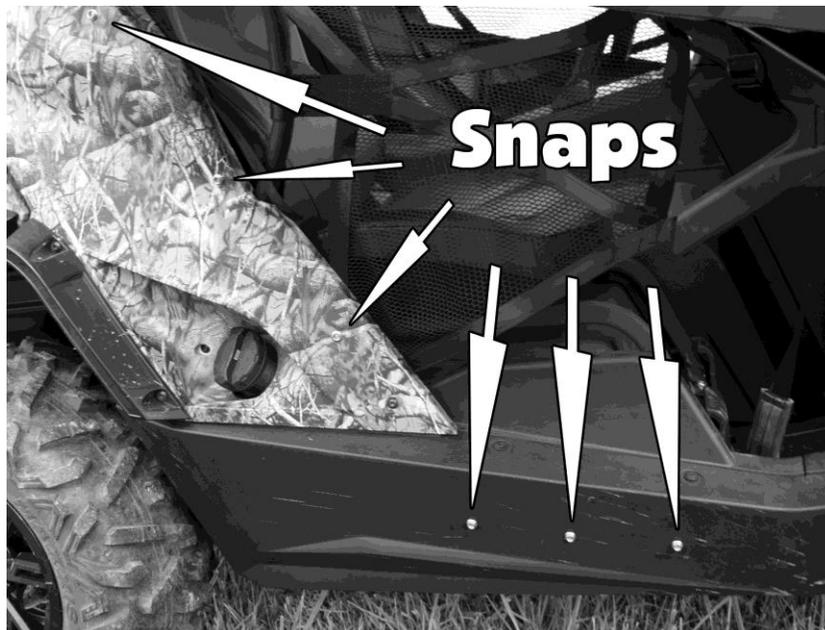

- h. The next part of the door is to place the 8” adhesive Velcro on the rear facing edge of the entrance to match up with the front bottom section of the door as shown in the photo below.



- i. Lastly on the door you will take the strap that is sewn to the center webbing strip towards the front of the door and run it through the safety net buckle and back to the ladder lock buckle. You may need to adjust the length so that it is not hard to buckle the webbing when entering the vehicle. See Photo Below:



## 7. Rear Window

- a. Begin installation of the Rear Window by hanging it by the four double-sided Velcro strips sewn along the top of the panel. The main difference here is that the top of the Rear Window will be on the inside of the roll cage as shown in the photo below.



- b. The sides of the Rear Panel will attach to the outside of the double-sided tabs that hold the rear of the door panels as shown below. (NOTE: The top Velcro strip on the sides may be a tight fit between the bars but will work just fine.) See photo in section 6e.
- c. Make sure that the Rear Window is centered correctly and then move to the bottom of the panel and take the straps down and around the side bars and then up and through the ladder lock. Do NOT pull them too tight because when the seats are replaced they will be pushing on the rear window. See Photo Below:



## 8. Top Panel

- a. The Top Panel is attached using four straps that lace through the ladder lock buckles sewn to each corner. You have been supplied with six straps, four that have double-sided Velcro sewn to one end and two that have grommet holes in one end. To work with the full enclosure, you will need to use two of each but are supplied with the extra two with Velcro if you ever want to install the top only with no windshield or other cab panels.
- b. Take the two straps with the grommet holes and attach them to the bottom clamp of the windshield with the strap pointing upwards towards the top.
- c. Now take two of the straps with Velcro and attach them to the lower portion of the rear bar of the roll cage. First wrap one of the 6" adhesive Velcro strips around the bar and then take the double-sided Velcro strip sewn to one end of the strap and tightly wrap it around the adhesive Velcro. The photo below shows how this should look.



- d. Now run those straps up and through the ladder lock buckles sewn to the front and rear of the top. The diagram below shows how the ladder locks work.



- e. You now need to tighten and loosen the strap of the top so that it is centered correctly and should cover the holes across the top of the windshield.
- f. If you were installing the Top by itself you would use the two remaining straps with double-sided Velcro to attach the front. You may need to cut the straps once fitted, do not cut off too much as you have nothing to hold on to and pull it tight the next time you go to install it. It is recommended to leave about 6-8" hanging from the buckles.

### Cleaning and Storage Recommendations:

1. Before removing the Over Armour Offroad Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour Offroad that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

# **Return Policy**

## **Over Armour Offroad**

**2515 Bypass Rd, Flemingsburg, KY 41041**  
**Phone: 606-845-7439**

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly as it was **originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 20% restocking fee will apply.**

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

**Warranty**  
**Over Armour Offroad**  
**2515 Bypass Rd, Flemingsburg, KY 41041**  
**Phone: 606-845-7439**

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Darren Royse  
Owner/Operator

[www.overarmouroffroad.com](http://www.overarmouroffroad.com)