

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of
John Deere Gator XUV 550
Full Cab with Aero-Vent Lexan Windshield
JD-550-FC04

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the John Deere 550 Full Cab with Aero-Vent Lexan Windshield. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

Adhesive Velcro Hook Strips:	36 each-----3”
“ “ “ “	4 each-----6”
“ “ “ “	2 each-----14”
Snap Stud with Screw	22 each (2 extra)
Webbing Straps with Velcro	4 each
Webbing Straps with Grommet	2 each
Cab Enclosure	4 panels


4. Begin by installing the doors. If possible, have someone else hold the door in place and mark the location of each Velcro strip sewn along the edge of the door. Now take the supplied 6” adhesive Velcro strips and wrap them around the roll cage at the marked locations. Now put the door back onto the vehicle and wrap the double-sided Velcro around the adhesive Velcro as shown in the photos below.



5. Once the door is in place it's time to install the snaps along the front and rear edges of the bottom of the door. Pull the door to where the snaps should be and mark the locations, and then screw the snaps into the plastic with a #2 Phillips screwdriver. Be sure not to over tighten the snaps as this may strip out the plastic. **INSTALL TIP:** Try putting the screw snap into the snap socket on the cab and then pull the cab to the desired location. Then push on the snap to create a mark that you can use to install the snap into the plastic. Photos below show where to install snaps:



6. Next install the rear window. Take the two 14" adhesive Velcro strips and place them on the horizontal bar that connects the two sides of the roll cage. Be sure to place them on the permanent bar, not the bar that folds down on the back seat. Place one on each side of the brake light facing towards the front of the vehicle and slightly upwards. The photo below shows proper placement:

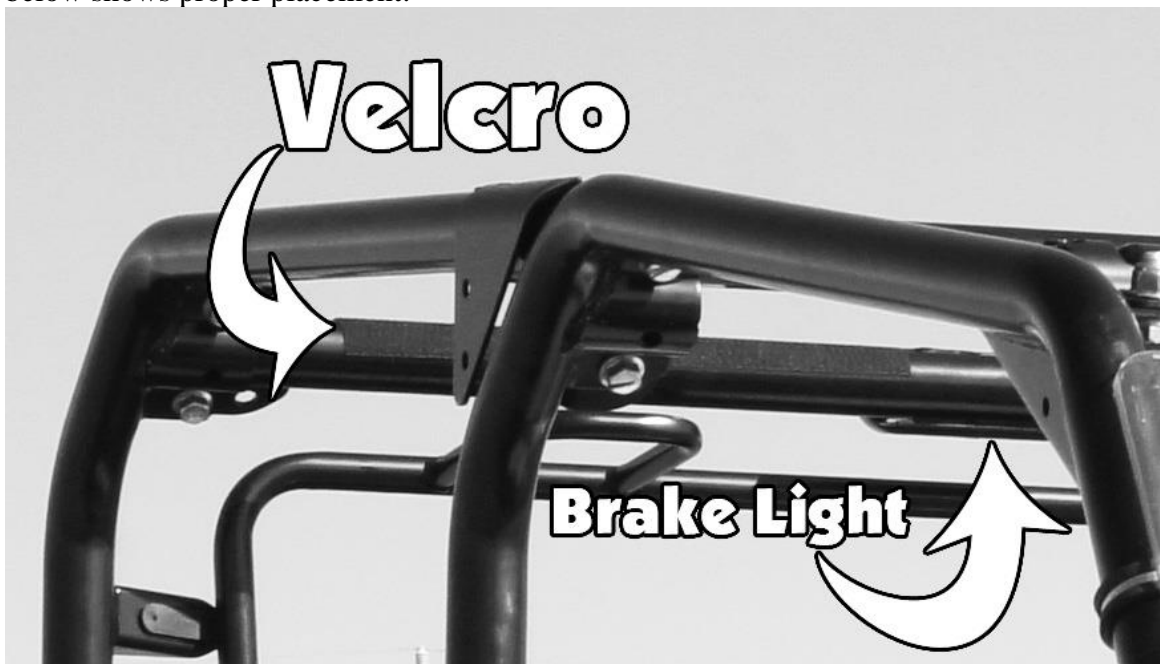

7. After placing the Velcro on the roll cage, attach the rear window. Across the top of the rear window is a cutout for the brake light, line this cutout up with the brake light and attach the rear window to the adhesive Velcro. See Photos Below:



8. Next step is to attach the sides of the rear window to the rear doors. Sewn to the rear window are straps with buckles and sewn to the rear doors are loops. Take the strap on the rear window and run it through the loop on the rear doors. Then take the strap back through the buckle and pull tight. Do not over tighten to the point that the rear window is pulled more to one side than the other; you may have to adjust them until the rear window is centered correctly. See photo below:



9. After installing rear window it's time to install the Lexan Windshield. Please refer to the Windshield instructions and return to this after that is complete. **NOTE: DO NOT INSTALL THE TOP BRACE OF THE WINDSHIELD YET. THIS IS THE LAST STEP.**



10. Once the Lexan Windshield is in place it's now time to install the roof panel. Included in your package are two sets of webbing straps. One set has grommet holes in one end and these are used for the front of the top. The other set has double-sided Velcro sewn to one end and is used for the rear of the top.
11. Start in the front and take the webbing straps with the grommet holes and attach it to the middle bolt of the windshield clamps. See photo below for reference:



12. Now take the strap and run it through the buckle sewn to the corner of the top. Do not pull tight until all straps have been attached. See Photos Below:



13. Once the front straps have been attached to the windshield move to the rear of the vehicle and attach the webbing straps with double-sided Velcro to the rear bar between the rear door and the rear window. First wrap the bar with the adhesive Velcro and then wrap with the double-sided as you did with the front and rear doors. Two extra straps have been provided for top only usage. See photo below:



14. Once all straps have been attached to the buckles pull them tight. You may need to loosen and tighten as you go to ensure that the top is centered. If waves appear across the top diagonally this is usually a good sign that one corner has been pulled tighter than another.
15. Lastly, after the top has been pulled tight install the top brace. Take a small knife and poke an x through the fabric where each hole is located. Now install as shown in the windshield instructions. See photo below:



Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad
www.overarmouroffroad.com