

# Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041  
606-845-7439

**Instructions for Installation and Care of**  
**2010 Kawasaki Teryx**  
**Soft Door Kit**  
KAW-10TERYX-SDK01

**CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.**


Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when the temperature is 70°F or warmer. If installed outside and in the cold weather, warming the adhesive Velcro strips inside just before installation is recommended.


1. **It is necessary to remove the windshield, hardtop and rear window(if applicable) prior to installing the soft cab enclosure.**
2. Carefully open the carton and roll out the enclosure on a large flat surface that is clean and free of dirt or other material that may soil the textile or scratch the clear vinyl windows of the enclosure.

**Check over the parts included in the carton with the parts list shown below:**

|                             |                   |         |
|-----------------------------|-------------------|---------|
| Adhesive Velcro hook strips | 24 each           | 3" long |
| Snap studs                  | 13 each (1 extra) |         |
| Door Panels                 | 2 each            |         |

3. Begin by holding the door up to the sides of the roll cage and mark the location of the double-sided Velcro strips sewn to the edge of the door panel. Take the door down and wrap the roll cage with the 6" adhesive Velcro strips at each of these locations.
4. Replace the door on the roll cage and wrap the double-Sided Velcro around the roll bar where you placed each 6" adhesive Velcro strip. Please see pictures below for example.

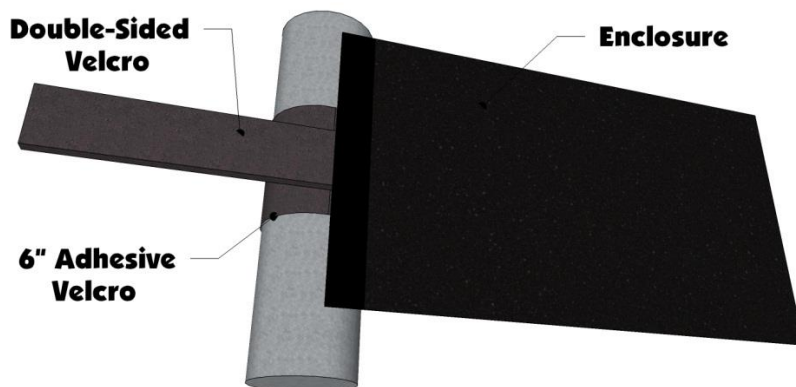

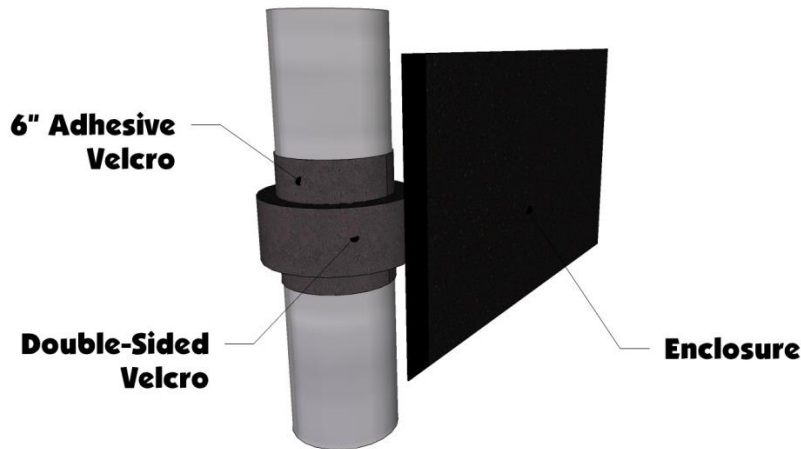

5. Next you will see a 12\" Velcro tab running down the rear of the door panel. Place the matching adhesive Velcro strip on the roll cage and attach the Velcro tab sewn along the rear of the door.
6. Mark the desired locations for the stud snaps on the insides of the front fenders and the bottom rear of the door. Then install the stud snaps to the bodywork using a #2 Phillips screwdriver. **Install Tip: To place the screw stud in the right place it helps to install the screw stud into the snap socket on the enclosure. Then pull the door straight and push the screw into the plastic to mark the location. Then pull the screw stud out of the socket and install into the plastic with a screwdriver. Avoid using an electric drill or driver as this may over tighten the screw and strip out the plastic resulting in a loose fit.**
7. To open and stow the doors, move the zipper fully rearward and fold the bottom portion of the doors up. Then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps provided. Try to form a roll approximately 2\" in diameter to ensure minimum protrusion while stowed.

#### Cleaning and Storage Recommendations:

1. Before removing the cab for storage, make sure it is clean and dry, to prevent soiling the textile and scratching the clear vinyl side/rear windows. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Let the cab dry thoroughly before attempting to roll for storage.
2. It is important that the cab be rolled up for storage rather than folding. Folding will cause undesirable creasing of both the cab textile and the clear vinyl side/rear windows. Carefully roll up the cab similar to the way it was when it was packed at the factory. On a large, clean, and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the cab into a roll approximately 8\" in diameter. Put the rolled cab back into the carton for storage at a normal room temperature. It is best not to expose the cab to either extreme hot or cold temperatures when storing.

3. A special cleaner/conditioner is available from Over Armour that will greatly increase the service life of the cab enclosure. If needed, additional hook and loop sets are available, as well as other spare parts and hardware. Contact Over Armour for information.
4. Transporting or trailering your UTV with the enclosure installed is not generally recommended. It is best to remove the enclosure before transporting your UTV.

**Thank you for your purchase!**

## Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.**

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

## Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!  
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad  
[www.overarmouroffroad.com](http://www.overarmouroffroad.com)