



\*\*\*

2515 Bypass Rd  
Flemingsburg, KY 41041  
(606) 845-7439

**Instructions for Installation and Care of**  
**Kawasaki 2016 Teryx 4**  
**Soft Door Rear Window Combo**  
**KAW-16TERYX4-DRW01**

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**


Be sure to read these instructions thoroughly before opening and installing the 2016 Teryx 4 Doors and Rear Window. The installation is best done when the temperature is 70°F or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.

1. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt. Check over the parts included in the carton with the parts list shown below:


Adhesive Velcro Hook Strips:	40 each-----3”
“ “ “ “	4 each-----5”
“ “ “ “	1 each -----30”
“ “ “ “	2 each-----40”
Snap Screw Studs-----	18

**Side Door Panels:**

2. Begin by installing the side door panels by using the double-sided Velcro strips sewn around the edges to attach the panel to the vehicles roll cage. To use the double-sided Velcro strips, you must first wrap the roll cage with a 3” piece of adhesive Velcro supplied with the cab. Then you wrap the double-sided Velcro strip around the roll cage and the adhesive strip to hold the door in place securely. The photos below show how this should look.

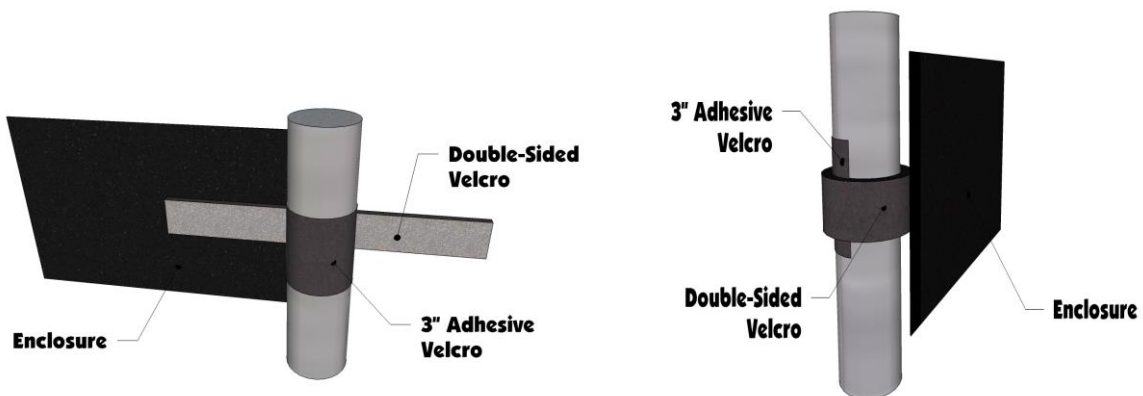

3. To hang the side panels, begin by holding the sides up and marking the locations double-sided strips on the roll cage across the top of the panel. Then lower the panel and adhere the 3" adhesive strips to the inside of the roll bars. Next raise the panel back to the roll cage and wrap the double-sided strips around the roll cage where the adhesive strips were placed. Now continue around the entire door panel placing the adhesive strips and wrapping the double-sided strips to secure the panels. See Photo Below:

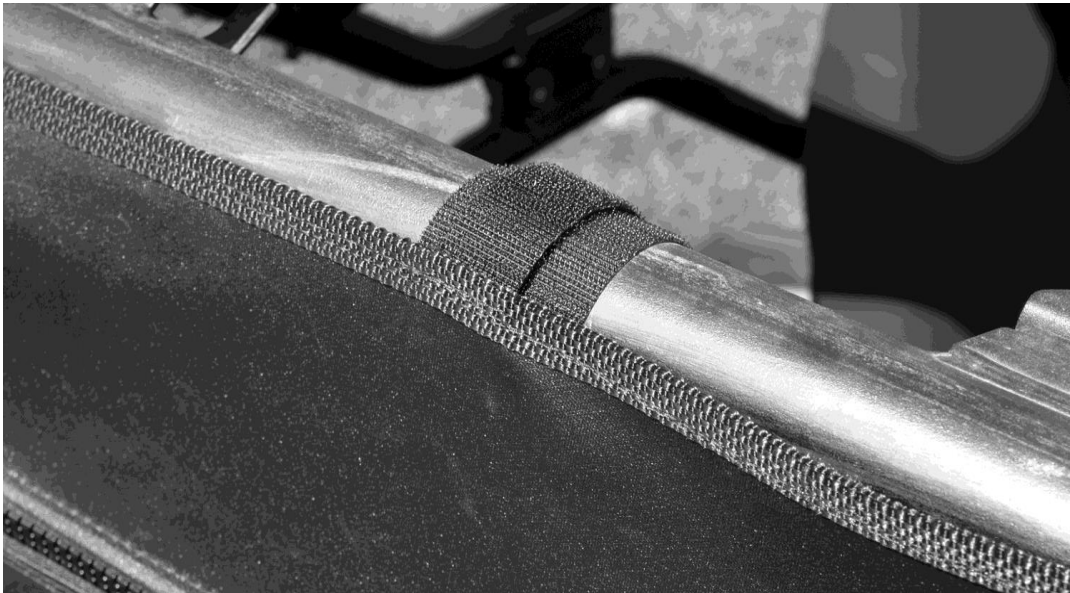

4. Next step to install the side door panels is to install the snaps along the bottom of the door panels to the plastic doors on the Teryx 4. As you will see there are four snaps that attach to the outside of the vehicle and six snaps that attach to the inside of the plastic doors. **INSTALL TIP: The best method for properly installing the snaps is to first place the screw stud into the socket on the door panel. Then pull the door tight to where it should be and push the end of the screw stud into the plastic hard enough to leave a mark. Then pull the screw stud out of the socket and screw it into the plastic where the mark was left. We recommend a screw driver and not a power driver so as to not strip out the plastic.** See Photo below:



### **Rear Window Panel:**

5. To install the rear window panel, you should begin by installing the three double-sided Velcro strips down both sides which will go under the door panels along the back edges.
6. The bottom of the Rear Window Panel has four pieces of Velcro sewn to the outside that will attach to the inside of the vehicle behind the rear seats. Remove the rear seats and affix a 4" adhesive Velcro strip to match up with Velcro sewn to the rear window panel, attach the two together and replace the rear seats. See Photo Below:



### **Cleaning and Storage Recommendations:**

1. Before removing the Over Armour Offroad Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour Offroad that will greatly increase the service life of the Cab Enclosure. If additional hook and loop sets are needed, they can also be ordered.