

Over ArmourOffroad

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439


Instructions for Installation and Care of 4010 Trans Full Cab Enclosure

KAW-4010TRANS-FC01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before unrolling and installing the Mammoth Designs 3010 Trans Full Cab Enclosure. The installation is best done when the temperature is 65 degrees F. or warmer.
2. Carefully unroll the Cab Enclosure on a large flat surface that is clean and free of dirt, preferably on grass lawn.
3. Check over the parts included in the carton with the parts list shown below:

2" Velcro Hook strips:	8 each	8" long
" "	1 each	43" long
" "	12 each	3" long
1" Velcro Hook strips:	2 each	11" long
Snap studs	11 each	
Cab Enclosure	1 each	
4. The Cab enclosure will be in 4 separate pieces when removed from the boxes, windshield/top, 2 side door panels, and a rear window. To begin, loosely drape the windshield/top over the top of the Mule roll cage. You will see two webbing straps attached to the front nose of the cab. These will go down and wrap around the bumper support bars that are diagonal as you look down between the bumper and nose of the 4010. Run the strap down, around and back up and attach the strap together and leave loose at this point.
5. Working your way to the rear of the roll cage, fit the Cab into position. You will now need to wrap the bars with the 6" adhesive hook strips directly above the air intake vents on either side of the roll cage. Firmly grasp the rear corners of the windshield/top and pull them down to the Velcro. Once you have brought the two pieces of Velcro together you will first wrap one side of the double-sided Velcro around the bar and then wrap the other side around to overlap itself creating a strong and secure hold. At this point you may need to adjust the nose piece and either loosen or tighten it before moving forward. Next locate the double-sided Velcro strips positioned in the middle of the top and repeat the same process. Be certain to clean the surfaces before applying the adhesive loop strips!

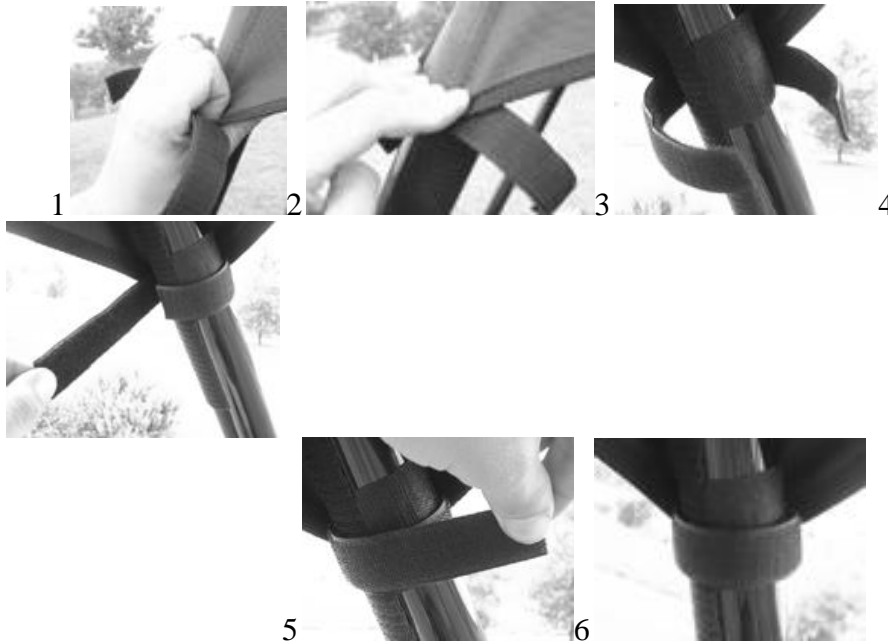

6. Position and install the eight (4 per side) 8” adhesive hook strips on the left and right sides of the roll cage on either side of the front window. Be certain to clean the surfaces before applying the adhesive loop strips! First, apply all four strips on one side of the roll cage then pull the window tightly toward the other side to minimize waviness or wrinkles in the front window.



7. Once the windshield/top is secure move to the rear and zip on the rear window across the top. Take note and mark where the bottom of the rear window meets with the divider screen and place the 43” adhesive Velcro hook strip here. Next wrap the roll cage on either side below the air intake vents and fasten the double-sided Velcro strips.
8. Once the windshield/top and rear window are in place and secured take the side door panels and zip them on starting with the top main zipper and then attach it to the rear window along the back. There are 3 double-sided Velcro strips that attach to the roll cage, take note of there positions and wrap the bars with 6” Velcro hook strips at the appropriate locations. The only other Velcro strips left are 8” long and 1” wide pieces at the rear of the door panels and will attach to the bed of the Mule as shown in the photo below.



9. Mark the desired locations for the stud snaps on the front fenders. You will use 5 per side. Then install the stud snaps to the Mule using only a #2 Phillips screwdriver.

10. To open and stow the front doors, move the zipper fully rearward then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps provided. Try to form a roll approximately 2” in diameter to assure that the door will not stick out very far while stowed.

Cleaning and Storage Recommendations:

1. Before removing the Mammoth Designs Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag (I recommend a Flannel or Micro Fiber Cloth) or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.

2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.

3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

Over ArmourOffroad
2515 Bypass Rd, Flemingsburg, KY 41041
Phone: 606-845-7439 or 606-748-5136

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly as it was originally packaged from the factory to get a full refund for the product!

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows. **All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 20% restocking fee will apply.**

If ordered from Mammoth Designs please call at 606-845-2227 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Mammoth Designs without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Mammoth Designs many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All Lexan windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement on lexan windshields will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.



To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroads Enclosure &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you

Alyson Rapp

Chief Operations Officer

www.overarmouroffroad.com

606-845-7439