

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of

Kawasaki Pro MX

Soft Rear Window

KAW-PROMX-RW01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Kawasaki Pro MX Soft Rear Window. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

Adhesive Velcro Hook Strips:

				<u>Rear Window</u>
“	“	“	“	2 each-----10”
“	“	“	“	2 each-----22”
“	“	“	“	1 each-----25”
“	“	“	“	1 each-----42”

REAR WINDOW


1. Begin by placing the 8” and 25” adhesive Velcro strip on top of the top rear bar that runs from one side to the other. The 25” strip goes between the two roof brackets. The photo below shows how this should look.



2. Next place the two 22" adhesive Velcro strips down the side bars. You will need to cut the Velcro so it adheres to each part of the frame. See photos below.



3. The bottom of the Rear Window is held in place by the 42" adhesive Velcro strip. The strip goes across the bottom on the plastic from one side to the other. The adhesive strips go on the bottom of the overhang on the plastic. The photos below show what it should look like.

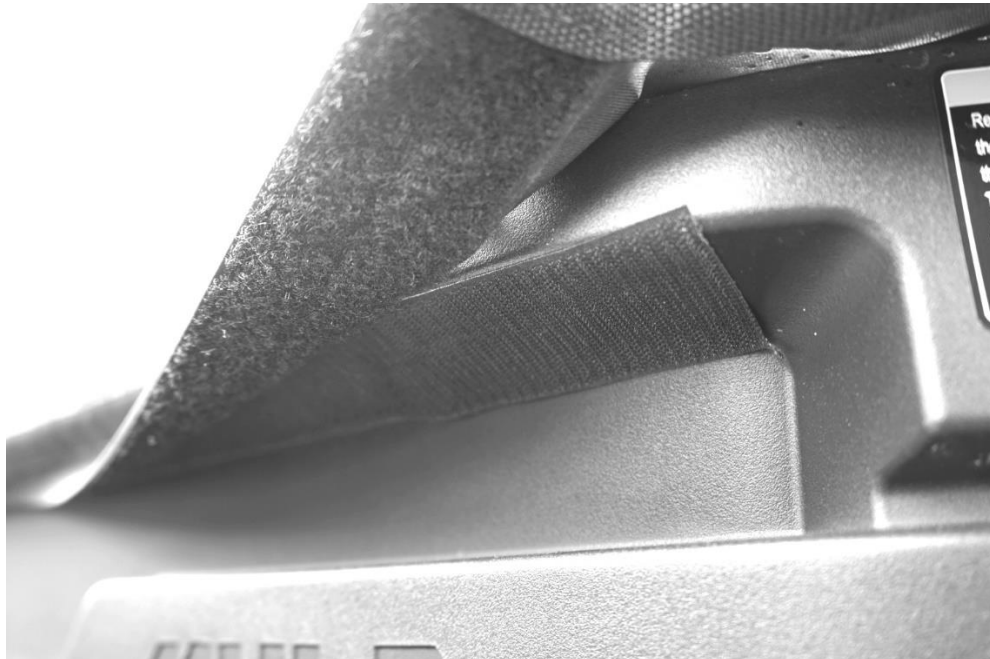



Cleaning and Storage Recommendations:

1. Before removing the Over Armour Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.