

# Over Armour Offroad

2515 Bypass Road Flemingsburg, KY 41041  
606-845-2227

## Instructions for Installation and Care of

### Kawasaki Teryx 4

### Full Cab Fits Poly Windshield


KAW-TERYX4-FC05


**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**

1. Be sure to read these instructions thoroughly before opening and installing the Teryx 4 Full Cab with Lexan Windshield. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:


Adhesive Velcro Hook Strips:	28 each-----3”
“ “ “ “	4 each-----5”
“ “ “ “	6 each-----6”
“ “ “ “	3 each -----10”
“ “ “ “	2 each-----40”
Snap Screw Studs	18 each
Webbing Straps with Velcro	4 each
Webbing Straps with Grommets	2 each

4. The Mammoth Designs Full Cab with Aero-Vent Lexan Windshield is made of 4 separate panels and a Lexan windshield. You have two side panels that each has two zippered doors for the front and rear seats, a rear window panel and a top cap to cover the top.
5. Begin by installing the side door panels by using the double-sided Velcro strips sewn around the edges to attach the panel to the vehicles roll cage. To use the double-sided Velcro strips you must first wrap the roll cage with a 3” piece of adhesive Velcro supplied with the cab. Then you wrap the double-sided Velcro strip around the roll cage and the adhesive strip to hold the door in place securely. The photos below show how this should look.

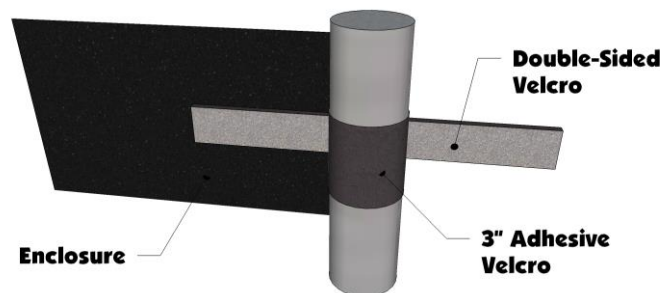

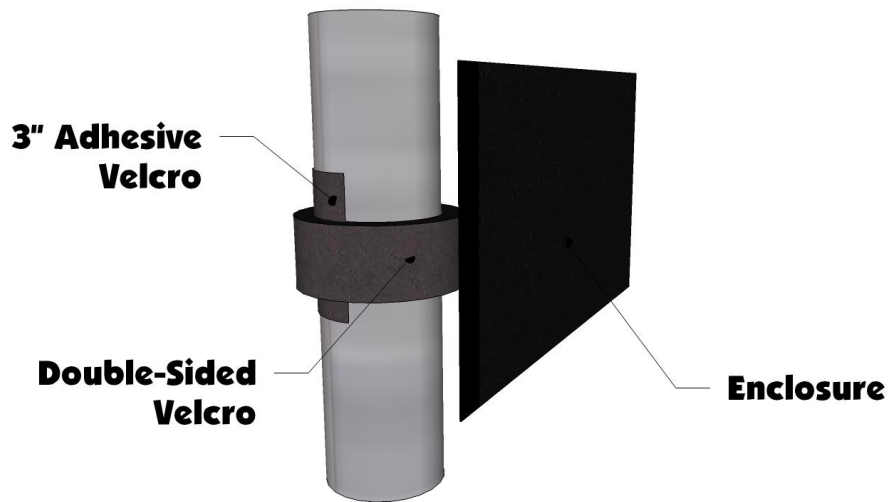

6. To hang the side panels begin by holding the sides up and marking the locations double-sided strips on the roll cage across the top of the panel. Then lower the panel and adhere the 3" adhesive strips to the inside of the roll bars. Next raise the panel back to the roll cage and wrap the double-sided strips around the roll cage where the adhesive strips were placed. Now continue around the entire door panel placing the adhesive strips and wrapping the double-sided strips to secure the panels. See Photo Below.

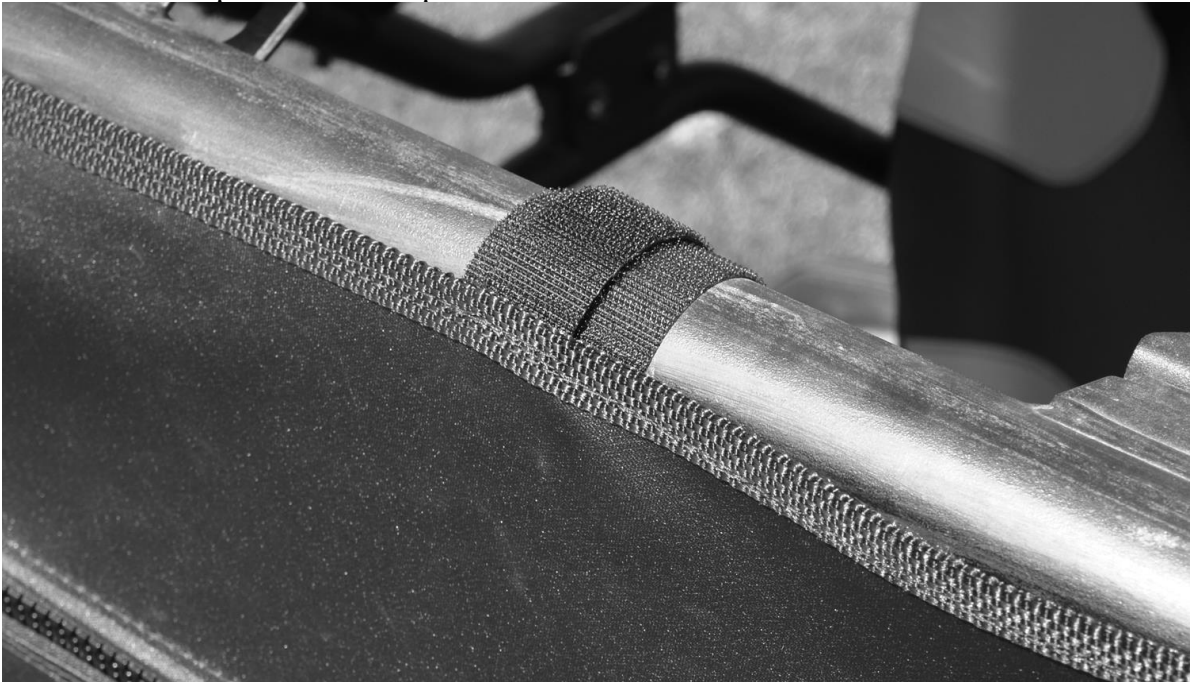

7. Next step to install the side door panels is to install the snaps along the bottom of the door panels to the plastic doors on the Teryx 4. As you will see there are four snaps that attach to the outside of the vehicle and six snaps that attach to the inside of the plastic doors.  
**INSTALL TIP: The best method for properly installing the snaps is to first place the screw stud into the socket on the door panel. Then pull the door tight to where it should be and push the end of the screw stud into the plastic hard enough to leave a mark. Then pull the screw stud out of the socket and screw it into the plastic where the mark was left. We recommend a screw driver and not a power driver so as to not strip out the plastic. See Photos below:**



8. To install the rear window panel you should begin by installing the three double-sided Velcro strips down both sides which will go under the door panels along the back edges. Make sure to line up the grommet holes along each edge so that they are close to being side by side.
9. Once the Rear window Panel is in place take the 100" cords and lace the panel to the Side Door Panels as you would a pair of shoes starting at the top. Tie the two ends together securely at the bottom cutting off any excess if needed. Be sure to melt the ends with a lighter to prevent fraying if you trim the cording. See Photo Below




10. The bottom of the Rear Window Panel has four pieces of Velcro sewn to the outside that will attach to the inside of the vehicle behind the rear seats. Remove the rear seats and affix a 4" adhesive Velcro strip to match up with Velcro sewn to the rear window panel, attach the two together and replace the rear seats. See Photo Below:



11. Next step is to install the Aero-Vent Lexan Windshield as per the instructions provided.
12. Once the windshield is in place install the top cap to finish off the cab. What you will need is two of the straps with grommet holes and two with double-sided strips sewn to the end. Attach the front using the grommet straps that go on the bottom windshield clamp as shown in photo below.



13. Next run the strap up and through the ladder lock buckle as shown in the photo below.

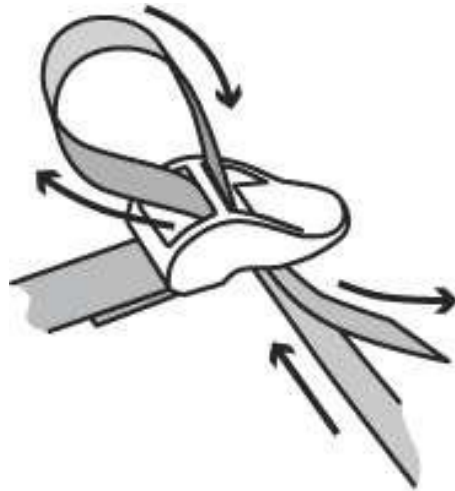

14. Now move to the rear of the vehicle and install the straps with Velcro to the roll cage between the door panel and the rear window panel. Run the strap out between the two panels as shown in the photo below. Be sure to use the 6" adhesive Velcro strip and wrap it completely around the bar for maximum holding strength.



15. Run the strap up and through the ladder lack buckle as you did with the front and pull tight. Now you must make sure that the top is properly centered and pulled tight over the top. Make sure that the top is lined up so that the snap down the middle will snap to the door panel.

16. Finally take the bent Lexan brace and attach it to the top of the windshield so that the front of the top cap is sandwiched between the two. This will seal the top from wind and rain. See photo below:



#### Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

## Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.**

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

## Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!  
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad  
[www.overarmouroffroad.com](http://www.overarmouroffroad.com)