

# Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041  
606-845-7439

## Instructions for Installation and Care of Kubota RTV1140 Full Cab Enclosure With Aero-vent Lexan Windshield

**Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.**


1. Be sure to read these instructions thoroughly before unrolling and installing the RTV1140 Full Cab Enclosure. The installation is best done when the temperature is 65 degrees F. or warmer. This is because the adhesive Velcro works best when warm, if the cab must be installed outdoors in the cold be sure to warm the Velcro strips before installing.
2. Carefully unroll the Cab Enclosure on a large flat surface that is clean and free of dirt, preferably on grass lawn.
3. Check over the parts included in the carton with the parts list shown below:

Velcro Hook strips:

“ “	12 each	3” long
“ “	2 each	10” long
“ “	2 each	12” long
Snap studs	38 each (2 extra)	
Cab Enclosure	1 each	

4. The Cab enclosure will be in 5 separate pieces when removed from the boxes, Lexan Windshield, Top, 2 side door panels, and a rear window. To begin, loosely drape the Top over the top of the RTV1140 roll cage.
5. The order that you will install the cab is as follows. First install the top, this involves attaching the Velcro straps around the top and the tabs down the front of the cab. Next install the Lexan windshield as laid out in the installation instructions for that. Then zip on the rear window and the side panels and install the Velcro strips for the two pieces down the back of the door panels then install the snaps across the bottom of the doors. Of course this is the simplified directions the in depth instruction are as follows.
6. Working your way to the rear of the roll cage fit the Cab into position. You will now need to wrap the bars with the 6” adhesive hook strips at each corner of the rear of the top. You can line them up by seeing where the rear visor piece fits the roll cage and then wrap the bar with one of the supplied 6” adhesive Velcro strips.
7. Firmly grasp the rear corners of the windshield/top and pull them down to the Velcro. Once you have brought the two pieces of Velcro together you will first wrap one side of the double-sided Velcro around the bar and then wrap the other side around, overlapping itself and creating a strong and secure hold.
8. At this point you need to have help from a friend and with each of you pulling down on either side of the front of the cab, you need to mark and adhere the corresponding adhesive Velcro strips on the roll-cage. Once this is done the top should now be pulled tight across the length of the ROPS. Next locate the double-sided Velcro strips positioned in the middle of the top and

repeat the same process as the rear of the top. Be certain to clean the surfaces before applying the adhesive Hook strips!

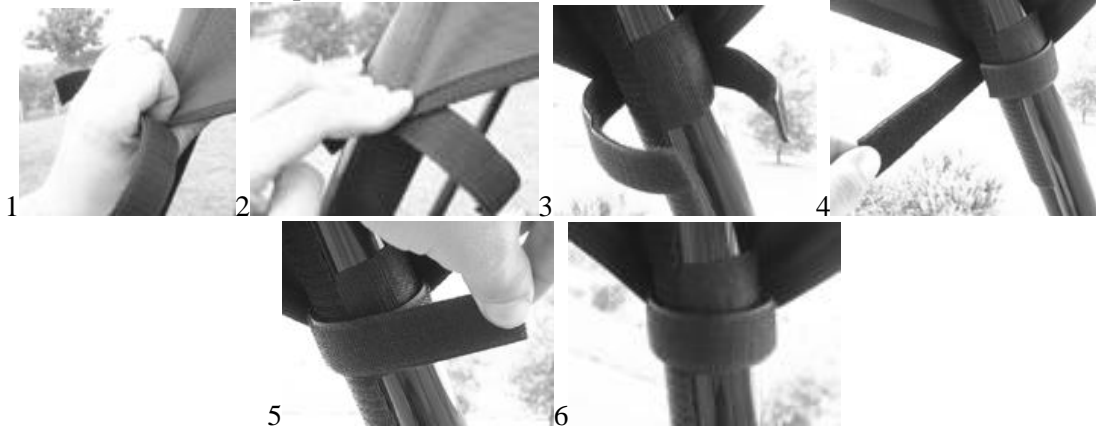

9. Now it time to begin installation of the Lexan Windshield. See the instructions included with the windshield.
10. Once the windshield/top is secure move to the rear and zip on the rear window across the top.
11. Once the windshield/top and rear window are in place and secured take the side door panels and zip them on starting with the top two main zippers. Before zipping the door panels to the rear window attach the two Velcro tabs down the rear of the door panel. Now zip the door panel to the rear window
12. Now install the snap studs onto the vehicle to match up with the snaps on the cab. It is much easier to mark the snap locations with a china marker or similar grease pencil. Then install the stud snaps to the Mule using only a #2 Phillips screwdriver.
13. To open and stow the front doors, move the zipper fully rearward then begin to form a vertical roll with the door by rolling it inward from the front edge toward the rear of the door. Secure in place using the two hook and loop straps provided. Try to form a roll approximately 2" in diameter to assure that the door will not stick out very far while stowed.

#### Cleaning and Storage Recommendations:

1. Before removing the Over Armour Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag (I recommend a Flannel or Micro Fiber Cloth) or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.



## Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

**All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.**

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

## Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad

[www.overarmouroffroad.com](http://www.overarmouroffroad.com)