

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of

Kubota RTV XG850

Soft Door Kit

KU-RTVXG850-SDK01

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Kubota RTV XG850 soft door kit. The installation is best done when the temperature is 70 degrees F or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather, store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check the parts included in the carton with the parts list shown below:

Included Parts:

1" Adhesive Hook Velcro	2 each -----7"
1" Adhesive Hook Velcro	2 each -----13"
2" Adhesive Hook Velcro	20 each -----3"
2" Adhesive Hook Velcro	2 each -----4"
2" Adhesive Hook Velcro	2 each -----8"
Metal Hinge Bracket	2pcs
Metal D-Ring Bracket	2pcs
¼-20 x 1.75" Bolts	4pcs
1/4in Fender Washers	4pcs
¼-20 Lock Nuts	4pcs
Metal Clasps	4pcs

If any parts are damaged or missing please contact customer service at (606) 845-7439.



Note: Loosening or even removing a previously installed windshield or top will make installation much easier.

Tools Needed for Installation:

1. Phillips Screwdriver
2. 7/16" wrench or socket
3. ¼" Drill bit and Drill
4. 12mm wrench or socket.

Soft Doors

1. Begin by holding the door up to the frame and attach it using the double-sided Velcro strips sewn onto the edge of the door. Clean the area near each of the double-sided Velcro straps. At each of the double-sided strips take one of the 3" adhesive Velcro strips and adhere it to the inside of the frame. Then wrap the double-sided strip around it so that the adhesive strip holds it firmly in place. The following diagrams shows how it should look.

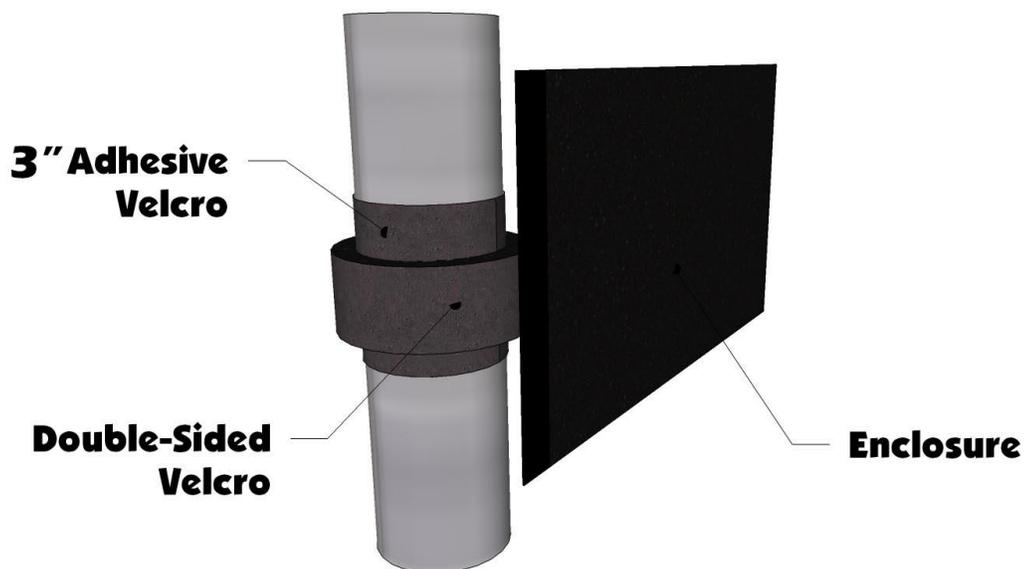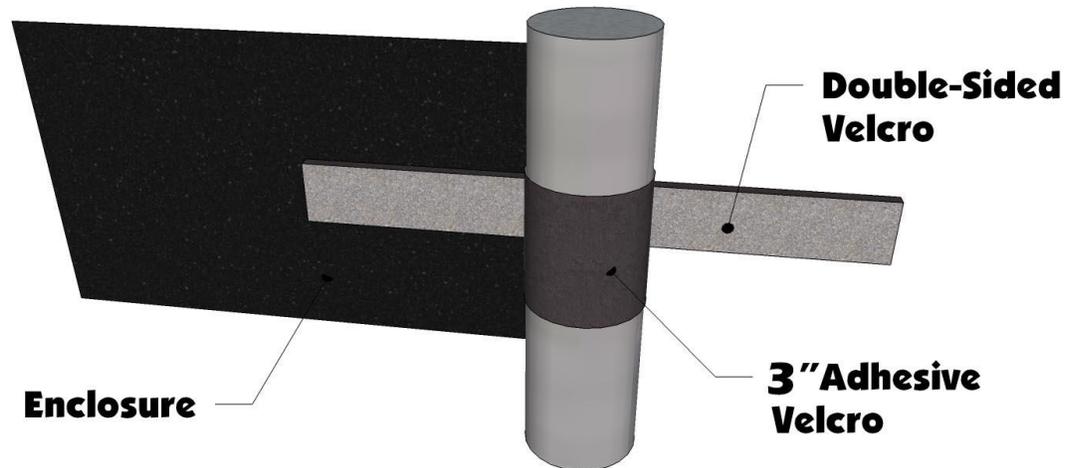

2. The following image shows the approximate location of each of the 10, 3in Velcro strips that need to be placed on the roll cage. Extras are provided in case some are placed incorrectly during the initial placement.



3. Place the 2in x 7in adhesive backed Velcro strip in the top, front corner of the roll cage. Align the edge of the Velcro with the edge of the steel reinforcing plate.




4. Attach the 3 pieces (2in, 4in, and 12in) of 1in adhesive Velcro to the UTV following the profile of the UTV and the bottom edge of the door.



5. Remove the center door hinge bolt and mount the metal hinge bracket. Be sure to tighten bolt completely.



6. Hold the plate from the D-ring bracket on the door approximately 1in from the bottom of the recessed latch and 3in from the edge of the door and mark the position of both holes. This position is important because if the plate is too close to the edge of the door the mounting bolts will hit the door jam and the door will not close properly. Make sure the door is open and use a $\frac{1}{4}$ drill bit to drill the mounting holes for the plate.

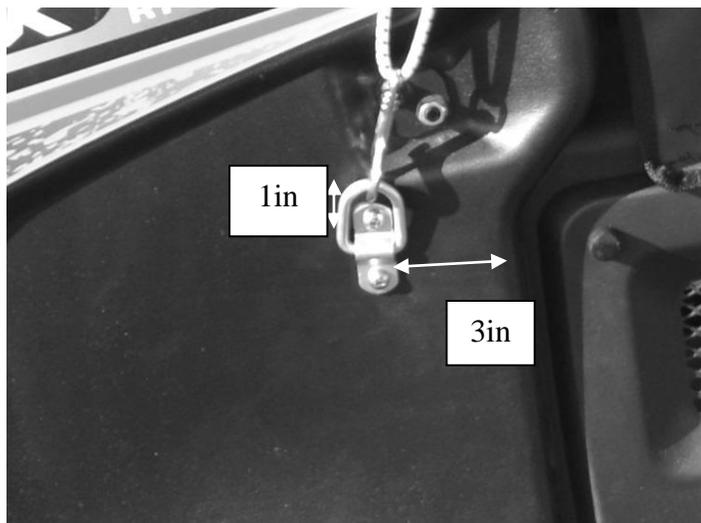

7. Attach the D-ring and mounting plate using the provided $\frac{1}{4}$ -20 x 1.75in bolts, fender washers and lock nuts. Tighten completely.

8. Use the provided clasps to secure the bungee cord along the bottom edge of the door to the front hinge plate and rear D-ring.



9. Check proper fitment around the perimeter of the door, and make any adjustments necessary. The door should have some slack to allow for proper function of the zipper. If the material is pulled too tight the zipper will catch leading to difficulty when opening or closing the door.

Cleaning and Storage Recommendations:

1. Before removing the Over Armour Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.