

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

Instructions for Installation and Care of

Kymco UXV 450

Full Cab with Aero-Vent Windshield

KY-450-FC04

Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Kymco UXV450 Full Cab with Aero-Vent Windshield. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

Adhesive Velcro Hook Strips:	16 each-----3”
“ “ “ “	4 each-----6”
“ “ “ “	2 each-----8”
“ “ “ “	2 each-----10”
“ “ “ “	2 each-----25”
Webbing strap with Velcro	2 each
Webbing strap w/ Loop	2 each
Webbing strap w/ Grommet	2 each
Metal Plate w/ adhesive	2 each
Screw Snaps	9 each (1 extra)
Cab Enclosure	4 panels



Order of Assembly

1. Windshield
2. Doors
3. Rear Window
4. Top Cap

POLYCARBONATE WINDSHIELD

Install the Windshield as shown in the instructions included with it.

4. The front and top of the doors are held in place by Velcro straps on each side. You need to prepare the roll cage with one of the 3" adhesive Velcro strips first and then wrap the double-sided Velcro around the adhesive strip to provide a secure hold. Below are photos showing how these should look.

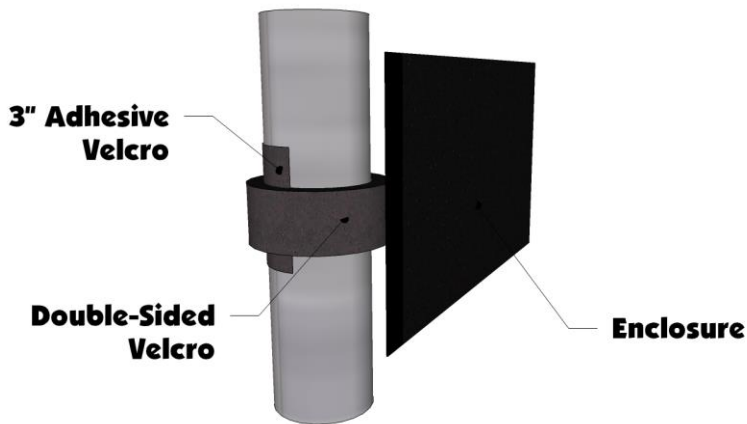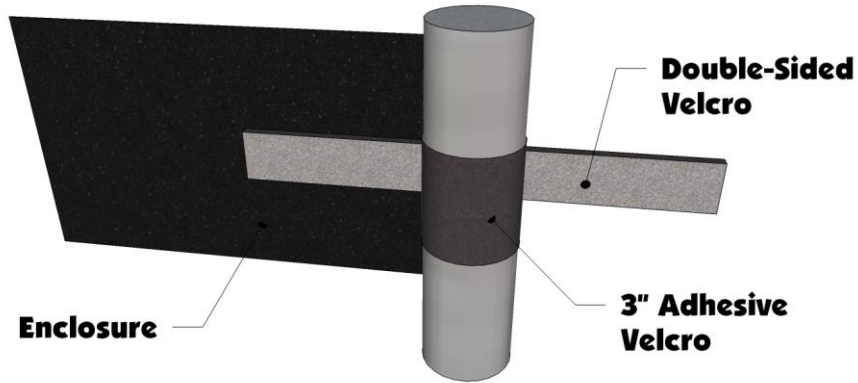

Doors

1. Begin by hanging the doors by the double-sided along the top as shown above. Just put the door up to the frame so that it fits just to the outside of the bars. Then place the 3" Velcro on the inside of the frame anywhere a double-sided strip is sewn to the door. See photos below.



2. Down the rear of the Door you have two velcro tabs that will attach to the roll cage. Match up the adhesive velcro strips to the tabs and attach them to the roll cage as shown in the photos below.



3. Next thing is to install the snaps that hold the bottom of the door. The rear bottom of the door snaps into the side plastic and should be installed first. Then install the snap at the bottom of the front section of the door as shown in the picture below. **INSTALL TIP: place the screw stud in the socket on the door and then pull the fabric to where it goes and push the end of the screw into the plastic to mark it.**



4. Last things on the door is a small piece of velcro on the front. Then place the Metal bar on the vehicle so that it matches up with the magnets along the bottom of the door. See photo below



Rear Window

1. The rear window now attaches to the the roll cage down the sides. The tabs from the doors have velcro on both sides and should hold the rear window in place.



TOP CAP

- a. If you have a Lexan windshield already installed on your Kymco you can do one of two things. You may use the straps with Velcro sewn to one end and wrap the roll cage under the windshield with the 3” adhesive Velcro strips. Then wrap the double sided Velcro sewn to the end of the strap around the adhesive Velcro. If you choose you may also use a hole in the windshield and bolt the strap with the grommet directly to the windshield.

- b.** Now place the top over the entire vehicle, the front of the top is identified by the sides not being as steeply curved, and begin by lacing the front straps through the ladder lock buckles sewn to the front corners of the top.
- c.** Now take two of the straps that are sewn with loops and wrap them around the roll cage just under the seat belt end. See photo below.



- d.** Now run those straps up and through the ladder lock buckles sewn to the rear of the top.
- e.** You now need to tighten and loosen the strap of the top so that it is centered correctly and should cover the holes across the top of the windshield.
- f.** If you were installing the Top by itself you would use the two remaining straps with double-sided Velcro to attach the front. You may need to cut the straps once fitted, do not cut off too much as you have nothing to hold on to and pull it tight the next time you go to install it. It is recommended to leave about 6-8" hanging from the buckles.

Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Over Armour Offroad that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly as **it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Over Armour Offroad please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Over Armour Offroad without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Over Armour Offroads many distributors', you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of Over Armour Offroad Cab Enclosures, Tops &/or Windshields!
Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.

Thank you,

Over Armour Offroad
www.overarmouroffroad.com