

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

Instructions for Installation and Care of

Massimo MSU500

Soft Rear Window


MA-MSU500-RW01


Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Massimo MSU500 Soft Rear Window. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

Adhesive Velcro Hook Strips:	4 each-----3"
“ “ “ “	1 each-----40"
70" Para Cord	2 each
Snap Screw Studs	4 each
Cab Enclosure	1 panels

4. The sides of the Rear Window are held in place by two Velcro straps on each side. You need to wrap the roll cage with one of the 3" adhesive Velcro strips first and then wrap the double-sided Velcro around the adhesive strip to provide a secure hold. Below are photos showing how these should look.

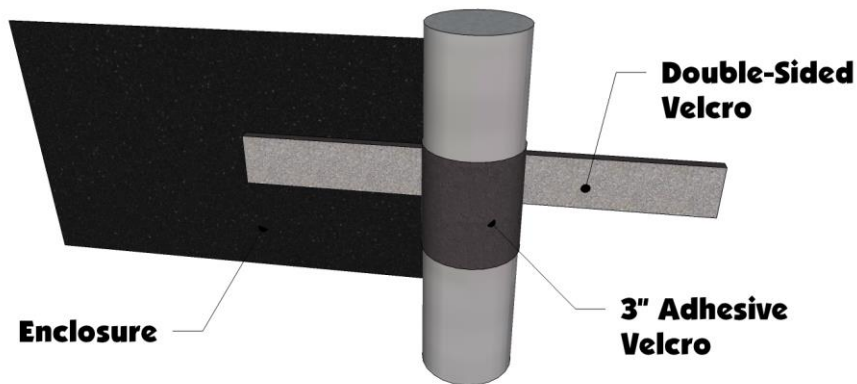

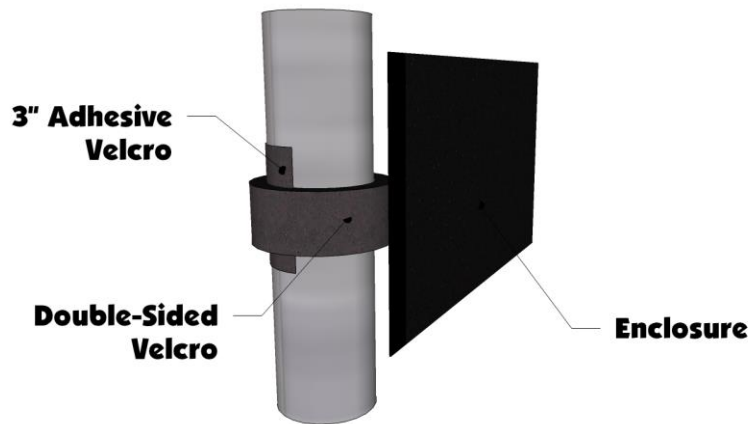

5. Take the 40" adhesive Velcro strip and install it along the top of the top bar running from side to side. Please see photo below for reference.



6. Now install Velcro straps sewn to the sided at the top and bottom. You may need to remove the strap on the door to get the adhesive Velcro in place. See Photos below.





7. Then Snap the bottom of the Rear Window to the plastic panels behind the seats. Raise the bed and screw the snap studs into the plastic where the snaps on the Rear Window line up at. Snap the panel in place and lower the bed.
8. Now take the two 70" cords and lace the Rear Window to the roll cage. Tie the end of the cord to the top hole and begin to wrap the cord around the bar and back through the top hole. Then wrap the bar with the cord moving down the bar tying the end off at the bottom. Be sure to melt the ends to prevent fraying. The photo below show how this should look.



Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.