

Over Armour Offroad

2515 Bypass Rd. Flemingsburg, KY 41041

606-845-7439

Instructions for Installation and Care of

Massimo MSU500

Soft Door Kit

MA-MSU500-SDK01


Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.


1. Be sure to read these instructions thoroughly before opening and installing the Massimo MSU500 Soft Door Kit. The installation is best done when the temperature is 70 degrees F. or warmer. The temperature affects the adhesive Velcro, if conditions prevent installing in warmer weather it helps to store the adhesive Velcro at room temperature prior to installation.
2. Carefully open the carton and remove the enclosure on a large flat surface that is clean and free of dirt.
3. Check over the parts included in the carton with the parts list shown below:

Adhesive Velcro Hook Strips: 28 each-----3"

Cab Enclosure 2 panels

4. The majority of the door is held in place by double-sided Velcro strips sewn perpendicular to the edges. You need to wrap the roll cage with one of the 6" adhesive Velcro strips first and then wrap the double-sided Velcro around the adhesive strip to provide a secure hold. Below are photos showing how these should look.

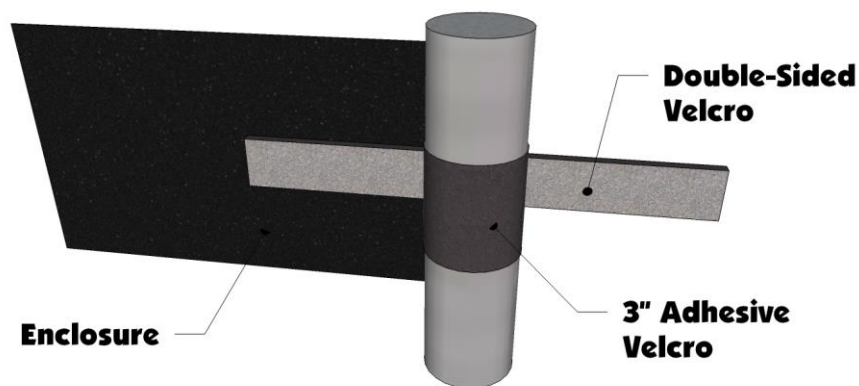


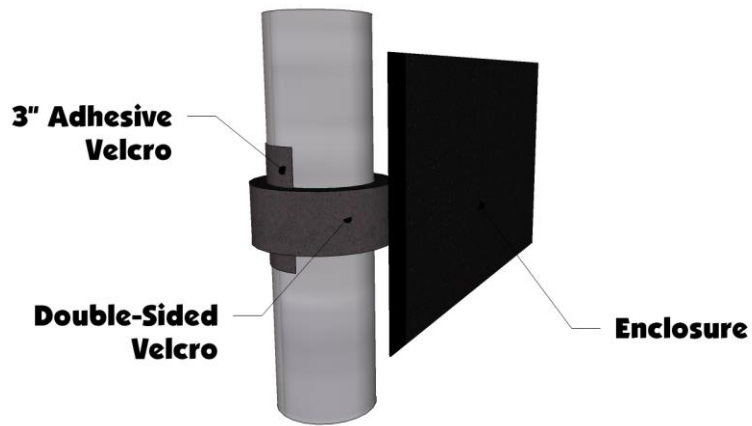

5. Begin by placing 3" adhesive Velcro strips on the roll cage across the top of the door as shown in the picture below.



6. Now work your way down the front of the door as shown below.

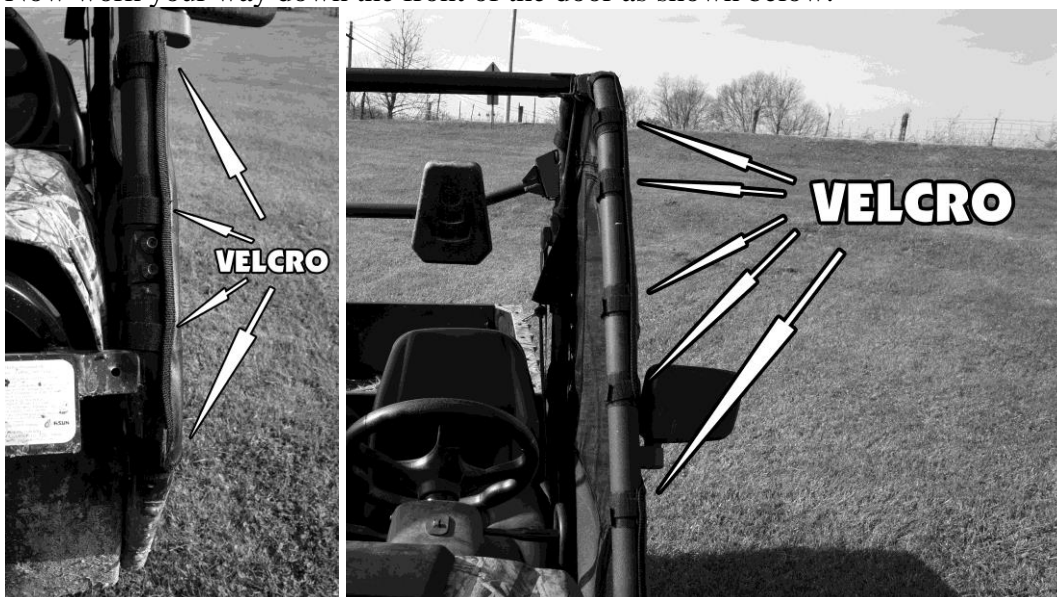

7. Then down the back of the door as shown below.



8. Once all of the Velcro is in place the bottom of the door should just fall into place with the magnets. The front of the door goes to the inside of the factory half door and the rear portion to the outside with the magnets going down the roll cage. See photo below.



Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.