

Mammoth Designs

5842 Morehead Rd. Flemingsburg, KY 41041

606-845-2227

Instructions for Installation and Care of 09' Polaris Ranger Windshield/Top Combo


Notice: Do not smoke inside the cab or expose the enclosure to direct flames. Cab is Flammable.

1. Be sure to read these instructions thoroughly before opening and installing the Polaris Ranger Cab Enclosure. The installation is best done when the temperature is 70 degrees F. or warmer. This is to allow the Velcro to stick to the roll cage better, if you must install outside in the cold it will help to warm the Velcro inside at room temp. until ready to install.
2. Carefully open the carton and remove the rolled up Cab Enclosure on a large flat surface that is clean and free of dirt or other material that may soil or scratch the windows of the Cab.
3. It will help to unhook the hood prior to installing the cab enclosure
4. Check over the parts included in the carton with the parts list shown below:

Velcro Hook strips:	2 each	4" long
“ “	4 each	10" long
“ “	2 each	6" long
Cab Enclosure	1 each	
5. Loosely drape the Cab Enclosure over the Ranger roll cage. Next take the three straps on the nose and attach them to the front of the Ranger. The middle strap is longer and will go down and wrap around the bar that is in the hole along the bottom portion of the bumper. The two side straps wrap around the top bumper bar on each side. If you have a winch, it may interfere with the center strap, in this case you may not use it, the side straps are enough to hold the nose. The photo below will help show you where to place the straps.



6. Now pull the straps tight so that the edge of the nose lines up with the top of the front panel that has Polaris embossed in it. This is to ensure that the cab is in its proper location from front to back. Once this is done you will now loosen these straps and leave it be until the final step.
7. Working your way to the rear of the roll cage, pull the rear corners down to determine the correct positions to place the 6" adhesive Velcro strips around the roll bars. The photos below show the correct way to attach the double-sided Velcro.

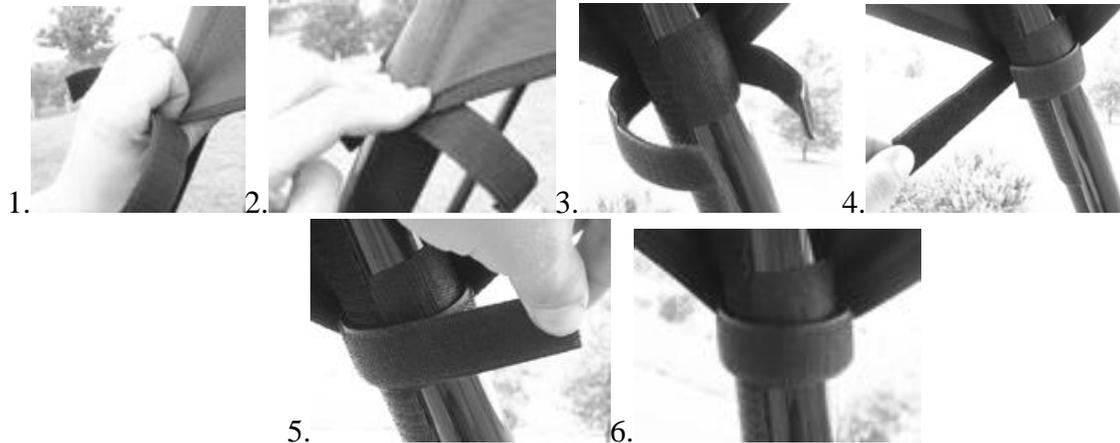

8. Note the position and install two 10" and one 4" hook and loop strips on the left side of the roll cage for the front window. Be certain to clean the surfaces before applying the adhesive hook strips! Attach these Velcro strips and pull the windshield tight to the sides and affix the Velcro tabs to the adhesive strips. Now retighten the straps on the front of the nose and you are finished, Enjoy!

Cleaning and Storage Recommendations:

1. Before removing the Mammoth Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Mammoth Designs that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.