



## **POLARIS RANGER XP PROFIT** **FULL/HALF DOOR KIT**

Remove 2 Torx T-40 bolts from factory net clip (See Fig. 1)

Remove 2 Torx T-40 bolts from the leading edge inner plastic fender (See Fig. 2)

Locate driver hinge bracket (labeled). Hold up to machine and replace the 2 Torx T-40 leading inner edge plastic fender bolts into factory holes and tabs (See Fig. 3)

Install supplied hardware to fasten top 2 tab locations on hinge bracket (factory net clip area)

Slide driver door onto hinge pins and align door to your machine (keep these areas well lubed with Anti Seize or grease ect..) close the door to desired fitment. Tighten all locations.

Locate latch receiver pin.

Unbolt split collar and mount onto factory door opening bar (See Fig 4). With door closed, locate the best position for the receiver pin (make slight adjustments to achieve the perfect latch) NOTE: 2017 models the receiver pin mounts on the lower bar with the rod facing up ward.

Locate driver upper door frame.

Slide frame onto the 3 lower door pins. (keep these areas well lubed with Anti Seize or grease ect..)

Snap top fabric window around the frame with a nice tight even fit.



Fig 1

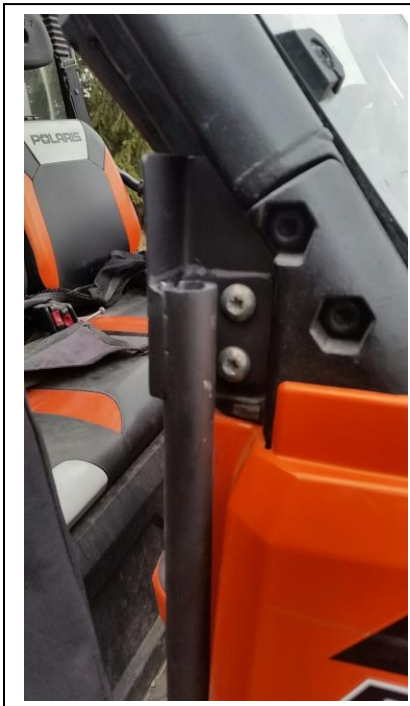


Fig 3



Fig 4 Note for 2017-18 Model  
Striker mounts on lower bar  
Facing Upward