



**Installation Instructions for Polaris RzR XP 1000
iMPact Front A-Arm Boot Guards**

Warnings and Product Liability Disclaimer

This product is intended to be used as a cosmetic accessory under normal equipment operation and should not be depended upon or used as a safety device. Manufacturer assumes no liability for personal injury or equipment damage as the result of use or installation of this accessory. User assumes all risk. User should carefully read all instructions prior to installation.


- A. Remove wheels and tires prior to beginning for easier install. Always secure vehicle with safety stands.

For Front Guards


- B. Locate Trail Armor's passenger's side iMPact a-arm guard (XP1K-PF). Hold a-arm guard into place. Insert two supplied $\frac{1}{4}$ - 20 x $1\frac{3}{4}$ " flat head socket bolts up through the two outer holes of the guard into the pre-drilled holes in the a-arm cross brace. Start two supplied $\frac{1}{4}$ - 20 nylock nuts on installed bolt ends. See picture 1 and 2.
- C. After $\frac{1}{4}$ - 20 x $1\frac{3}{4}$ " bolts and nuts are installed, place a-arm strap (XP1K) in between the a-arm tubes and align the two holes in the strap with the two pre-drilled holes in the a-arm guard. Once aligned, insert two supplied $\frac{1}{4}$ - 20 x $2\frac{1}{2}$ " flat head socket bolts up through the a-arm into the plastic strap. Start $\frac{1}{4}$ - 20 nylock nuts on bolt ends. Be sure a-arm guard is installed properly before tightening all fasteners. See pictures 3 and 4. Tighten all fasteners. Repeat other side.



Picture 1

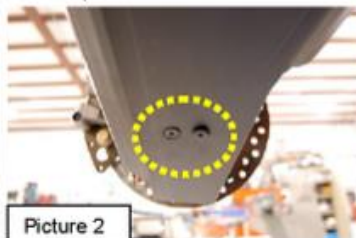

Picture 2

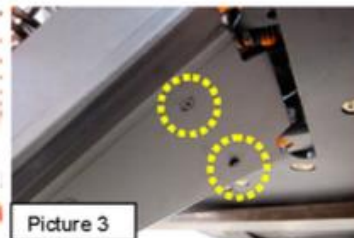

Picture 3



Picture 4



Contact Trail Armor at 662-462-4222