



SSV WORKS, 201 N. Rice Ave Unit A, Oxnard, CA 93030
 www.SSVworks.com | Phone: 818-991-1778 | Fax: 866-293-6751

WP3-WC204A

Arctic Cat Wildcat Trail / Sport

4 Speaker Overhead

WARRANTY INFORMATION:

All SSV Works enclosures are covered by a limited lifetime warranty against defects in material or workmanship. All SSV Works Electronics are covered by a limited 1 year warranty against defects in material or workmanship. All SSV Works Speakers are covered by a limited 1 year warranty against defects in material or workmanship. Labor for replacement of defective components is not covered. Contact SSV Works for further warranty information.



Please read and understand these instructions completely before installation to avoid possible injury, or damage to the accessory or vehicle.

TOOLS NEEDED FOR INSTALLATION

- Wire Crimpers
- Wrench for Battery Terminal
- Wire Strippers
- #3 Phillips Screwdriver

PARTS LIST

- | | |
|-----------------------------------|---------------------------------|
| 1. WP-WC204 x 1 | 5. Curved Mounting Brackets x 2 |
| 2. M6 x 1.0 Screws x 16 | 6. Fuse Holder with Fuse |
| 3. M6 Washers x 16 | 7. Crimp on ring terminal |
| 4. Straight Mounting Brackets x 2 | 8. Zip Ties |

PARTS LIST IMAGES



1. WP-WC204




2. M6 x 1.0 Screws x 16



3. M6 Washers x 16



4. Mounting Brackets x 2

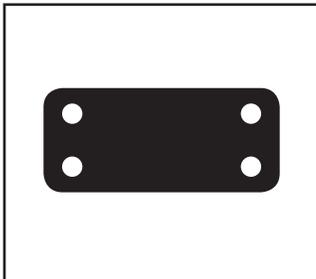

5. Mounting Brackets x 2



6. Fuse Holder with Fuse



7. Crimp on ring terminal



8. Zip Ties

INSTALLATION NOTES

To make wiring easier, locate the battery in the vehicle before beginning the installation. The use of a thread locker is recommended on all screws to prevent loosening due to vibration.

INSTALLATION INSTRUCTIONS



A. With one person on either side of the vehicle place the WP3-WC204A into location from the underside of the cage, place the back into position first, and then swing the front up into place.



B. While holding the enclosure securely to the underside of the cage, loosely install the 5 brackets using the screws provided, attaching the front brackets first will help support the enclosure while attaching the other brackets




C. Once the enclosure is in position, tighten the brackets using the #3 screwdriver. NOTE: After all brackets are tightened, it may be necessary to go back and re-adjust the brackets to ensure the enclosure is properly secured.




D. Using the zip ties provided, route the Power/Ground loom to the battery location away from any moving parts or sharp metal. NOTE: The 4 pin long cable is an audio output for adding an additional amplifier and speakers.


WIRING INSTRUCTIONS

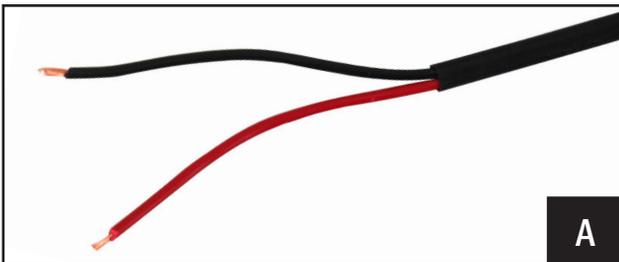

A. Cut the power/ground cable to length; be sure to leave enough wire at the battery location to wire to the battery, strip back approximately 4 inches of the black tubing to expose the red/black wires inside. Strip back 1/4"-1/2" of wire to make your connections.

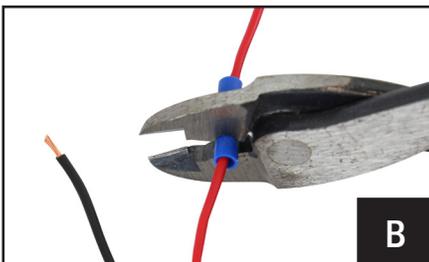

B. Crimp the supplied fuse holder onto the end of the RED wire and attach to the battery "+" terminal.

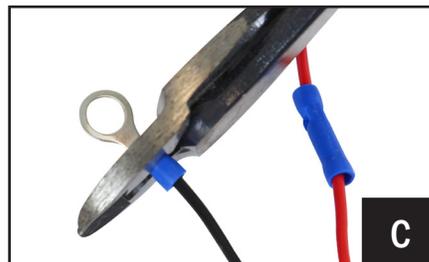

C. Crimp the supplied ring terminal to the BLACK wire and attach to the battery "-" terminal.



WP3-WC204A