




417-955-1467 www.kwikperf.com

How to determine which Chevy LS balancer you have

Method		Corvette, CTS-V, G8	LS1 Camaro, Firebird, GTO	Truck, SUV LS3/L99 Camaro
A	Face of timing cover to front edge of balancer	2-1/8"	2-15/16"	3-11/16"
B	Face of balancer bolt to front edge of balancer	3/4"	1-9/16"	2-5/16"
C	Face of engine block to front edge of balancer	4-1/8"	4-15/16"	5-11/16"

Method A

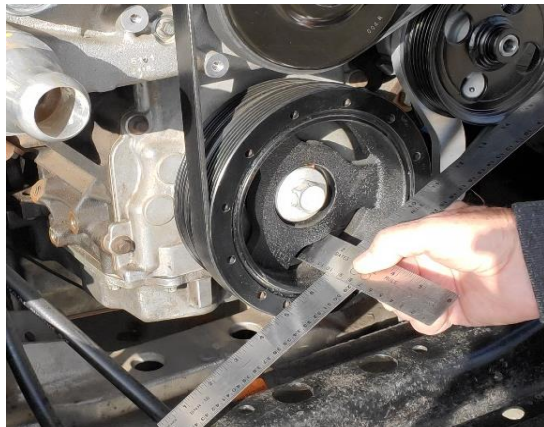

Method B



Method C



Note: These dimensions are for naturally aspirated engines. Supercharged engines often have an additional set of grooves which places the front edge of the balancer further forward.