

WHITEHALL MAILBOX WALL STYLE MOUNTING INSTRUCTIONS

A - Wall Mailbox - 1

B - Screws - 2

- 1) Position the mail box (A) on desired location with lid open.
(to assure clearance when lid is open).
- 2) Mark the wall at the top, center of the mailbox door (B) using a piece of tape. *(See Figure 1)*
- 3) Measure down 6.75 inches and place a mark on the wall.
(use a level to make sure the mark is at the center line of the mailbox located in step 2)
- 4) Draw a horizontal line through the mark on the wall, again using a level to ensure a straight line. Measuring out 5 inches on both sides of center mark, place pilot hole marks on level line with center mark.
(See Figure 2)
- 6) Drill pilot holes for each for each screw location and insert masonry anchors if needed.
- 5) Install the screws (B) included with this mailbox in each hole location leaving approximately 1/2" of the end of each screw head exposed.
- 6) Align the large openings of the keyholes on the back panel of the mailbox over the exposed screw heads and lower the mailbox to secure the screws onto the keyhole slots.

Figure 1


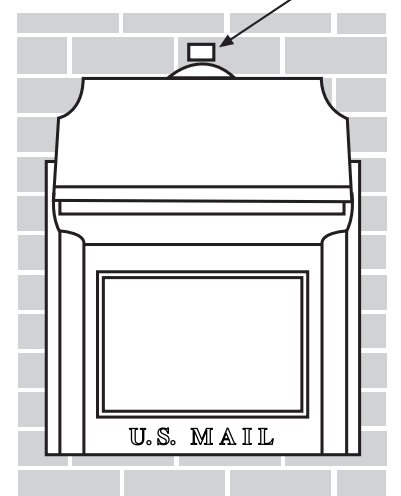


Figure 2

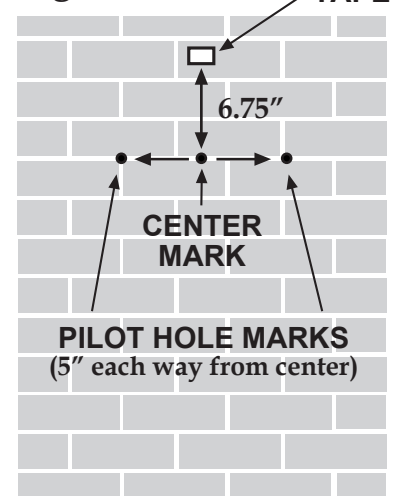

Cleaning Instructions:

Whitehall Mailboxes and Accessories are made of cast aluminum with tough finishes to withstand exposure to the elements. To clean your Whitehall Mailbox, use a non-abrasive detergent and water with a cloth, sponge, or soft brush. Polishing cannot brighten the bronze color finish. The painted finish will weather naturally and maintain its beauty for many years without special attention.