


# Direct Burial Installation Instructions

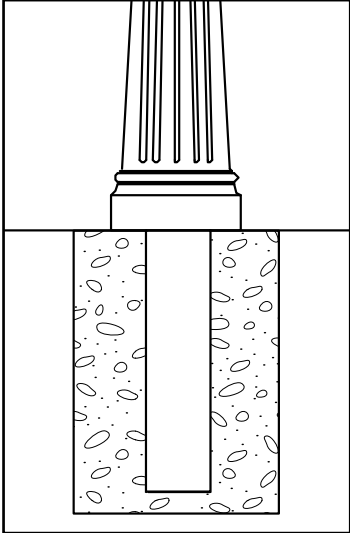

## Direct Burial Base Extension

**Step 1:** Take the sign post and carefully lay it down on the ground. Loosen the setscrews in the top of the decorative base (Figure 6). Being careful not to scratch the pole, gently and carefully slide the decorative base up the pole until you have around 12" to 16" of round pole extending below the decorative base. This pole extension is what you will put into the hole. Once you have the correct decorative base adjustment, snug the Allen set screw(s) at the top of the base so the base will not slide up or down.

**Step 2:** Dig a hole approximately 16" deep with post hole diggers or small shovel. Install completely assembled post into hole and check for fit. For a permanent installation, mix quick set style concrete and pack it around the pole. For a temporary installation, pack dirt or gravel around the pole. Use a sledge hammer to tamp the dirt or gravel until it is firmly packed around the pole. When installing, use a spirit level on the round pole to make sure your pole is straight (forward and back, left to right). If you use concrete, temporary supports may be necessary to support the sign post until the concrete dries.