



Programming for Line Powered Speaker Phone

Note that Telco lines and some PBX systems only provide a limited amount of time to program the phone before the line tells the phone to hang-up. See the back page for a programming template and tips to assist in programming the phone in these situations.

Step 1. Plug the phone line from the phone into the phone jack

Step 2. Program Emergency Numbers


- A. Press the **red** ON/OFF key, then slide S15 to ON / Prog (See Photo)
- B. *To program first Emergency Number:*
Press 1, *, (key in the phone number),
Press the VOL Key
- C. *To program second Emergency Number:*
Press 2, *, (key in the phone number),
Press the VOL Key

Step 4. Program Auto Answer

- A. Press 8, *, (1 or 2)
(Auto Answer 1=ON, 2=OFF)

Step 5. To End Programming

- A. Slide S15 to 1 and press the **red** ON/OFF key

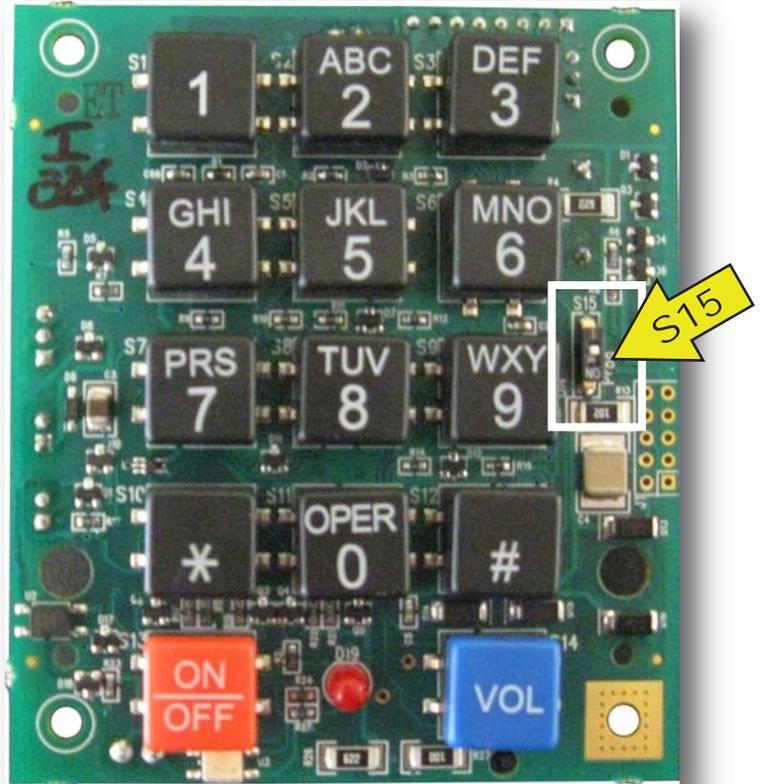



Programming for Line Powered Speaker Phone

If the phone turns off during programming, it is because many Telco lines and PBX systems provide a limited amount of time to program the phone. In these cases, it is imperative to quickly move through the phone programming. A template is offered below to assist in programming the first emergency button.

Tip 1 – To program a phone where multiple numbers or auto answer is to be programmed, follow these steps:

1. Press the red ON/OFF key, then dial a number such as your cell phone.
Answer the cell phone and do not hang-up the call.
2. Slide S15 to ON/Prog.
3. Perform all the programming steps on page 1.
4. When programming is completed, make sure to slide S15 to 1.
5. Press the ON/OFF key to hang-up the call to your cell phone.

Programming Template

1. Fill in the emergency phone number in the spaces provided in step 2.
2. Then follow the directions provided in Step 1.

Step 1. Press the red ON/OFF key, then slide S15 to ON/Prog.

Step 2. Press 1, *, _____, VOL Key

