


CW-16, OW-18 & SW-20  
**VINYL LINK MATS**


# **INSTALLATION INSTRUCTIONS**

IMPORTANT – The mat is rolled upside down for shipping

TO INSTALL PROPERLY:

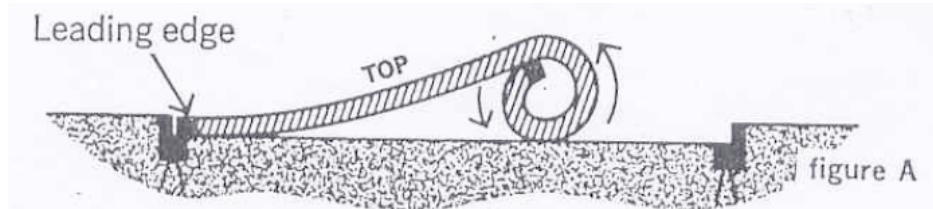


1. Unroll as shown in Figure A.

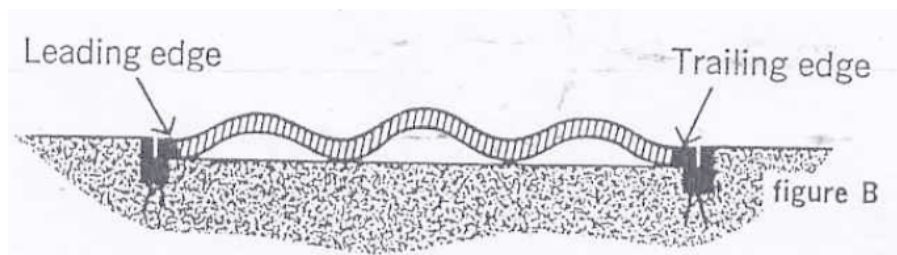

2. Place leading edge and trailing edge in recess (or in position if in a confined area) as shown in Figure B.

MAT WILL APPEAR TO BE TOO LONG AND WILL WRINKLE AS SHOWN IN FIGURE B

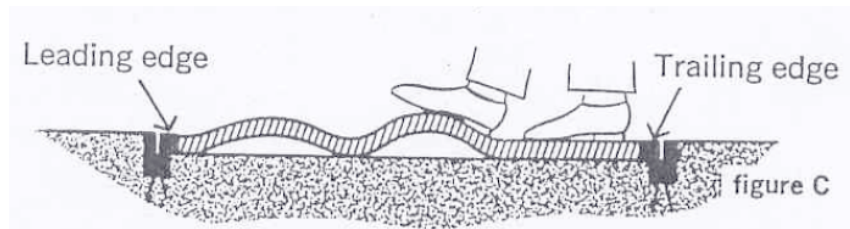

3. Slowly walk from trailing edge to leading edge to walk the wrinkles out (Figure C).

**IF MAT HAS BEVELED EDGES, FOLLOW THE SAME PROCEDURE.**

Push in nosing at the center of leading and trailing edges.

Pull out all four corners at leading and trailing edges.

Walk out all over mat to attain a rectangular shape.